Pre-Remedial Design Investigation Work Plan

I&J Waterway Site – Sediment Cleanup Unit 2

Project Number: 036-003

Prepared for:

Port of Bellingham

August 2, 2024

Prepared by:











Table of Contents

1	Intro	ductionduction	1-1									
	1.1	Purpose of the Work Plan	1-1									
	1.2	Site Description	1-2									
	1.3	Document Organization	1-2									
2	Site B	Site Background										
	2.1	Previous Environmental Investigations	2-1									
	2.2	Other Cleanup Sites	2-2									
	2.3	Site Units	2-2									
	2.4	Current Conditions	2-3									
		2.4.1 Lithology	2-3									
		2.4.2 Contaminants and Sources	2-4									
		2.4.3 Nature and Extent of Contamination	2-6									
		2.4.4 Fate and Transport Processes	2-7									
		2.4.5 Exposure Pathways and Receptors	2-7									
	2.5	SCU-2 Proposed Cleanup Action	2-8									
	2.6	Alternative Cleanup Action Evaluation	2-8									
3	Data	Gaps Analysis	3-1									
	3.1	Base Map	3-1									
	3.2	Sediment Characterization	3-1									
	3.3	Geotechnical Information	3-2									
	3.4	Hydrodynamic Information	3-2									
	3.5	Data Needed To Evaluate Alternative Cleanup Action	3-2									
4	Samp	oling and Analysis Plan	4-1									
	4.1	Base Map										
	4.2	Sediment Characterization	4-1									
		4.2.1 Surface Samples	4-1									
		4.2.2 Subsurface Samples	4-3									
	4.3	Geotechnical Information	4-5									
	4.4	Hydrodynamic Information	4-6									
	4.5	Sampling and Analysis for Evaluating Alternative Cleanup Action	າ4-6									

		4.5.1	Subsurface Sediment Characterization	4-6
		4.5.2	Geotechnical Information	4-7
	4.6	Mana	gement of Investigation Derived Waste	4-8
	4.7	Positio	oning and Navigation	4-8
5	Sched	ule		5-1
6	Refere	ences		6-1

List of Tables

Table 4-1	Summary of Sampling Stations
Table 4-2	Summary of Soil and Sediment Testing
Table 5-1	Anticipated PRDI Schedule

List of Figures

Figure 1-1	Cleanup Action
Figure 1-2	Bellingham Waterfront District Sub-Area Plan
Figure 3-1	Historical Sample Stations
Figure 4-1	Sediment Cleanup Unit 2 Proposed Sample Stations

List of Appendices

Appendix A	Key Tables and Figures from the Cleanup Action Plan
Appendix B	Inadvertent Discovery Plan
Appendix C	Quality Assurance Project Plan
Appendix D	Health and Safety Plan

List of Acronyms and Abbreviations

°C degrees centigrade

μg/kg microgram per kilogram

ASTM American Society for Testing and Materials

bgs below ground surface

bml below mudline

BMP Best Management Practice
Bornstein Bornstein Seafoods, Inc
CAP Cleanup Action Plan
City City of Bellingham

cPAH carcinogenic Polycyclic Aromatic Hydrocarbon

CSL Cleanup Screening Level

DMMP Dredged Material Management Program
Ecology Washington State Department of Ecology

EDR Engineering Design Report
HASP Health and Safety Plan
GMD Glacial Marine Drift

IDP Inadvertent Discovery Plan

kg kilogram

mg/L milligram per liter

MHHW Mean Higher High Water
MLLW Mean Lower Low Water
MTCA Model Toxics Control Act
ng/kg nanogram per kilogram

NOAA National Oceanic and Atmospheric Administration

NPDES National Pollutant Discharge Elimination System

PAH Polycyclic Aromatic Hydrocarbon

Port Port of Bellingham

PRDI Pre-Remedial Design Investigation

QAPP Quality Assurance Project Plan

RCW Revised Code of Washington

RI/FS Remedial Investigation and Feasibility Study

RTK GPS Real Time Kinematic Global Positioning System

SAP Sampling and Analysis Plan
SCO Sediment Cleanup Objective

SCU Sediment Cleanup Unit

Site I&J Waterway Site

SMS Sediment Management Standards

SPT Standard Penetration Tests

SVOC Semi-Volatile Organic Compound

TEQ Toxic Equivalents Quotient

TOC Total Organic Carbon

USACE U.S. Army Corps of Engineers

USCG U.S. Coast Guard

WAC Washington Administrative Code

1 Introduction

The I&J Waterway site in Bellingham, Washington (Site) includes two Sediment Cleanup Units (SCUs), SCU-1 and SCU-2 (Figure 1-1). The engineering design for the SCU-1 cleanup action has been finalized and will be implemented by the Port of Bellingham (Port) and Bornstein Seafoods, Inc. (Bornstein) in accordance with Consent Decree No. 23-2-01699-37 with the Washington Department of Ecology (Ecology). Construction activities for the SCU-1 cleanup are anticipated to be completed within the in-water construction window extending from August 1, 2024 through February 15, 2025.

This Pre-Remedial Design Investigation (PRDI) Work Plan describes the investigation activities needed to design the cleanup action for SCU-2. It has been prepared to satisfy the requirements of Agreed Order No. DE22068 (Agreed Order). The Port is responsible for designing the cleanup action for SCU-2 in accordance with the Agreed Order. Implementation of the SCU-2 cleanup action will occur under a separate, future legal agreement.

1.1 Purpose of the Work Plan

This PRDI Work Plan was developed to document the purpose and scope of supplemental data collection necessary to design the cleanup action for SCU-2 defined in Exhibit B of the Agreed Order, the Cleanup Action Plan (CAP; Ecology 2023). The CAP describes Ecology's selected cleanup action for the Site, consistent with Model Toxics Control Act (MTCA) and Sediment Management Standards (SMS) requirements. Per Washington Administrative Code (WAC) 173-340-380, the CAP provided the following information:

- Summary of project background and current environmental conditions.
- Applicable cleanup requirements, including cleanup standards and other federal, state, and local laws applicable to the cleanup action.
- Summary description of the remedial alternatives evaluated in the Remedial Investigation and Feasibility Study report for the I&J Waterway site.
- Rationale for Ecology's selection of the cleanup action.
- A description of the selected cleanup action, including a description of the types, levels, and amounts of hazardous substances that will remain, and the measures that will be used to prevent migration and contact with those substances.
- Compliance monitoring and contingency actions, as well as institutional controls (ICs), are also described.
- Description of the schedule for implementation of the cleanup action.

In accordance with the Agreed Order requirements, the cleanup action for SCU-2 will move forward through the design process including development of an Engineering Design Report (EDR) and construction plans and specifications. This PRDI Work Plan outlines the data gaps and field data collection investigations necessary to complete the EDR.

1.2 Site Description

The I&J Waterway site is located within Bellingham Bay between Hilton Avenue and Bellwether Way on the Bellingham waterfront (Appendix A, Figure 1-1). It includes areas of contaminated marine sediment in the federally authorized I&J Waterway navigation channel and adjacent berthing areas, primarily located on state-owned aquatic land (Appendix A, Figure 1-2). The federally authorized navigation channel has an authorized channel depth of 18 feet below mean lower low water (MLLW). The Port owns the adjacent uplands to the south, east, and west; the aquatic areas are state-owned land. The upland areas near the I&J Waterway site include the former Olivine Corporation lease area and a property to its southwest that is currently leased to Bornstein. The United States of America owns the property north of the I&J Waterway site and the U.S. Coast Guard (USCG) berths vessels within the navigation channel and northern berthing areas.

The I&J Waterway is located within and adjacent to the Waterfront District (Figure 1-2) which is undergoing a transition from historic industrial use to mixed-use. The Port has partnered with the City of Bellingham (City) to participate in land use planning efforts for redevelopment. The Port and City's Waterfront District Sub-Area Plan includes mixed-use redevelopment of the uplands surrounding the I&J Waterway, ongoing light industrial navigation requirements within the Waterway, and restoration of beach habitat and creation of a beach park at the head of the Waterway (Port of Bellingham and City of Bellingham 2019).

1.3 Document Organization

In accordance with the Agreed Order, this PRDI Work Plan provides the following supporting plans: Sampling and Analysis Plan (SAP), Inadvertent Discovery Plan (IDP), Quality Assurance Project Plan (QAPP), and Health and Safety Plan (HASP). The organization of this document is as follows:

- Section 2 summarizes existing information available from previous studies and describes the cleanup action for SCU-2 defined in the CAP.
- Section 3 identifies the data gaps to be addressed by the PRDI.
- Section 4 of this report is the SAP which describes in detail the work to be performed to fill identified data gaps.
- Section 5 presents the schedule for PRDI activities.
- Section 6 lists references.
- Appendix A contains key figures from previous cleanup documents, including figures summarizing existing chemical and biological data.
- Appendix B includes the IDP to be used during field activities. The IDP provides guidance for what to do if ground/sediment disturbing activities discover a cultural resource.

- Appendix C includes the QAPP describing the field investigation methodology and quality assurance.
- Appendix D includes the project-specific HASP.

2 Site Background

Previous studies are summarized in the Remedial Investigation and Feasibility Study report for the I&J Waterway site (RI/FS; Anchor QEA 2015) and the CAP. This section includes excerpts that are relevant to SCU-2.

2.1 Previous Environmental Investigations

The I&J Waterway site is one of 12 cleanup sites in the Bellingham Bay Demonstration Pilot Project, a coordinated bay-wide effort by federal, tribal, state, and local governments to clean up sediment contamination, control sources of sediment contamination, and restore habitat, with consideration for land and water uses. Earlier investigations were conducted for the Whatcom Waterway site, which includes more than 700 acres within the inner portion of Bellingham Bay from the I&J Waterway down to Boulevard Park. The I&J Waterway site overlaps the Whatcom Waterway site. Both sites share a number of relevant characteristics, and some of the analysis conducted for the Whatcom Waterway site informs the I&J Waterway site.

Contamination at the I&J Waterway site was originally identified in 1995 as part of the Whatcom Waterway investigation, which prompted additional sampling in 1996, 1998, and 2000 (Ecology 2023). Ecology identified the Port and Bornstein as potentially liable parties for the I&J Waterway site in 2004. In January 2005, Agreed Order No. DE1090 was signed by Ecology and the Port and required a remedial investigation and feasibility study report to be completed for the I&J Waterway site. Agreed Order Amendment No. 1 was signed in October 2005 and incorporated the Sediments RI/FS Work Plan (RETEC 2005) into the Agreed Order. The Port and Ecology executed a Second Amendment to the Agreed Order in April 2012, which incorporated the Work Plan Addendum (Anchor QEA 2012). Ecology identified the Olivine Corporation as a potentially liable party for the I&J Waterway site in 2016.

Sediment chemical and biological testing occurred in 2005, and additional bioassay testing was repeated on samples collected in early 2006 based on quality control criteria. Subsurface sediment cores were collected and tested in 2006 for suitability of open-water disposal under the Dredged Material Management Program (DMMP; RETEC 2006).

Additional work was conducted under the Second Amendment to the Agreed Order and associated Work Plan Addendum (Anchor QEA 2012). These additional activities included supplemental surface sediment chemical and biological testing, subsurface sediment chemical testing, storm drain solid chemical testing, a multibeam bathymetric survey, and structural conditions surveys in April and May 2012.

Separate from the cleanup studies, sediment cores were collected from the I&J Waterway by U.S. Army Corps of Engineers (USACE) in 2011 to evaluate the suitability of open-water disposal at the Bellingham Bay open-water disposal site of sediment dredged from federal navigation channels. Additional testing of archived samples collected by USACE was

conducted as part of the I&J Waterway site supplemental investigation activities, which were provided to Ecology in the Supplemental Investigation Memorandum in 2013 (Anchor QEA 2013a).

During the RI/FS, the Port identified data gaps that were key to developing the remedial alternatives. These data gaps included the need for additional information on sediment quality and strength beneath the dock, as described in the Sampling and Analysis Plan Memorandum (Anchor QEA 2013b). Additional surface and subsurface sampling and strength testing were conducted in the area beneath the dock in August 2013. The RI/FS report required by Agreed Order No. DE1090 was finalized in February 2015.

PRDI activities for SCU-1 were conducted in June 2020 and January 2021 to collect additional data needed for engineering design of the SCU-1 cleanup action. PRDI field investigations included bathymetric and topographic surveys, collection of geotechnical data for dredge slope stability and bulkhead and dock design, sediment sampling to define extent of contaminants in surface and subsurface sediment, and identification of the depth to native sediment deposits. The SCU-1 PRDI data are summarized in the PRDI Field Results Technical Memorandum (CRETE 2023; Appendix A).

2.2 Other Cleanup Sites

The I&J Waterway site overlaps the Whatcom Waterway site and is adjacent to the Central Waterfront site. This section describes the relationship of the I&J Waterway site to these sites.

A portion of the Phase 2 area of the Whatcom Waterway site overlaps the I&J Waterway site (Appendix A Figure 1-1). The primary contaminant at the Whatcom Waterway site is mercury, and the required cleanup (described in Consent Decree No. 07-2-02257-7) within the I&J Waterway site footprint is monitored natural recovery. Future compliance monitoring for both the I&J Waterway and Whatcom Waterway sites will be coordinated to the extent possible.

The Central Waterfront site is located adjacent to the I&J Waterway site, as shown in Figure 1-1. Petroleum hydrocarbons, metals, and PAHs are present in surface and subsurface soil above cleanup levels in the area next to the waterway. A final CAP was completed in January 2020 (Agreed Order No. DE3441). The Central Waterfront CAP includes capping to address the only potentially complete exposure pathway pertaining to sediment in the I&J Waterway, the soil erosion pathway. A PRDI for the Central Waterfront is currently underway with construction of the cleanup action expected to begin in 2026.

2.3 Site Units

The RI/FS divided the I&J Waterway site into different areas or "site units" based on the following factors:

- **Physical Factors** including bathymetry, sediment particle size and texture, the characteristics of overwater structures, and adjacent shorelines.
- Land Use and Navigation including upland zoning, shoreline infrastructure, navigation uses, natural resources, ongoing waterfront revitalization activities, and potential interrelationships between cleanup considerations and these factors.
- Natural Resources including the types of existing aquatic habitats within the site unit.
- **Contaminant Distribution** including patterns of surface and subsurface contamination and relative contaminant concentrations.

The site units for SCU-2 include the Head of Waterway, Navigation Channel East, South Bank, Coast Guard, and Coast Guard Bank Unit (Figure 1-1).

2.4 Current Conditions

This section provides a brief overview of current conditions at the I&J Waterway site relevant to SCU-2.

2.4.1 Lithology

The subsurface geology of the I&J Waterway area has been characterized in multiple investigations since the early 1990s. The sedimentary sequence is a function of fluvial sediment loads, deltaic growth rate, and the local depositional environment. A rapidly advancing delta front is characterized by an abundance of sands. Slower growth periods are characterized by finer grained sediment, principally silts, being deposited in lower energy environments. The distributary channels within a delta also meander and shift, resulting in erosion and channel backfilling. Discharges from the Nooksack River, Whatcom Creek, and Squalicum Creek all contribute to the area sediment profiles, which commonly display sediment stratigraphy consisting of soft silts, inter-layered sands, gravelly sands, silty sands, and sandy silts. The natural depositional environment of the I&J Waterway area has been altered by dredging (including the original excavation), maintenance dredging, and fill replacement during nearshore construction. The I&J Waterway area sediment can be divided into the following major units:

- Recent Deposits: Recent deposits consist primarily of very soft, brown-black, slightly sandy, clayey silt with shell fragments and varying amounts of wood debris overlying a soft, dark gray silt with trace wood fragments. The thickness of the recent deposits varies between less than 1 foot and greater than 7 feet. In some cases, the physical sequences of the sediments have been disturbed, for example by shoreline construction, or by shoreline erosion. Contamination is present in the recent deposits, above the post-glacial fluvial deposits or glacial marine drift (GMD; described below).
- Post-Glacial Fluvial Deposits: This unit consists of medium dense, gray, non-silty to silty, fine to medium sand with multi-colored grains, shell fragments, and occasional

- gravel and silt lenses grading to gray silt with clay. This unit represents native fluvial sediments, primarily from Whatcom Creek, deposited prior to industrialization of the area. The base of this sand unit is gradational in nature and tends to be present between an elevation of approximately -18 to -21 feet MLLW near the head of I&J Waterway, especially beyond the head of the federal navigation channel.
- Glacial Marine Drift (GMD): The third major unit is a stiff to very stiff, damp to moist, gray, silty clay to clay with scattered gravels and occasional fine to medium sand layers. The drift was encountered at elevations ranging from -18 to -22 feet MLLW in the federal channel, based on results of sediment cores collected in 2006. The SCU-1 PRDI encountered GMD at elevations ranging from -19 to -24 feet MLLW in the federal channel sloping upward beneath the adjacent Bornstein dock and bulkhead at about 4.5 to -8 feet MLLW. The federal navigation channel and berthing areas were excavated out of the GMD layer and the most recent maintenance dredging occurred in 1966. This glacial outwash unit was also confirmed in adjacent upland borings advanced through fill at the Central Waterfront site.

2.4.2 Contaminants and Sources

The principal contaminants in SCU-2 surface sediment include nickel and polycyclic aromatic hydrocarbons (PAHs). Contaminants in subsurface sediment include mercury, nickel, bis(2-ethylhexyl)phthalate, methyl phenols, phthalates, and n-nitrosodiphenylamine. Dioxin/furans are also present in surface and subsurface sediment at the I&J Waterway site and throughout much of Bellingham Bay. Contaminants and sources are further described below:

- Nickel contamination is from historical sources: The primary source of nickel within the I&J Waterway site surface sediments is historical activities at the Olivine Corporation facility, which operated a rock crushing plant for the mineral olivine. Nickel is a constituent within olivine ore and was periodically released to the Waterway through dust and wastewater. Potential surface soil erosion to the I&J Waterway will be addressed as part of the cleanup of the Central Waterfront site.
- Bis(2-ethylhexyl)phthalate is from historical sources: Potential sources of phthalate contamination include stormwater outfalls. Leachate from the Roeder Avenue landfill and compressor oil that may have leaked from a compressor on the dock were previously determined not to be major contributors of bis(2-ethylhexyl)phthalate to the Waterway. Sediment concentrations of bis(2-ethylhexyl) phthalate continue to decrease in most areas of the Waterway, indicating that there are no ongoing significant sources.
- PAHs are predominantly from historical sources: Elevated PAHs are localized adjacent to the dock and along bulkhead/shoreline areas. Potential historical sources of PAHs include stormwater discharges, controlled and uncontrolled combustion sources (such as hog fuel burners and/or other fires), and the diesel

- fueling facility for boats at the dock between 1960 and the early 1980s. The fire that destroyed the main Bornstein building in 1985 and existing creosoted piles and bulkhead structures are also potential sources.
- Mercury and phenol contamination are predominantly from historical sources: The primary source of mercury within the Site sediment is the discharge of mercury containing wastewaters from the former Georgia-Pacific (GP) Chlor-Alkali Plant (located adjacent to the Whatcom Waterway) between 1965 and the 1970s. This historical source of mercury contamination has been controlled. Following initial pollution control upgrades by GP in the early 1970s, direct discharge of Chlor-Alkali Plant wastewaters to Whatcom Waterway was terminated. Then in 1999 the Chlor-Alkali Plant was closed by GP, eliminating the generation of mercury-containing wastewater. The cleanup of the Log Pond area of the Whatcom Waterway site in 2000 and 2001 controlled the secondary source of mercury by capping sediment with the highest levels of mercury contamination. Some regional and natural sources of mercury continue to exist, but these sources are not expected to result in exceedances of benthic criteria. Mercury concentrations in Site sediment are lower in surface sediment than in subsurface sediment and are expected to continue approaching natural background concentrations over time. Surface sediment concentrations were not present above benthic criteria values in 2005/2006, 2012, or 2013. In addition, mercury did not exceed the Whatcom Waterway site sediment bioaccumulation screening level of 1.2 milligrams per kilogram (mg/kg) (Ecology 2007) that includes the I&J Waterway site and is protective of both recreational and tribal fishing and seafood consumption practices.
- The primary sources of methyl-phenolic compounds within the I&J Waterway site sediment include log rafting and wood products handling that occurred as part of historic lumber company/mill operations, and potential lesser contributions from historical stormwater and wastewater discharges.
- Other contaminants from unknown historical sources: based primarily on historical composite samples, dimethylphthalate, N-nitrosodiphenylamine are present in subsurface sediment at concentrations exceeding benthic chemical criteria.
- Dioxin/furans are a bay-wide issue: Dioxin/furans are present at levels above background in surface and subsurface sediment as a result of historical and potential on-going sources throughout Bellingham Bay. Potential sources of dioxin/furans include activities associated with the historical GP mill, historical operations of the Oeser Company, and stormwater discharges. Other sources to Bellingham Bay may also include historical controlled and uncontrolled combustion sources (such as hog fuel burners and/or other fires).

Because primary sources of contamination have been controlled, the main focus of the cleanup action for the Site is to address residual contamination in sediment. Other contaminated sites located in the vicinity of the Site are being addressed by Ecology, see Section 2.2. Additionally, stormwater management practices have improved over the past several decades, reducing the contaminant load to the Site. The Port and the City will

continue to administer stormwater upgrades, maintenance, and best management practices required under National Pollutant Discharge Elimination System (NPDES) permits. Post-construction sediment evaluations will provide information on these source control efforts.

2.4.3 Nature and Extent of Contamination

The nature and extent of sediment contamination at the Site has been delineated through investigations in 2005/2006, 2012, and 2013 and is depicted in Figures 2-3, 2-4, and 2-5 of the CAP. These figures are included in Appendix A. The findings relevant to SCU-2 are summarized below:

- Head of Waterway unit: Surface sediment contaminant concentrations within the
 Head of Waterway unit exceed benthic chemical criteria for nickel, total PAHs, and
 benthic biological criteria, with bioassay exceedance of the MTCA SMS Sediment
 Cleanup Objective (SCO) from 2012. This unit also contains surface sediment
 contaminant concentrations of cPAHs above preliminary human and ecological
 health criteria. Subsurface sediment has benthic chemical exceedances for mercury,
 nickel, bis(2-ethylhexyl) phthalate, and methylphenols.
- Navigation Channel East unit: Surface sediment within the Navigation Channel East unit exceeds benthic biological criteria, with two MTCA SMS Contaminant Screening Level (CSL) bioassay exceedances from 2005/2006 and a SCO bioassay exceedance from 2012. Subsurface sediment contaminant concentrations in the Navigation Channel units are based primarily on historical composite samples, indicating potential SCO benthic chemical criteria exceedances for mercury, 2,4-dimethylphenol, 2-methylphenol, phthalates, and n-nitrosodiphenylamine. One sample was collected during the SCU-1 PRDI within the Navigation Channel East unit to support dredge slope characterization (IJW-SC-15). Nickel was detected at concentration (235 mg/kg) that slightly exceeds the benthic SCO (211 mg/kg) in the 1.2 to 2.2 foot below mudline (bml) interval.
- Coast Guard and Coast Guard Bank unit: Surface sediment contaminant
 concentrations within the Coast Guard unit exceed benthic biological criteria, with
 one CSL bioassay exceedance from 2005/2006 and one SCO bioassay exceedance
 from 2012. No locations were sampled in the Coast Guard Bank unit. Surface
 sediment concentrations are assumed to be similar to the adjacent Coast Guard and
 Head of Waterway site units. Subsurface sediment contaminant concentrations in
 the Coast Guard site units are based primarily on historical composite samples,
 indicating potential SCO benthic chemical exceedances for mercury, 2,4dimethylphenol, 2-methylphenol, phthalates, and n-nitrosodiphenylamine.
- South Bank unit: Surface sediment contaminant concentrations within the South
 Bank unit exceed benthic chemical criteria for nickel, PAHs, and benthic biological
 criteria, with a CSL bioassay exceedance from 2005/2006. This unit also contains
 surface sediment concentrations of cPAHs above preliminary human and ecological
 health criteria. Subsurface sediment has benthic chemical criteria exceedances for

mercury, bis(2-ethylhexyl) phthalate, and 2,4-dimethylphenol. One sample was collected during the SCU-1 PRDI to support dredge slope characterization (IJW-SC-16). There were no detected concentrations of nickel, PAHs, or SVOCs that exceed.

2.4.4Fate and Transport Processes

Sediment within the Site is acted upon by natural and anthropogenic forces that affect the fate and transport of contaminants. Significant fate and transport processes include the following:

- Sediment Natural Recovery: Processes of natural recovery have been observed within the Site and extensively documented in Bellingham Bay as part of the Whatcom Waterway cleanup investigations. RI investigations for Whatcom Waterway and bathymetry comparisons for the I&J Waterway have documented depositional rates (average of 1.6 centimeters per year) and have verified consistent patterns of deposition and natural recovery. One potential exception to this general observation is in nearshore, under pier, and berth areas near the dock, where recovery rates may be reduced by the resuspension of fine-grained sediments from propeller wash or wave activity. In all other areas of the I&J Waterway site, cleaner sediments are consistently observed on top of impacted sediments.
- Wind and Wave Processes: The effects of wind/wave erosional forces represent the
 principal natural process affecting sediment stability. High-energy, nearshore areas
 such as at the head of the I&J Waterway may have slower natural deposition of finegrained sediment than other areas. In these areas, fine-grained sediment can be
 resuspended, mixed, or transported by wave energy. The erosional forces vary with
 location, water depth, sediment particle size, and shoreline geometry. These forces
 are minimal in deeper-water areas.
- Navigation Dredging and Shoreline Infrastructure: Navigation dredging, and the
 construction of associated shoreline marine trade infrastructure has been a
 prominent feature of the Site and has shaped the current lithology.
- Other Erosional or Sediment Disturbing Processes: Bioturbation and propeller wash
 can result in periodic disturbances of the sediment column and can enhance mixing
 of surface sediment with underlying sediment. These processes are ongoing and are
 incorporated in the empirically measured rates and performance of natural
 recovery. Propeller wash in particular affects sediment stability in nearshore
 navigation areas.

2.4.5 Exposure Pathways and Receptors

Exposure pathways and receptors at the I&J Waterway site are summarized below:

• **Protection of Benthic Organisms**: The primary environmental receptors are sediment-dwelling organisms. These benthic and epibenthic invertebrates are located near the base of the food chain and are important indicators of overall

environmental health. Both chemical and biological monitoring are used to test for toxic effects. Chemical and biological standards specified under SMS are used to screen for such effects. The whole-sediment bioassays provide an ability to test for potential synergistic and antagonistic effects between multiple chemicals, and to test for potential impacts associated with parameters not measured as part of chemical testing.

• Protection of Human and Ecological Health: cPAHs are present in sediment at levels exceeding risk-based criteria. These compounds have mutagenic and carcinogenic properties that can impact human and ecological health. The highest concentrations of cPAHs are present along the bulkhead and shoreline areas (CAP Figure 2-5, Appendix A) and are generally within the area above benthic biological criteria. Dioxin/furans, and mercury are present at concentrations above Puget Sound natural background levels, but are not associated with the historical, Site-related sources. These contaminants are co-located with Site-related contaminants and will be addressed as part of the Site cleanup action.

The exposure pathways are complete for surface sediment. In addition, exposure pathways could become complete for subsurface sediment if it is uncovered.

2.5 SCU-2 Proposed Cleanup Action

As noted in Section 1 above, engineering design for SCU-1 is complete and implementation of the cleanup action is anticipated to be completed in the August 1, 2024, to February 15, 2025, in-water construction window (limited construction activities are permitted to occur beginning July 16 during low-tide periods, or in-the dry).

The proposed cleanup action for SCU-2 that is described in the CAP remediates contaminated sediment within SCU-2 using both active and passive cleanup technologies, including:

- Capping in the Head of Waterway Unit,
- Enhanced Natural Recovery (ENR) in the South Bank Unit, and
- Monitored Natural Recovery (MNR) in the Coast Guard, Coast Guard Bank and Navigation Channel East Units.

Monitoring and ICs will be used to ensure the long-term effectiveness of the remedy. Sediment dredged to facilitate cap construction will be disposed.

2.6 Alternative Cleanup Action Evaluation

The I&J Waterway is located within the Waterfront District which is undergoing a transition in site uses. Plans for this area include marine trades redevelopment of the surrounding uplands, ongoing commercial and light industrial navigational use within the I&J Waterway, and restoration of beach habitat and creation of a beach park at the head of the I&J Waterway (Port of Bellingham and City of Bellingham 2019). To accommodate future uses,

the Port is considering an alternative cleanup of dredging to a clean surface to the extent practicable. In addition, the Port will evaluate the placement of dredged sediments within the Aerated Stabilization Basin (ASB) as part of the Whatcom Waterway cleanup action and creation of a confined disposal facility (CDF). Dredging of sediment to the native GMD, or alluvium layers has the potential to destabilize the existing bulkhead in the South Bank unit. Therefore, this alternative cleanup action approach will evaluate replacement of the existing bulkhead in the South Bank Unit, along the shoreline of the Central Waterfront site. This PRDI Work Plan includes data collection activities that will support further evaluation of these elements. The Coast Guard facility will not be removed or rebuilt as part of the cleanup action and a key design objective will be to maintain stability of these structures.

3 Data Gaps Analysis

This section provides a summary of the data gaps identified relating to design of the cleanup action for SCU-2. The data gap discussion is based on review of available documentation and focuses on field data collection needs. The identified data needs are as follows:

- Base Map –topographic and utility surveys are needed in order to provide data that will be used to develop a complete project base map.
- Sediment Characterization surface and subsurface chemistry data is needed to verify existing surface sediment conditions, potentially refine the areas over which capping, ENR, and MNR are assigned and support cap design.
- Hydrodynamic Data data regarding the magnitude and direction of water velocities are needed to support cap design (e.g., evaluating physical cap stability) and will supplement desk top analyses utilizing existing information.
- Geotechnical Data geotechnical information is required for cap design (e.g., analysis of cap settlement).

There are several other design tasks that do not require field data collection and, as a result, these items are not listed as data gaps. Such tasks include an analysis of propeller wash and sea level rise which will be performed using existing information. Similarly, it is anticipated that a desk top analysis utilizing available existing information will be performed to evaluate stormwater flow from the outfall at the head of the waterway.

3.1 Base Map

A detailed, multibeam and side-scan sonar survey of the I&J Waterway was performed in June 2020 in accordance with the SCU-1 PRDI Work Plan (CRETE 2020). This survey provides complete coverage of the waterway to approximately 0 feet MLLW. The existing density and quality of these data is sufficient to design the cleanup action for SCU-2. Existing data does not include the intertidal and upland areas adjacent to SCU-2. The following data are needed in order to create a detailed, comprehensive base map showing current conditions within and adjacent to SCU-2:

- Topographic survey. Topographic data extending from the limits of the existing SCU-1 survey (approximately 0 feet MLLW) to the high tide line is needed to generate upto-date maps of existing topographic conditions along the shoreline adjacent to SCU-2.
- Utility locations. Current maps of utility locations are required to support design.
 Utilities located adjacent to SCU-2 may influence the design (e.g., accommodation of stormwater flow), or be physically impacted by construction work.

3.2 Sediment Characterization

Based on the CAP, the cleanup action is a combined remedy consisting of MNR, ENR, capping (including dredging to facilitate cap placement). Additional surface sediment sampling is

included in this PRDI Work Plan to confirm surface sediment concentrations are consistent with the information summarized in the CAP and RI/FS. The data will be used to support minor adjustments, as-needed, of the boundaries between MNR and ENR areas. Surface sediment samples collected within the Head of the Waterway Unit will be used to evaluate source control sufficiency in the vicinity of the stormwater outfall. Subsurface sediment sampling will be performed to support cap design.

3.3 Geotechnical Information

Geotechnical data is needed to support cap design, including necessary dredging to facilitate cap placement. The following data is proposed to be collected:

- Stratigraphic units. Investigate the thickness and extent of sediment stratigraphic units within proposed capping areas.
- Characterization. Characterize the sediment using both in-situ and laboratory tests.
 Properties such as moisture content, density, grain-size distribution, and Atterberg limits are needed to develop properties for the sediment.
- Engineering properties. Develop engineering properties for the sediment using both in-situ and laboratory tests. Properties defining the stiffness, strength (friction angle and undrained strength), and consolidation behavior of the soil.

3.4 Hydrodynamic Information

The nearshore area at the head of the I&J Waterway is subject to wind/wave erosional forces. Water velocity and direction information are needed to support sizing of cap materials and assess potential armoring requirements.

3.5 Data Needed To Evaluate Alternative Cleanup Action

To evaluate and design the alternative cleanup action, additional data will be needed. Specifically, sediment cores to identify the depth to the native GMD and/or alluvium layers will be needed to design the dredge. Upland geotechnical soil data is also needed to support the evaluation of the south bulkhead. Geotechnical data needs are similar to those presented above with the addition of shoreline soil information.

4 Sampling and Analysis Plan

Based on the data gaps summarized in Section 3, additional data is needed to inform the design of the cleanup action for SCU-2. This section provides specific sampling and analysis protocols for the field sampling activities and provides detailed information regarding the field sampling objectives; sample location and frequency; and equipment and procedures to be used during the sampling. Specific quality assurance protocols are presented in the QAPP, included as Appendix C. The IDP and HASP for field sampling activities are provided in Appendices B and D, respectively. For the in-water vibracore samples, a permit application will be submitted to the USACE for a Nationwide Permit 6 prior to the start of field work. Figure 4-1 shows the sampling stations and Table 4-1 provides the purpose of each sampling station. The following sub sections provide details on how the data collection and sampling will be conducted.

4.1 Base Map

A topographic and utility survey will be performed for the intertidal and adjacent upland areas and stamped by a licensed surveyor in Washington State. Utility locating will be performed to support this work. Topography within the intertidal and shoreline will be collected during low tides, where appropriate, to tie the bathymetric and upland topography together. In general, the survey will extend from the limits of the existing multibeam survey at approximately 0 feet MLLW and extend to the high tide line. Temporary bench marks will be established along the shoreline prior bathymetric surveying.

Existing utilities and outfalls will be documented and located prior to implementation of the removal action. Utility information initially obtained from the City, and Port will be field-verified using surface features and utility tracing as appropriate.

4.2 Sediment Characterization

For design of the proposed cleanup action, additional surface sediment samples are needed to refine the chemical distribution in order to finalize boundaries between MNR, ENR, and cap areas. Subsurface samples are needed to support cap design. Figure 4-1 shows the sampling stations, Table 4-1 provides the purpose of each sampling station, and Table 4-2 provides the laboratory testing program.

4.2.1 Surface Samples

Surface sediment characterization is needed to support design of the proposed cleanup action. Thirteen surface samples will be collected from the 0- to 12-cm biologically active zone at locations presented on Figure 4-1. An additional five samples will be collected from the 0- to 45-cm interval at intertidal locations for evaluation of direct contact-based cleanup criteria for cPAHs. The data will be used to support refinements to the assignment of remedial technologies, if needed, and evaluate the sufficiency of ongoing source control. In general, the proposed surface sediment sampling locations are either co-located with

historical sampling locations, or in areas where prior surface sediment data is not available. Additional samples are planned to be collected at the head of the waterway, near the existing stormwater outfall to provide additional data regarding sufficiency of source control. The number and location of these samples will be determined in consultation with Ecology following completion of the topographic survey which will be used to identify the location of the high tide line. The approximate area where samples are anticipated to be collected is shown on Figure 4-1.

A hydraulic Van Veen sampling device will be used to collect surface sediment samples. Sampling locations will be approached at slow boat speeds with minimal wake to minimize disturbance of bottom sediment prior to sampling. In the event water depths limit access via boat, surface samples may be collected using hand tools at low tide. Sediment samples will be handled carefully to minimize disturbance during collection and transportation to the laboratory.

The grab sampler will be lowered over the side of the boat from a cable wire at an approximate speed of 0.3 feet per second. When the sampler reaches the mudline, the cable will be drawn taut and horizontal coordinates will be recorded using a RTK GPS. The mudline elevation of each station will be measured using a fathometer or lead line. Each surface grab sample will be retrieved aboard the vessel and evaluated for the following acceptance criteria:

- Overlying water is present and has low turbidity
- Adequate penetration depth is achieved
- Sampler is not overfilled
- Sediment surface is undisturbed
- No signs of winnowing or leaking from sampling device

Grab samples not meeting these criteria will be rejected near the location of sample collection, and the steps will be repeated until criteria have been met. Deployments will be repeated within a 20-foot radius of the proposed sample location. If adequate penetration is not achieved after multiple attempts, less volume will be accepted and noted in the field notebook. Once accepted, overlying water will be siphoned off and a decontaminated stainless-steel trowel, spoon, or equivalent will be used to collect only the upper 12 cm of sediment from inside the sampler without touching the sidewalls.

The sampler will be decontaminated between stations and rinsed with site water between grabs. After sample collection, the following information will be recorded on the Field Log Sheet, Sediment Sampling Form, and/or the field notebook:

- Date, time, and name of person logging sample
- Weather conditions
- Sample location number and coordinates
- Project designation

- Depth of water at the location and surface elevation
- Sediment penetration and depth
- Sediment sample interval
- Sample recovery
- Physical characteristics of the sediment, including color, texture, presence of anthropogenic material, and presence and type of biological structures, other debris, oil sheens, and odors

Homogenized sediment will be spooned immediately into appropriate pre-cleaned, pre-labeled sample containers, placed in coolers filled with ice or equivalent, and maintained at 4 degrees centigrade (°C) for delivery to the analytical laboratory. Care will be taken to ensure that sediment in contact with the walls of the sampler, as well as any large items or debris, are excluded from the sample. Materials greater than 0.5-inch in diameter and debris will be omitted from the sample containers. Surface sediment samples will be submitted for chemical and testing analysis (Table 4-1).

In addition to the location information collected in the field, sample logging of bulk sediment not placed in sample containers will involve physical characterization in general accordance with the visual-manual description procedure (Method American Society for Testing and Materials [ASTM] D-2488 modified). The information will be recorded on the Sediment Sampling Forms. Physical characterization includes the following:

- Grain size distribution
- Density/consistency
- Plasticity
- Color, odors, presence of oily sheens and moisture content
- Biological structures (e.g., shells, tubes, macrophytes, bioturbation)

4.2.2 Subsurface Samples

Sediment core sampling will be completed at the locations shown on Figure 4-1. The cores will be advanced using vibracore methods from a boat. The cores will be advanced to 2 feet below contact with the native GMD or alluvial deposits, or until refusal is encountered. Each core will be visually classified in general accordance with ASTM D 2487 (Classification of Soils for Engineering Purposes). Color photos will be taken of cores prior to sampling, focusing on changes in stratigraphy and visible contamination.

At four of these locations in the Head of the Waterway unit (IJW-SC-18, -19, -20, and -24; Figure 4-1) four samples will be collected from 0 to 3 feet bml for analytical chemistry analyses. The samples will represent sediment that is dredged to facilitate construction of the engineered cap (assumed to be a conventional 3-foot-thick sand cap). The chemistry data will be used to evaluate sediment disposal options. At the same locations, four samples will be collected from 3 to 5 feet bml. These samples will represent the sediment layer directly

below the engineered cap and will be analyzed for chemistry and geotechnical index properties (Section 4.3) to support cap design analyses.

Table 4-2 summarizes locations to be analyzed for chemistry. Sediment sample intervals and sediment sample locations may vary based on field observations for all sample stations. Samples may also be collected at any unique lithology or visual contamination/debris layer at all subsurface sediment sample locations.

Sediment samples may also be collected from other locations, these will be archived and subsequent analysis may be completed based on the findings from the primary sampling and analysis. Select samples will also be submitted for physical testing. These samples will be selected based on visual classification to represent the major sediment units found in the core. The anticipated number of analytical chemistry and physical tests is shown in Table 4-2.

Subsurface Collection Methods

Subsurface sediment (chemistry and physical testing) will be collected using a vibracore or similar method. A vibracore collects a continuous profile of subsurface sediments by utilizing a high frequency vibrating coring device that penetrates into the underlying sediments with minimal distortion. Prior to deployment, the following procedure will be used to decontaminate sample tubes:

- Rinse and pre-clean with potable water
- Wash and scrub the tubes in a solution of laboratory grade, non-phosphate-based soap and potable water
- Rinse with potable water
- Rinse three times with distilled water
- Seal both ends of each core tube with aluminum foil

The aluminum foil will be removed immediately prior to placement into the coring device. Care will be taken during sampling to avoid contact of the sample tube with potentially contaminated surfaces. Sediment samples will be collected in the following manner:

- Vessel will maneuver to the proposed sample location
- Horizontal location will be recorded using a RTK GPS
- The water depth at each station will be measured using a fathometer or lead line
- A decontaminated core tube the length of the desired penetration depth will be secured to the vibratory assembly and deployed from the vessel
- The coring apparatus will be suspended from the vessel's A-frame (or tripod) to the vertical position and then lowered until the core cutter comes in contact with the sediment
- The core tube will be allowed to fall through the sediment by the weight of the head-assembly without vibration

- The vibratory head will be activated to induce the vibratory motion and drive a 4-inch-diameter, thin-walled, aluminum tube into the sediment
- A continuous core sample will be collected to the designated coring depth or until refusal
- Core penetration observations will be measured and recorded including but not limited to depth of free fall, any changes in penetration resistance and corresponding depth, total depth of penetration
- The vibrator will be turned off and the core barrel will be extracted from the sediment using the winch
- While suspended from the A-frame, the assembly and core barrel will be sprayed off and then placed on the vessel deck
- The core sample will be evaluated at the visible ends of the core tube, the length of recovered sediment will be recorded, and, if accepted, the core tube will be sectioned into 4 to 6.5-foot lengths

Acceptance criteria for sediment core samples are as follows:

- Overlying water is present and the surface is intact
- The core tube appears intact without obstruction or blocking
- Recovery is greater than 75 percent of drive length

Once the core samples are deemed acceptable, the cutter head will be removed and a cap will be placed over the end of the tube and secured firmly in place with duct tape. The core tube will then be removed from the sampler and the other end of the core will be capped and taped. The core tube will be labeled with permanent black pen and scribed with the location ID and an arrow pointing to the top of core. The cores will then be cut into appropriate lengths for transport to the processing station. Cores will be cut to a maximum length of 6.5 feet. The cores will be sealed tightly enough to prevent leakage or disturbance during transport to the processing station.

Cores will be logged and processed at the processing station. The processing station will be a portable field trailer, with a freezer, set up in close proximity to the site. Discrete samples will be taken directly from the selected depth interval and spooned into laboratory supplied jars. Composited samples will be placed in a decontaminated stainless-steel bowl and mixed using a decontaminated stainless steel mixing spoon or trowel. The composited sediment will be mixed until homogenous in color and texture and then spooned into laboratory supplied jars for analyses. Chemistry and physical samples will follow the same collection methods.

4.3 Geotechnical Information

Additional information will be collected to provide data and engineering properties for cap design. As outlined in Section 4.2, physical index tests will be performed on selected samples from the in-water vibracores. This information will be used to support cap design analysis (e.g., settlement). Additional samples for geotechnical index testing may be collected based

on observations of the field. Samples will be selected based on visual classification to represent the major sediment units identified within SCU-2 to provide representative data.

Index tests that will be performed include Atterberg limits, grain size distribution, hydrometer, moisture content, and density. The anticipated number of tests is shown in Table 4-2.

4.4 Hydrodynamic Information

Two fixed-point submerged acoustic Doppler current profilers (ADCPs) will be deployed near the head of the waterway to provide direct measurement of water velocity and direction. An ADCP unit will consist of Doppler transducers mounted in a weighted cage that will be lowered to the sediment bed by the sampling vessel. Locations at which these instruments will be installed will be determined in the field, based on observation of site conditions including water depths and vessel traffic. Locations at which the ADCPs are installed will be recorded as described in Section 4.6. The ADCPs will be installed once in-water construction activities associated with the SCU-1 cleanup action are complete for a period of at least 60 days (approximately two lunar cycles).

4.5 Sampling and Analysis for Evaluating Alternative Cleanup Action

Additional investigation is proposed to support an evaluation of an alternative cleanup action approach. This section describes work that is focused on data that provides better understanding of the depth to the GMD or native alluvium layers and additional geotechnical data to support evaluation of the south shoreline bulkhead.

4.5.1 Subsurface Sediment Characterization

Vibracores will be used to determine the depth of native deposits (alluvium or GMD), stratigraphy, and in-situ chemical and physical properties of the sediment. Subsurface cores and sample collection will be performed as described in Section 4.2. Locations and proposed testing are summarized on Tables 4-1 and 4-2 and shown on Figure 4-1.

Head of Waterway Unit

Subsurface samples will be collected from the 0 to 2-foot layer of sediment above the native GMD or alluvium at each location discussed in Section 4.2.2 (IJW-SC-18, -19, -20, and -24). These samples will be analyzed to support an evaluation of dredging to clean sediment. Vibracores will be completed at an additional four locations (IJW-SC-21, -22, -23, and -25) to identify the depth to GMD or native alluvium. The cores will be visually classified, but no samples are planned to be collected.

Coast Guard Unit

At one location (IJW-SC-26) a vibracore will be completed to identify the depth to GMD or native alluvium and support accurate mapping of these stratigraphic units. The core will be visually classified, but no samples are planned to be collected.

South Bank Unit

Five vibracore locations are proposed for the South Bank unit (Figure 4-1). At two locations (IJW-SC-30, and -34), subsurface samples will be collected from the 0 to 2-foot layer of sediment above the native GMD or alluvium at each location. These samples will be analyzed to support an evaluation of dredging to clean sediment. Vibracores will be completed at an additional three locations (IJW-SC-29, -32, and -35) to identify the depth to GMD or native alluvium. The cores will be visually classified, but no samples are planned to be collected.

Navigation Channel East Unit

Four vibracore locations are proposed for the Navigation Channel East unit (Figure 4-1). At two locations (IJW-SC-28, and -33), subsurface samples will be collected from the 0 to 2-foot layer of sediment above the native GMD or alluvium at each location and archived. These samples will be analyzed to support an evaluation of dredging to clean sediment. Vibracores will be completed at an additional three locations (IJW-SC-27, -31, and -36) to identify the depth to GMD or native alluvium. The cores will be visually classified, but no samples are planned to be collected.

Additional sediment samples may be collected from the locations identified above based on conditions observed in the field or to support other engineering analyses. For example, pending coordination with the design team that is working to prepare the preliminary design for the Whatcom Waterway cleanup action, composite samples may be collected for bulk chemistry, and/or physical index testing to support an evaluation of suitability for disposal in the CDF. The anticipated number of analytical chemistry and physical tests is shown in Table 4-2.

4.5.2 Geotechnical Information

Additional geotechnical investigation for the alternative cleanup action includes three upland area geotechnical boreholes located near the bulkhead advanced to approximately 100 feet below ground surface (bgs). These borings will be completed using mud rotary drilling with a Shelby tube sampler to conduct Standard Penetration Tests (SPT). SPT testing will be performed every 2.5 to 5 feet until the 100 feet bgs bottom of the boring is reached. The samples retrieved during SPT testing will be used to classify the soils and for laboratory testing. Index tests will be performed on selected samples sent to the laboratory to confirm field classification of soil, estimate engineering properties, and estimate construction behavior. In addition to index tests, consolidation testing will be performed on relatively undisturbed Shelby tube samples to refine settlement estimates and corrosion testing will be performed to refine the design of foundation elements. While the actual testing program will depend on the samples retrieved during the drilling, the anticipated number of tests is

shown in Table 4-2. The results of this testing may also be used for dredge prism design and design of a sediment cap.

4.6 Management of Investigation Derived Waste

All sediment remaining after sampling in the field will be washed overboard at the collection site prior to moving to the next sampling station. Any sediment spilled on the deck of the sampling vessel will be washed into the surface waters at the collection site.

Sediment remaining after core processing and sampling will be collected in 55-gallon drums and consolidated. The 55-gallon drums will be stored in a secure area and labeled appropriately. Periodic composite sampling of remaining sediment will be performed to obtain representative data for sediment disposal profiling.

All soil cuttings obtained from the mud rotary soil boring activities will be collected in 55-gallon drums and consolidated. The 55-gallon drums will be stored in a secure area and labeled appropriately. After the completion of all soil borings, the 55-gallon drums will be transported for appropriate disposal. Periodic composite sampling of soil boring cuttings will be performed to obtain representative data for soil disposal profiling.

All disposable sampling materials and personnel protective equipment used in sample processing, such as disposable coveralls, gloves, and paper towels, will be placed in heavy duty garbage bags or other appropriate containers. Disposable supplies will be placed in a normal refuse container for disposal as solid waste.

4.7 Positioning and Navigation

Sediment sampling stations (surface and subsurface) will be surveyed using a real time kinematic global positioning system (RTK GPS), or similar. The RTK GPS includes a receiver unit onboard the sampling vessel and a Coast Guard beacon differential receiver. The RTK GPS unit will receive radio broadcasts of GPS signals from satellites. The Coast Guard beacon receiver will acquire corrections to the GPS signals to produce positioning accuracy to within 1 to 2 feet.

Northing and easting coordinates of the vessel will be updated every second and displayed directly on a computer aboard the vessel. The coordinates will then be processed in real time and stored at the time of sampling using the positioning data management software package HYPACK®, or similar. Washington State Plane Coordinates, North (NAD 83) will be used for the horizontal datum. The vertical datum will be the National Oceanic and Atmospheric Administration (NOAA) mean lower low water (MLLW) datum. Vertical control will be provided by the ship's depth finder and corrected for tidal influence. Tide elevation will be determined by using the RTK GPS and using local tide gauges to verify equipment readings.

To ensure the accuracy of the navigation system, a checkpoint will be located at a known point such as a pier face, dock, piling, or similar structure that is accessible by the sampling vessel. At the beginning and end of each day, the vessel will be stationed at the check point, a GPS position reading will be taken, and the reading will be compared with the known land-survey coordinates. The two position readings should agree, within the limits of survey vessel operational mobility, to within 1 to 2 feet.

An onboard computer will display the vessel's position during sampling operations. Proposed coordinates (Table 4-2) will have been previously stored in the vessel's computer. The proposed station location will be displayed on the area map on the computer screen, and the vessel's location will be displayed as a moving dot on that map. The range and bearing from the vessel to the proposed station location (target position) will be displayed on the screen. The scale of the grid will be magnified as the vessel nears the proposed station location. During sampling, vessel position can be monitored constantly using this computer display and the RTK GPS. Actual sample location coordinates will be determined when the sampler is on the bottom, and the cable is taut and perpendicular to the water surface.

5 Schedule

Table 5-1 presents the anticipated schedule for completing the work outlined in this Work Plan. Most field tasks are planned to be performed prior to the start of construction at SCU-1 (pending permit issuance) and is planned to be within 120 days after Ecology approval of the Final PRDI Project Plans; however, collection of hydrodynamic information will be performed following completion of SCU-1 in-water construction to avoid disturbances due to maneuvering construction support vessels and other activities. The collection of hydrodynamic information outside of the Agreed Order schedule requires Ecology approval. In accordance with the Agreed Order, the results of the PRDI will be incorporated into the draft EDR, which will be submitted to Ecology within 180 days of completion of the PRDI work.

6 References

- Anchor QEA (Anchor QEA, LLC) 2012. I&J Waterway RI/FS Work Plan Addendum. Prepared for the Port of Bellingham. March 2012.
- Anchor QEA 2013a. I&J Waterway RI/FS Supplemental Investigation Memorandum. Prepared for Port of Bellingham. February 2013.
- Anchor QEA 2013b. I&J Waterway RI/FS Sampling and Analysis Plan Memorandum. Prepared for the Port of Bellingham. August 2013.
- Anchor QEA 2015. Remedial Investigation and Feasibility Study Report, I&J Waterway Site. Prepared for the Port of Bellingham. February 2015.
- CRETE 2020. Pre-Remedial Design Investigation Work Plan, I&J Waterway Site. Prepared for the Port of Bellingham. April 2020.
- CRETE 2023. Engineering Design Report, I&J Waterway Site. Prepared for the Port of Bellingham. November 2023.
- Ecology 2023. Agreed Order Number DE 22068. November 3, 2023.
- Port of Bellingham and City of Bellingham, 2019. Waterfront District Sub-Area Plan. Prepared for the Port of Bellingham/City of Bellingham Partnership Project. December 2019.
- RETEC 2005. Sediments RI/FS Work Plan, I&J Waterway. Prepared for the Port of Bellingham. July 2005.
- RETEC 2006. Preliminary Sediment Data Summary Memorandum, I&J Waterway. Prepared for the Port of Bellingham. December 2006.

Tables

Table 4-1 Summary of Sampling Stations

		Propose Ac	d Clean	Alternative Cleanup Action					
Station ID	Purpose	Verify Boundaries between Remedial Technologies	Evaluate Source Control	Cap Design	Dredge Design	Bulkhead Design	Depth to GMD		
IJW-SS-18	Surface Grab – Assess surface sediment chemistry at head of waterway, in the vicinity of historical sample location IJ12-01	х	х						
IJW-SS-19	Surface Grab – Assess surface sediment chemistry at head of waterway	х	х						
IJW-SS-20	Surface Grab – Assess surface sediment chemistry in vicinity of historical sample location IJW-SS-11, and boundary of MNR and cap areas	х							
IJW-SS-21	Surface Grab – Assess surface sediment chemistry at boundary of ENR and cap areas	x							
IJW-SS-22	Surface Grab – Assess surface sediment chemistry in Coast Guard Bank Unit	х							
IJW-SS-23	Surface Grab – Assess surface sediment chemistry in vicinity of historical sample location IJW-SS-09	х							
IJW-SS-24	Surface Grab – Assess surface sediment chemistry at boundary of ENR and MNR areas	х							
IJW-SS-25	Surface Grab – Assess surface sediment chemistry in the vicinity of historical sample location IJW-SS-10	х							
IJW-SS-26	Surface Grab – Assess surface sediment chemistry in Coast Guard Bank Unit	х							
IJW-SS-27	Surface Grab – Assess surface sediment chemistry in vicinity of historical sample location IJW-SS-07	х							
IJW-SS-28	Surface Grab – Assess surface sediment chemistry in vicinity of historical sample location IJW-SS-08 and boundary of MNR and ENR areas	х							
IJW-SS-29	Surface Grab – Assess surface sediment chemistry in vicinity of boundary of MNR and ENR areas	х							
IJW-SS-30	Surface Grab – Assess surface sediment chemistry in vicinity of stormwater outfall.		х						
IJW-SC-18	Subsurface – Chemistry and geotechnical index properties for cap design, depth to GMD			х	х		х		
IJW-SC-19	Subsurface – Chemistry and geotechnical index properties for cap design, depth to GMD			х	х		х		
IJW-SC-20	Subsurface – Chemistry and geotechnical index properties for cap design, depth to GMD			х	х		х		
IJW-SC-21	Subsurface – Depth to GMD						х		

		Propose	d Clean	Alternative Cleanup Action				
Station ID	Purpose	Verify Boundaries between Remedial Technologies	Evaluate Source Control	Cap Design	Dredge Design	Bulkhead Design	Depth to GMD	
IJW-SC-22	Subsurface – Depth to GMD						х	
IJW-SC-23	Subsurface – Depth to GMD						х	
IJW-SC-24	Subsurface – Chemistry and geotechnical index properties for cap design, depth to GMD			х	х		х	
IJW-SC-25	Subsurface – Depth to GMD						х	
IJW-SC-26	Subsurface – Depth to GMD						х	
IJW-SC-27	Subsurface – Depth to GMD						x	
IJW-SC-28	Subsurface – For dredge design, depth to GMD				х		х	
IJW-SC-29	Subsurface – Depth to GMD						х	
IJW-SC-30	Subsurface – For dredge design, depth to GMD				х	х	х	
IJW-SC-31	Subsurface – Depth to GMD						х	
IJW-SC-32	Subsurface – Depth to GMD						х	
IJW-SC-33	Subsurface – For dredge design, depth to GMD				х		x	
IJW-SC-34	Subsurface – For dredge design, depth to GMD				х		х	
IJW-SC-35	Subsurface – Depth to GMD						х	
IJW-SC-36	Subsurface – Depth to GMD						х	
IJW-SC-37	Subsurface – Depth to GMD						х	
IJW-SB-1	Physical characterization and in-situ properties of soil for potential bulkhead design			х		Х		
IJW-SB-2	Physical characterization and in-situ properties of soil for potential bulkhead design			х		x		
IJW-SB-3	Physical characterization and in-situ properties of soil for potential bulkhead design			х		×		

Notes:

GMD – glacial marine drift

- 1. Sediment samples will be collected for testing per Table 4-3.
- 2. All sample station locations are approximate and may change by up to 30 feet to avoid interfering with facility operations or to avoid debris/obstructions.

Table 4-2 Summary of Soil and Sediment Testing

							Analyte								Geotechnical Testing					
Station ID	Easting	Northing	# Samples	Depth Interval	Collection Method	Identify Depth to GMD or Alluvium	Metals	Phthalates	PAHs	Phenols	PCBs	Dioxins/Furans	тос	Archive Jars	Sieve Analysis	Atterberg Limits	Moisture Content and Specific Gravity	Consolidation Test	Corrosion Suite	
IJW-SS-18	644771.91	1240211.11	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Χ	Х	Х						
1111-33-10	044771.91	1240211.11	1	0-45 cm (bml)	Grab				Х											
IJW-SS-19	644682.58	1240314.27	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
11 44-22-19	044082.38	1240314.27	1	0-45 cm (bml)	Grab				Х											
IJW-SS-20	644725.50	1240159.74	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
13 00-33-20	044723.30	1240139.74	1	0-45 cm (bml)	Grab				Х											
IJW-SS-21	644619.45	1240272.93	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
1744-22-21	044019.43	1240272.93	1	0-45 cm (bml)	Grab				Х											
IJW-SS-22	644682.98	1240073.91	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
IJW-SS-23	644618.62	1240154.61	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
IJW-SS-24	644605.02	1240212.56	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
IJW-SS-25	644571.35	1240238.99	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
IJW-SS-26	644610.51	1240000.62	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
IJW-SS-27	644585.97	1240026.88	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
IJW-SS-28	644535.71	1240110.74	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
IJW-SS-29	644524.55	1240130.83	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
IJW-SS-30	644767.33	1240273.30	1	0-12 cm (bml)	Grab		Х	Х	Х	Х	Х	Х	Х	Х						
13 44-33-30	044707.33	1240273.30	1	0-45 cm (bml)	Grab				Х											
			1	0-3 ft (bml)	Vibracore		Х	Х	Х	Х	Х	Х	Х	Х						
IJW-SC-18	644771.91	1240211.11	1	3-5 ft (bml)	Vibracore		Х	Х	х	Х	Х	Х	Х	Х	Х	Х	Х			
			1	0-2 ft (above GMD)	Vibracore	х	Х	Х	Х	Х			Х	Х						
			1	0-3 ft (bml)	Vibracore		Х	Х	Х	Х	Х	Х	Х	Х						
IJW-SC-19	644726.70	1240268.17	1	3-5 ft (bml)	Vibracore		Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х			
			1	0-2 ft (above GMD)	Vibracore	х	Х	Х	Х	Х			Х	Х						
			1	0-3 ft (bml)	Vibracore		Х	Х	Х	Х	Х	Х	Х	Х						
IJW-SC-20	644682.58	1240314.27	1	3-5 ft (bml)	Vibracore		Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х			
			1	0-2 ft (above GMD)	Vibracore	Х	Х	Х	Х	Х			Х	Х						
IJW-SC-21	644727.34	1240210.76	0	-	Vibracore	Х														
IJW-SC-22	644671.69	1240268.69	0		Vibracore	Х														
IJW-SC-23	644725.50	1240159.74	0		Vibracore	Х														

Table 4-2 Summary of Soil and Sediment Testing

										Ana	lyte				(Geot	echnical Te	estinę	3
Station ID	Easting	Northing	# Samples	Depth Interval	Collection Method	Identify Depth to GMD or Alluvium	Metals	Phthalates	PAHs	Phenols	PCBs	Dioxins/Furans	тос	Archive Jars	Sieve Analysis	Atterberg Limits	Moisture Content and Specific Gravity	Consolidation Test	Corrosion Suite
			1	0-3 ft (bml)	Vibracore		Х	Х	Χ	Х	Х	Х	Χ	Х					
IJW-SC-24	644682.46	1240230.85	1	3-5 ft (bml)	Vibracore		Х	Х	Х	Х	Х	Х	Χ	Х	Х	Х	Х		
			1	0-2 ft (above GMD)	Vibracore	Х	Х	Х	Х	Х			Χ	Х					
IJW-SC-25	644619.45	1240272.93	0		Vibracore	х													
IJW-SC-26	644674.59	1240116.75	0	-	Vibracore	Х													
IJW-SC-27	644656.11	1240144.14	0		Vibracore	Х													
IJW-SC-28	644618.62	1240154.61	1	0-2 ft (above GMD)	Vibracore	Х	Х	Х	Х	Х			Χ	Х					
IJW-SC-29	644605.02	1240212.56	0		Vibracore	Х													
IJW-SC-30	644571.35	1240238.99	1	0-2 ft (above GMD)	Vibracore	Х	Х	Х	Х	Х			Χ	Х					
IJW-SC-31	644576.45	1240151.35	0		Vibracore	Х													
IJW-SC-32	644560.33	1240188.47	0		Vibracore	Х													
IJW-SC-33	644535.71	1240110.74	1	0-2 ft (above GMD)	Vibracore	Х	Х	Х	Х	Х			Χ	Х					
IJW-SC-34	644524.55	1240130.83	1	0-2 ft (above GMD)	Vibracore	Х	Х	Х	Χ	Х			Χ	Х					
IJW-SC-35	644496.87	1240151.22	0		Vibracore	Х													
IJW-SC-36	644532.61	1240110.41	0		Vibracore	х													
IJW-SC-37	644674.52	1240113.75	0		Vibracore	Х													
IJW-SB-4	644457.11	1240176.00			Mud Rotary	Х									Х	Х	Х	Х	х
IJW-SB-5	644537.76	1240251.82	Based o	n field observations	Mud Rotary	Х									Х	Х	Х	Х	Х
IJW-SB-6	644632.45	1240355.27			Mud Rotary	Х									Х	Х	Х	Х	Х

Notes:

-- no sample planned, visual observations only

shaded cell indicates sampling to support evaluation and design of the alternative cleanup action only

bml - below mudline

cm - centimeters

PAH - polycyclic aromatic hydrocarbons

PCBs - polychlorinated biphenyls

GMD – glacial marine drift

Table 5-1 Anticipated PRDI Schedule

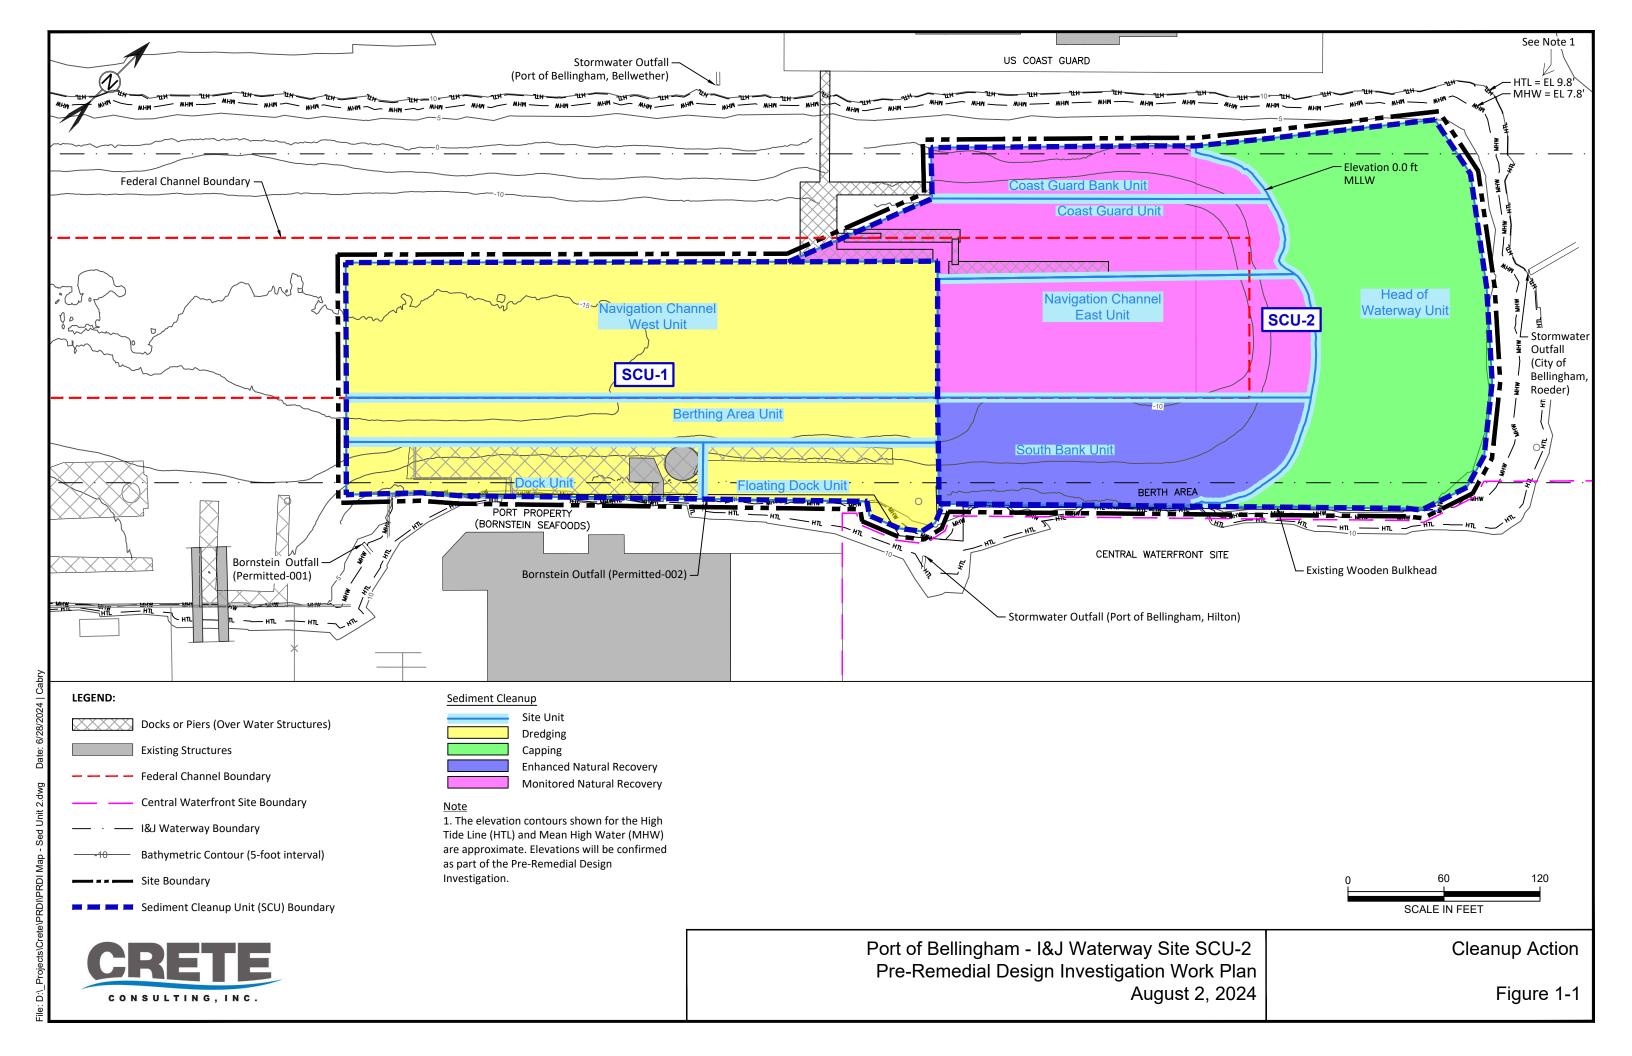
PRDI Task	Agreed Order Schedule	Anticipated Schedule
Topographic and Utility Survey	Within 120 days of	June - July 2024
Surface and Subsurface Sediment	Ecology approval of Final	June - July 2024
Sampling	PRDI Project Plans or	
Mud Rotary Borings	other date approved by	June - July 2024
Hydrodynamic Measurements	Ecology	Feb – April 2025 ¹

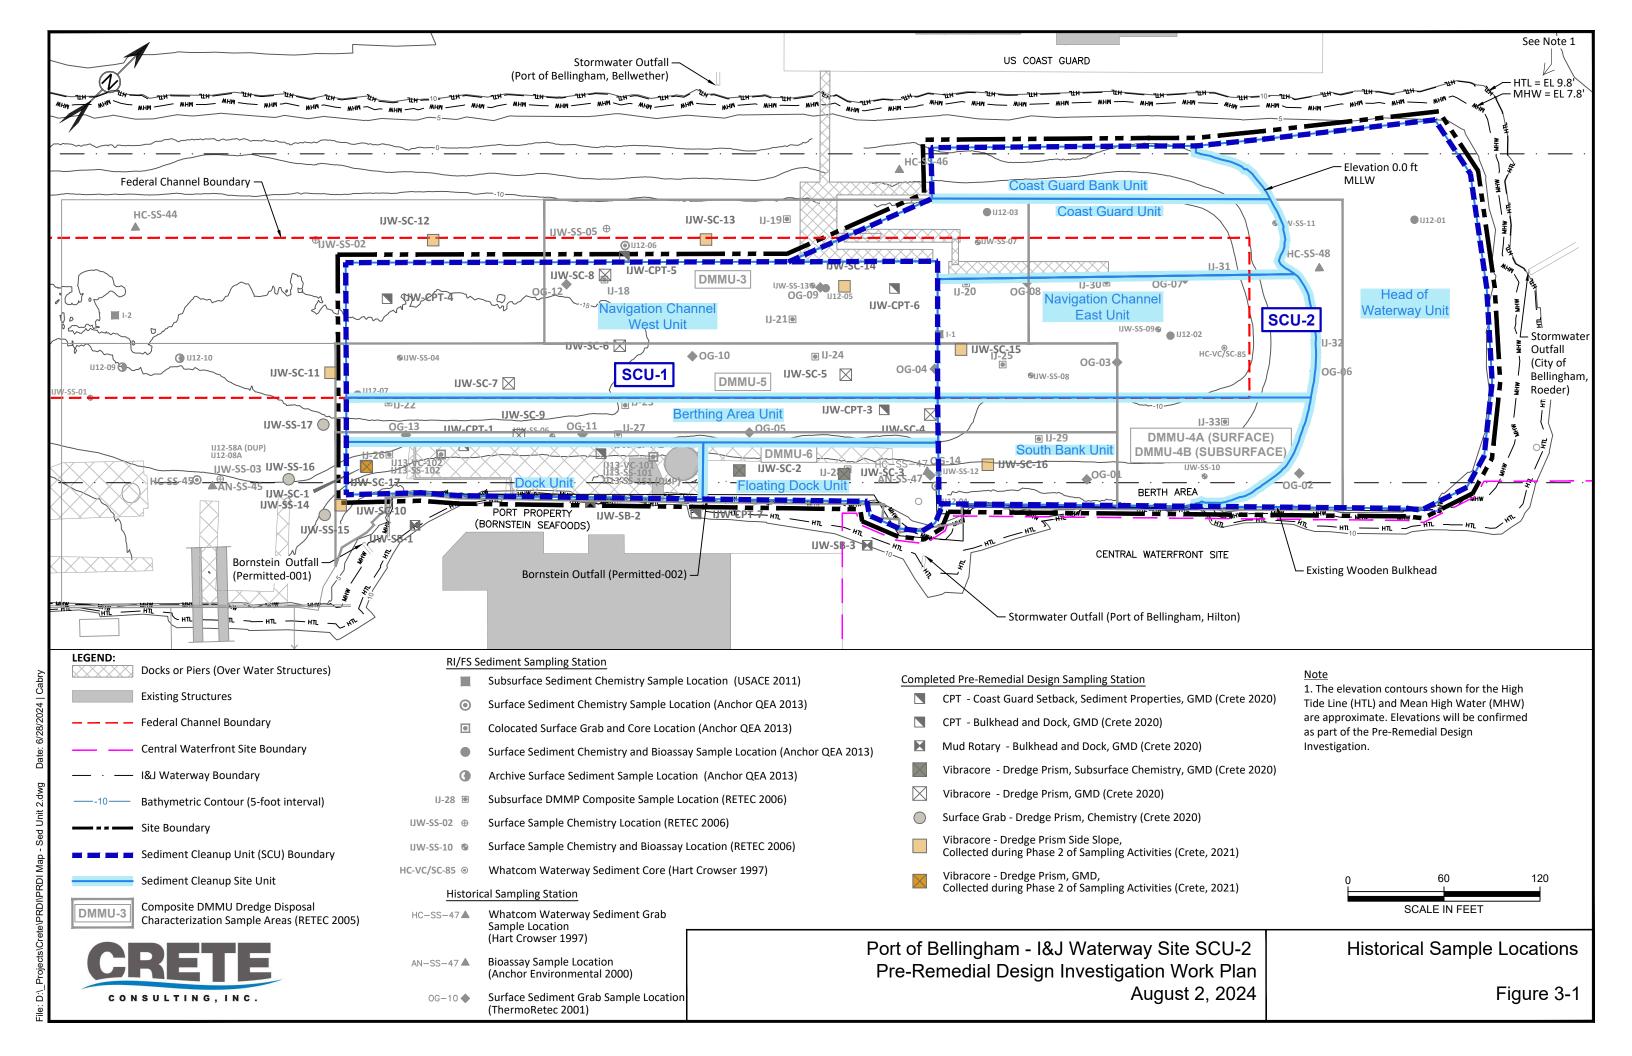
Notes:

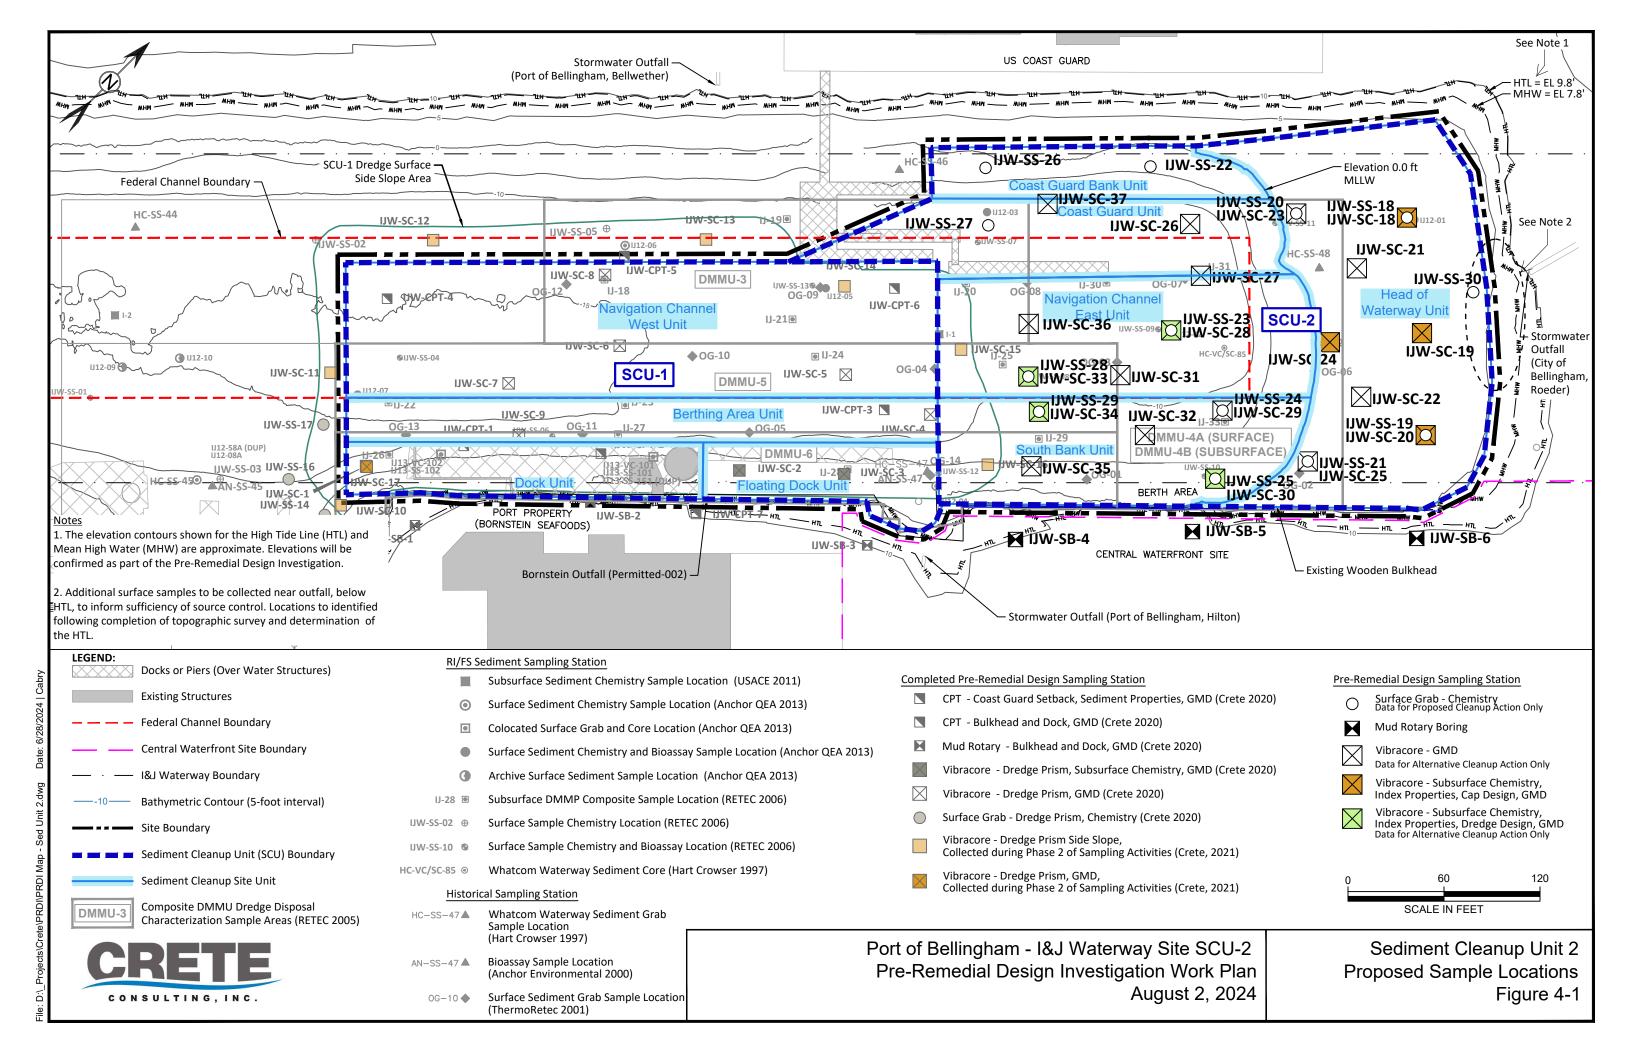
1. Hydrodynamic measurements are proposed to be collected following completion of SCU-1 in-water construction to avoid disturbances due to maneuvering construction support vessels and other activities. This timeframe is outside the Agreed Order schedule and will require Ecology approval.

Figures

IJ SCU2 PRDIWP 08-02-2024 6-2







Appendix A

Key Figures from the Cleanup Action Plan and Remedial Investigation and Feasibility Study

IJ SCU2 PRDIWP 08-02-2024 6-3

Table 3-1 Cleanup Standards

		Screening Level							
	Carbon N	Carbon Normalized Screening Level Dry-weight Screening Level					Horizontal Scale of	Vertical Point of	
Analyte	sco	CSL	Unit	sco	CSL	Unit	Cleanup Level ^a	Application	Compliance
Nickel	n/a	n/a	n/a	211 ^b	No value	mg/kg	SCO	Point-based	Upper 12 cm of sediment
Total cPAH TEQ	n/a	n/a	n/a	229 ^c	2,290 ^c	μg/kg	SCO	Area-weighted average	Upper 12 cm of sediment
Total cPAH TEQ	n/a	n/a	n/a	450 ^c	4,500 ^c	μg/kg	SCO	Area-weighted average in intertidal areas	Upper 45 cm of sediment
2-Methylnaphthalene	38	64	mg/kg OC	670	670	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Acenaphthene	16	57	mg/kg OC	500	500	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Anthracene	220	1,200	mg/kg OC	960	960	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Benzo(a)anthracene	110	270	mg/kg OC	1,300	1,600	μg/kg	SCO	Point-based	Upper 12 cm of sediment
bis(2-Ethylhexyl)phthalate	47	78	mg/kg OC	1,300	3,100	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Chrysene	110	460	mg/kg OC	1,400	2,800	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Dibenzo(a,h)anthracene	12	33	mg/kg OC	230	230	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Dibenzofuran	15	58	mg/kg OC	540	540	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Dimethyl phthalate	53	53	mg/kg OC	71	160	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Fluoranthene	160	1,200	mg/kg OC	1,700	2,500	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Fluorene	23	79	mg/kg OC	540	540	μg/kg	SCO	Point-based	Upper 12 cm of sediment
n-Nitrosodiphenylamine	11	11	mg/kg OC	28	40	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Phenanthrene	100	480	mg/kg OC	1,500	1,500	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Pyrene	1,000	1,400	mg/kg OC	2,600	3,300	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Total HPAH	960	5,300	mg/kg OC	12,000	17,000	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Total LPAH	370	780	mg/kg OC	5,200	5,200	μg/kg	SCO	Point-based	Upper 12 cm of sediment
2,4-Dimethylphenol	n/a	n/a	n/a	29	29	μg/kg	SCO	Point-based	Upper 12 cm of sediment
2-Methylphenol (o-Cresol)	n/a	n/a	n/a	63	63	μg/kg	SCO	Point-based	Upper 12 cm of sediment
4-Methylphenol (p-Cresol)	n/a	n/a	n/a	670	670	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Benzoic acid	n/a	n/a	n/a	650	650	μg/kg	SCO	Point-based	Upper 12 cm of sediment
Benzyl alcohol	n/a	n/a	n/a	57	73	μg/kg	SCO	Point-based	Upper 12 cm of sediment

Notes:

a. The SCO is the carbon normalized value when total organic carbon is within the range of 0.5% to 3.5%.

b. See Appendix A for the derivation of this value.

c. Ecology has established the ELS-based RBCs derived in Appendix B as the screening levels for the Site.

μg/kg: microgram per kilogram

cm: centimeter

cPAH: carcinogenic polycyclic aromatic hydrocarbon

CSL: Cleanup Screening Level

HPAH: high-molecular-weight polycyclic aromatic hydrocarbon

LPAH: low-molecular-weight polycyclic aromatic hydrocarbon

mg/kg: milligram per kilogram

mg/kg-OC: milligram per kilogram organic carbon normalized

n/a: not applicable


SCO: Sediment Quality Objective

TEQ: toxic equivalent quotient

Table 5-1 **Performance of Cleanup Action Alternatives Compared to Cleanup Standards**

Exposure Pathway	Parameter	Cleanup Standard	Area	Alternative 1	Alternative 2	Alternative 3	Alternative 4	Alternative 5	Alternative 6
Protection of Human Health				Estimated SWAC follo	wing construction (μg	TEQ/kg dw) ^b			
Protection of human health for		SCO: 229/445 µg TEQ/kg ^a ; SWAC of Site; upper 12 cm	I&J Site Area ^d Baseline = 399 µg TEQ/kg dw	167	114	65	65	21	21
seafood consumption ^c	cPAHs	SCO: 229/445 µg TEQ/kg ^a ; SWAC of home range; upper 12 cm	Crab and fish home range ^e Baseline = 44 µg TEQ/kg dw	44	44	44	44	44	44
Protection of human health for direct contact		SCO: 450/800 µg TEQ/kg³; SWAC of intertidal; upper 45 cm	Intertidal ^f Baseline = 445 µg TEQ/kg dw	21	21	21	21	21	21
Protection of the Benthic Community				Point sample locations remediated g					
	SMS Chemicals ^h	SCO; point concentrations; upper 12 cm		All points remediated post-construction 18J Site Area ^d All points remediated post-construction					
Protection of the Benthic Community	Nickel	SCO: 211 mg/kg; point concentrations; upper 12 cm	I&J Site Area ^d						
	Biological Criteria	SCO; point evaluations; upper 12 cm		All po	ints remediated withir	n 10 years post-constr	uction ⁱ	All points remediate	ed post-construction

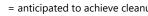Notes:



= anticipated to achieve cleanup standard within 10 years following construction

= cleanup standard achieved immediately following construction

Concentrations of co-occurring contaminants, including dioxins/furans, mercury, and total PCBs, will achieve SMS requirements following construction.

- a. These values are preliminary. See Appendix B.
- b. Post-construction SWACs for cPAHs are calculated assuming that remediation areas have a post-construction concentration of 21 µg TEQ/kg dw (based on natural background).
- c. cPAH cleanup standards developed to protect human health also protect ecological health.
- d. The I&J Waterway site area is approximately 3.1 acres.
- e. The crab and fish home range is assumed to include I&J Waterway and adjacent areas (approximately 2,500 acres).
- f. The intertidal area is approximately 0.7 acre in the Head of Waterway unit.
- g. The points achieving the benthic SCO following construction were estimated by assuming that all locations with dredging, capping, or enhanced natural recovery achieve cleanup standards, and locations in monitored natural recovery areas remain at baseline conditions. This is a conservative assumption because natural recovery is ongoing, and surface sediment conditions are expected to improve over baseline conditions prior to construction.

h. Includes all chemicals in SMS Table III (WAC 173-204-562).

i. As discussed in the Cleanup Action Plan, the adverse biological effects of I&U Waterway sediment on benthic organisms have reduced over time; 2005/2006 sampling resulted in multiple CSL exceedances, and 2012 sampling results indicated no CSL exceedances (SCO exceedances only). This trend forms that basis for the predictions for Alternatives 1 through 4, which use monitored natural recovery in marginally impacted areas of the waterway.

μg: microgram

cm: centimeter

cPAH: carcinogenic polycyclic aromatic hydrocarbon

CSL: Cleanup Screening Level

dw: dry weight

kg: kilogram

PCB: polychlorinated biphenyl

PQL: practical quantitation limit

RI/FS: Remedial Investigation/Feasibility Study

SCO: Sediment Cleanup Objective

SMS: Sediment Management Standards

SWAC: spatially weighted area concentration

TEQ: toxic equivalents quotient

WAC: Washington Administrative Code

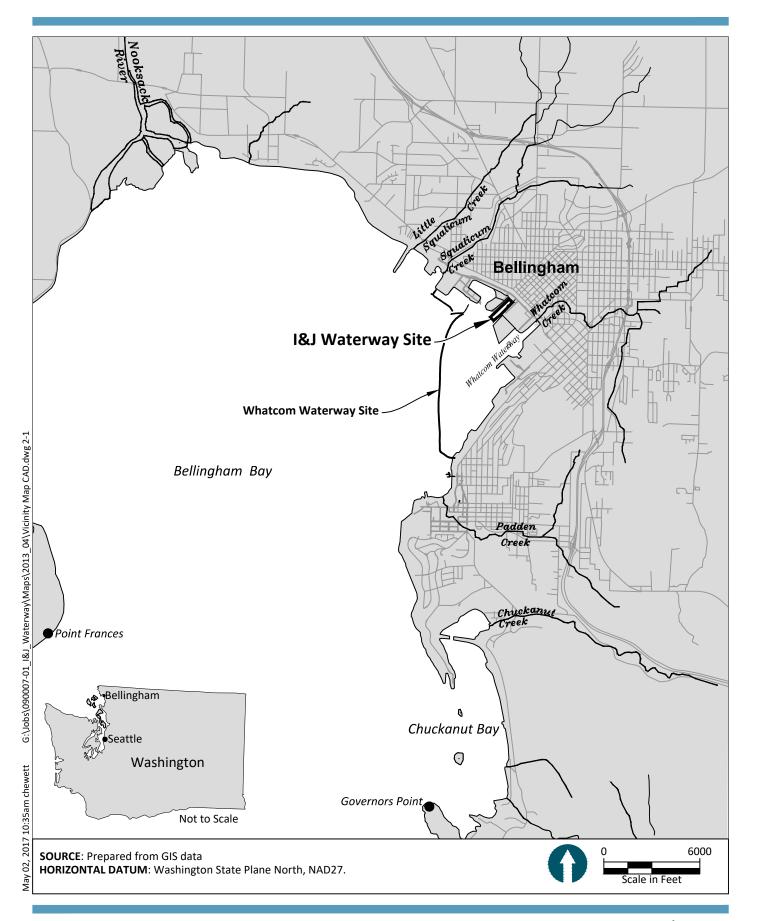




Figure 1-1 Site Location Cleanup Action Plan I&J Waterway Site Port of Bellingham

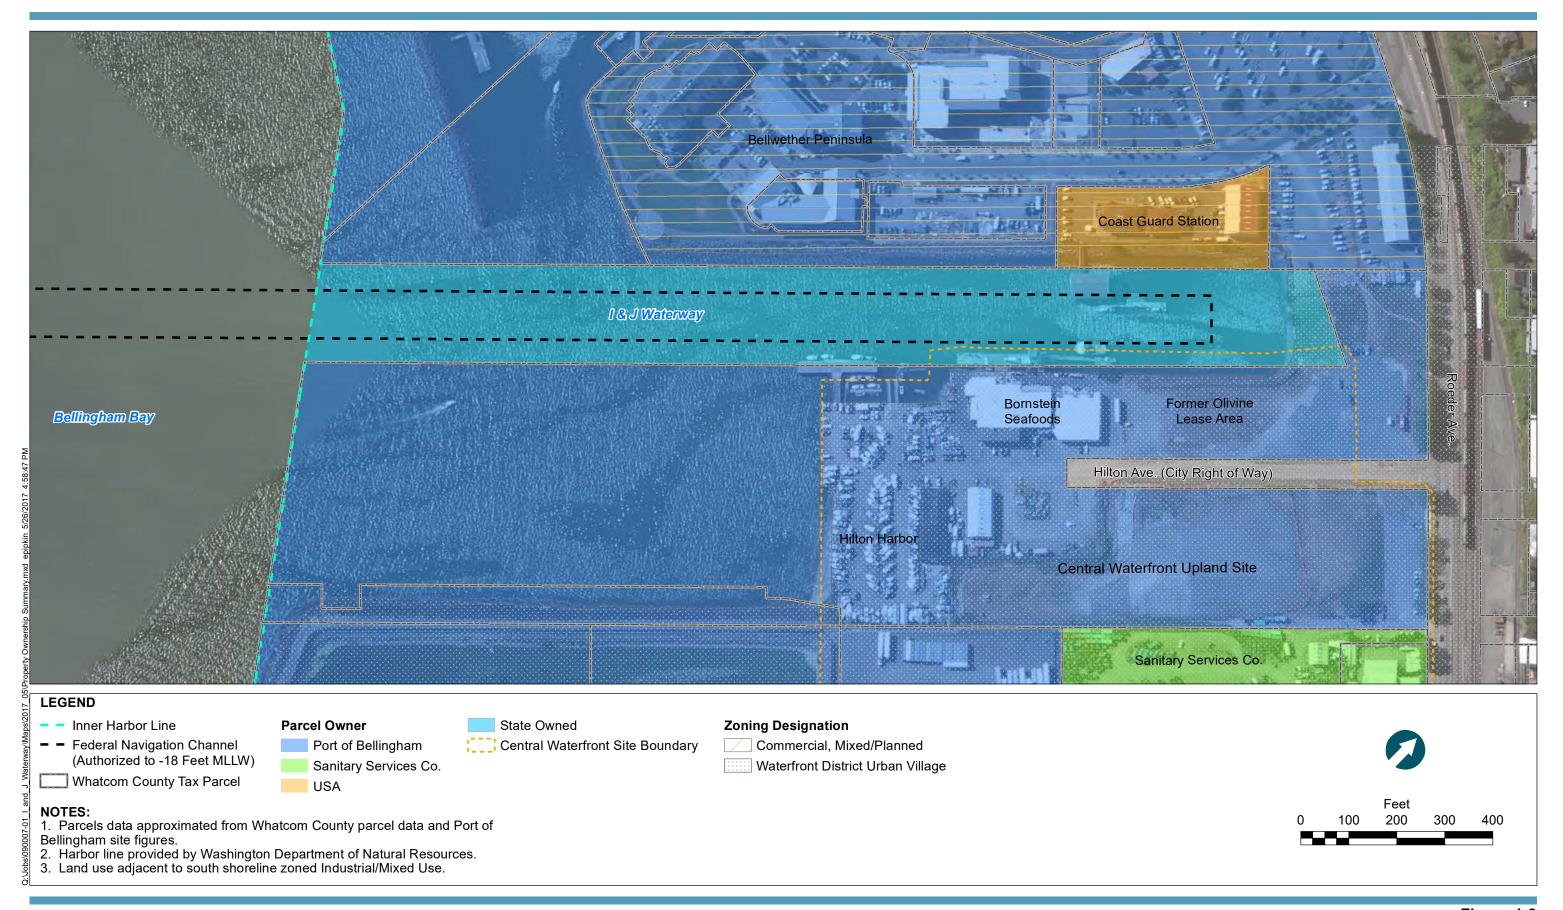
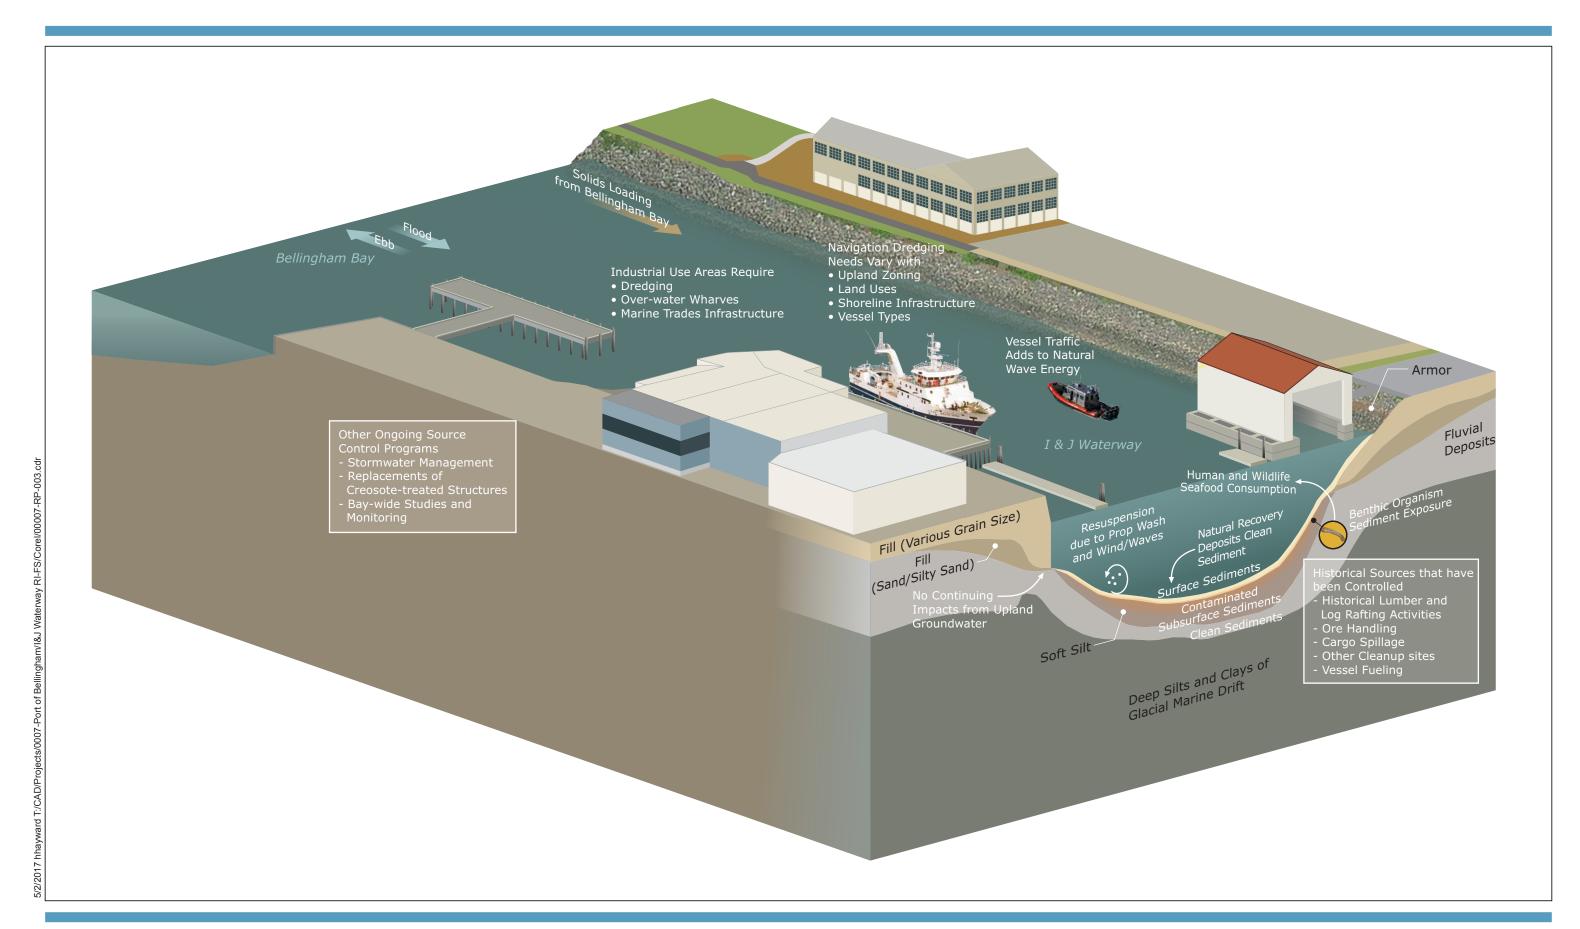


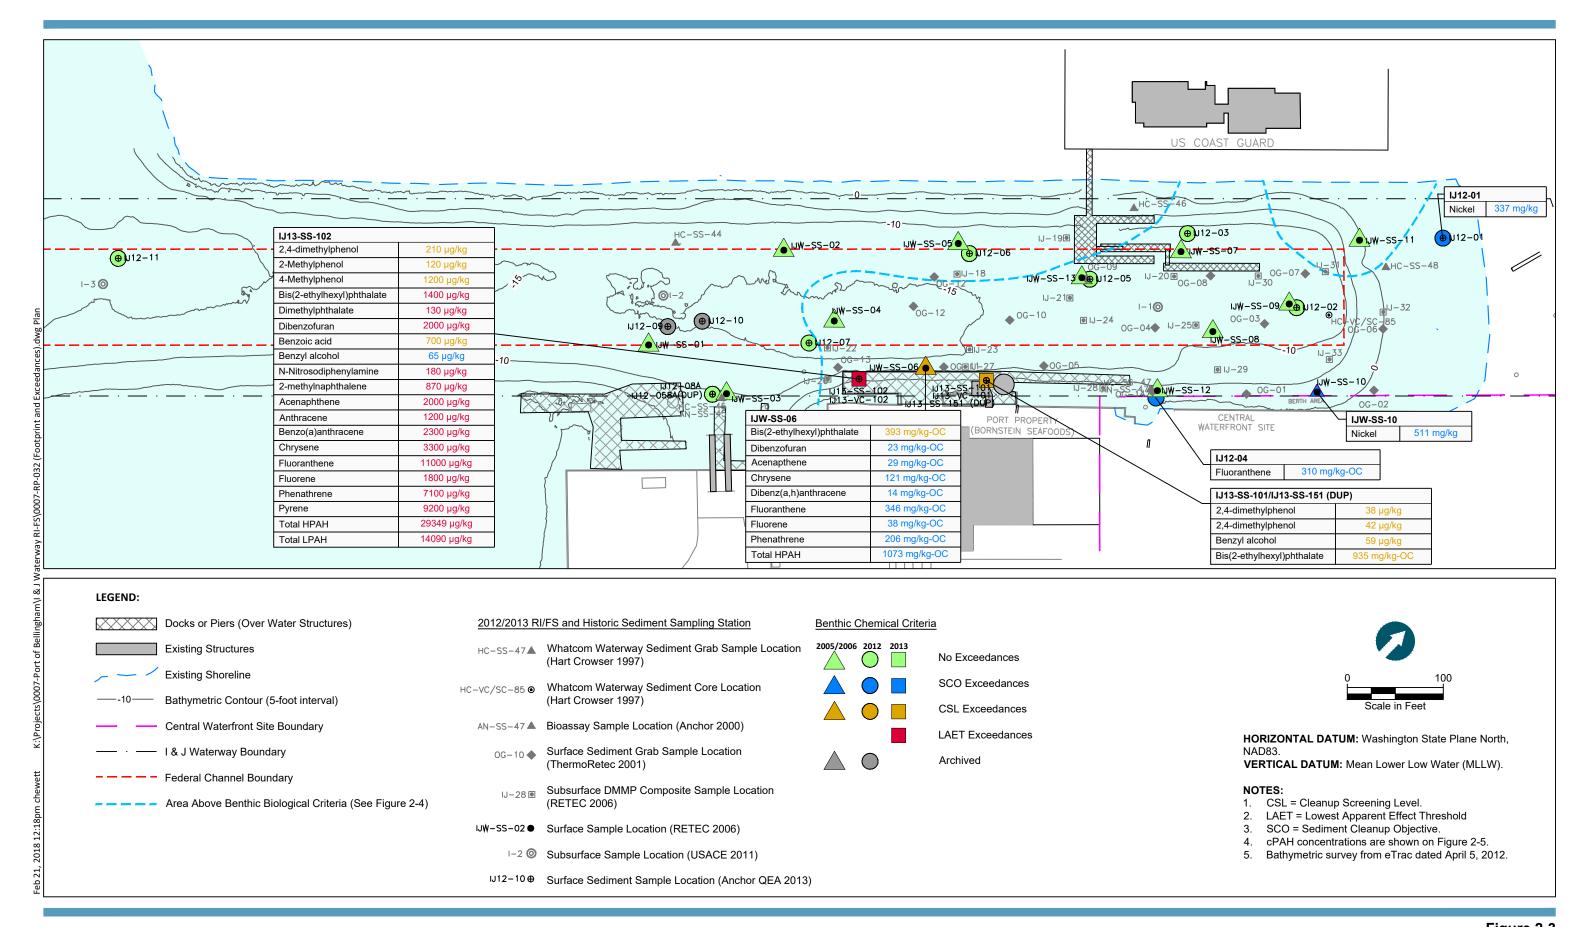


Figure 1-2
Summary of Property Ownership and Land Use
Cleanup Action Plan
I&J Waterway Site
Port of Bellingham



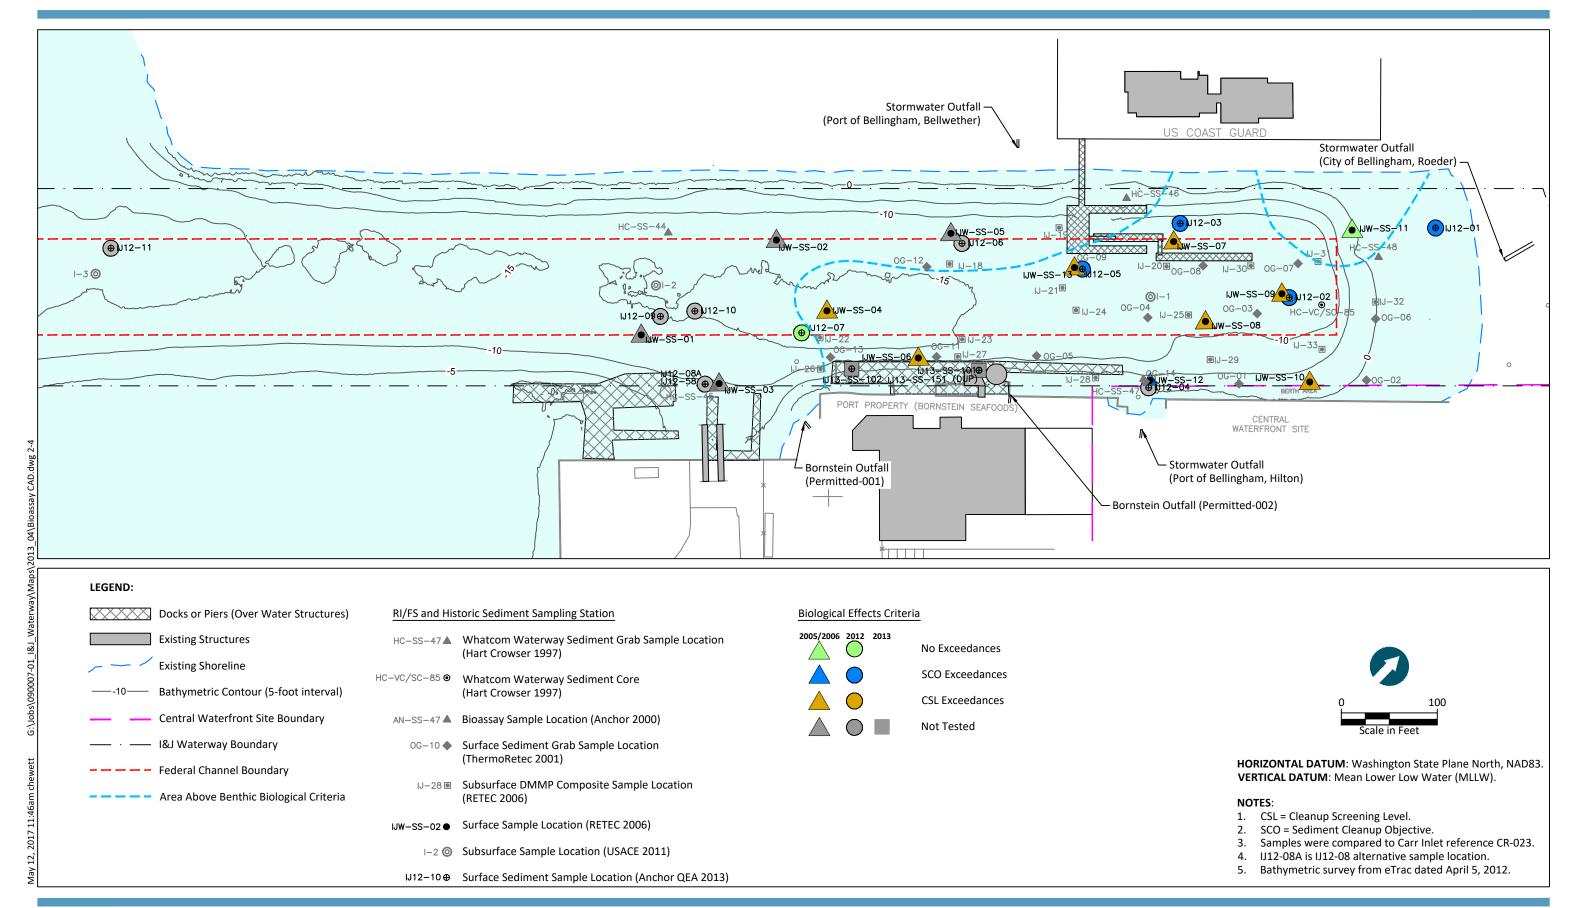




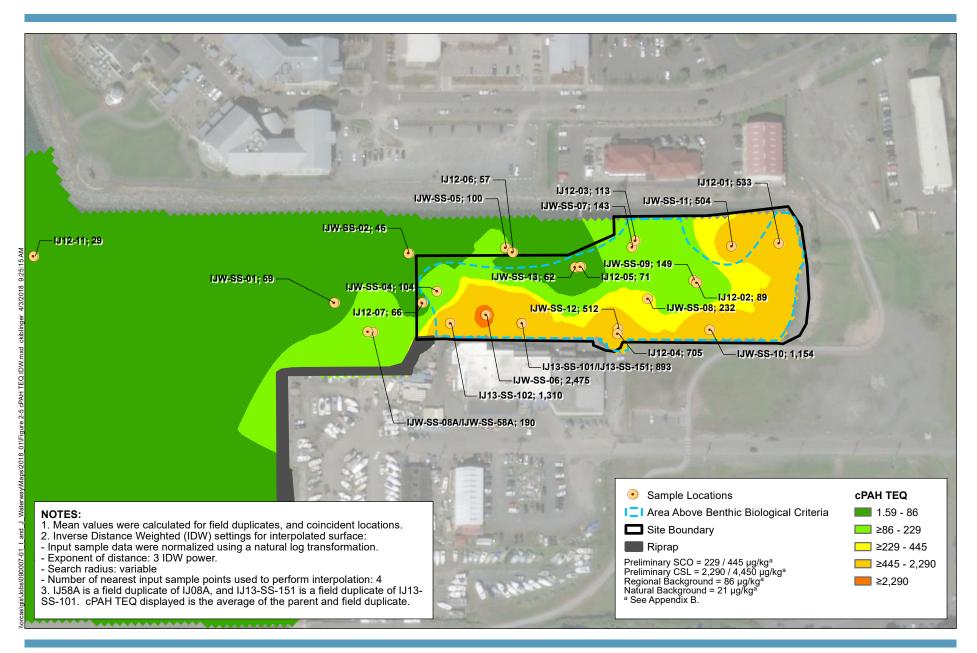




Port of Bellingham

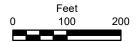












Appendix B Inadvertent Discovery Plan

IJ SCU2 PRDIWP 08-02-2024 6-4



Cultural Resource Consultants

MIDP 1908I-2

DATE: April 6, 2020

TO: Jamie Stevens

Crete Consulting

FROM: Margaret Berger, Principal Investigator

RE: Archaeological Monitoring and Inadvertent Discovery Plan for the I & J

Waterway Cleanup Site Project, Bellingham, Whatcom County, Washington

DAHP Project: 2018-11-08882 ECY

The attached short report form constitutes our archaeological monitoring and inadvertent plan for the above referenced project. Preliminary background research did not identify any previously recorded archaeological sites within the project location but identified one historic dock determined not eligible for listing on historic registers. No further work is required for the dock. Please contact our office should you have any questions about our findings and/or recommendations.

CULTURAL RESOURCES REPORT COVER SHEET

Author:	<u>Sonja Kleinschmidt</u>					
Title of Report:	Archaeological Monitoring and Inadvertent Discovery Plan for the I & J Waterway Cleanup Site Project, Bellingham, Whatcom County, Washington					
Date of Report:	April 6, 2020					
County(ies):	<u>Whatcom</u>	Section: 25	Township: 38 N	Range: <u>02 E</u>		
	Quad: Bellingham I	North, WA	Acres: 3.1			
PDF of report subm	nitted (REQUIRED)	Yes				
Historic Property Inventory Forms to be Approved Online? Yes No						
Archaeological Site(s)/Isolate(s) Found or Amended? ☐ Yes ⊠ No						
TCP(s) found? ☐ Yes ⊠ No						
Replace a draft?	Yes No					
Satisfy a DAHP Arc	haeological Excavat	tion Permit rec	juirement? ☐ Yes	# No		
Were Human Rema	ains Found? Yes	DAHP Case #	No No			
DAHP Archaeologio	cal Site #:	0.1	(555)			

- Submission of PDFs is required.
- Please be sure that any PDF submitted to DAHP has its cover sheet, figures, graphics, appendices, attachments, correspondence, etc., compiled into one single PDF file.
- Please check that the PDF displays correctly when opened.

Archaeological Monitoring and Inadvertent Discovery Plan for the I & J Waterway Cleanup Site Project, Bellingham, Whatcom County, Washington

Table of Contents

Man	agement Summary	•••
	Administrative Data	
1.1		
1.2	2 Research Design	
1.3		
1.4	4 Anticipated Project Impacts	
1.5		
1.6		
1.6	6.1 Archaeological Predictive Model	:
1.6	6.2 Archaeological Expectations	
2.0	Archaeological Resources Monitoring Protocols	•••
2.1	1 Archaeological Team Qualifications and Structure	
2.2		
2.3	- 6	
2.3	3.1 Approaches	
2.3	3.2 General Archaeological Monitoring Techniques	
2.3	3.3 Revision of Monitoring Level of Effort	6
3.0	Inadvertent Discoveries and Treatment of Archaeological Resources	
4.0	Communications and Reporting	
4.]		
4.2		
4.3		
4.4	8	
4.5	\mathcal{F}	
4.6	8 1	
4.7	,	
5.0	Archaeological Resources Collection and Curation	8
6.0	Limitations of this Assessment	
7.0	References	
8.0	Figures and Tables	
	chment A. Inadvertent Discovery Protocol	
Atta	chment R. Archaeological Monitoring Form	31

Management Summary

This report describes the Archaeological Monitoring and Inadvertent Discovery Plan for the I & J Waterway Cleanup Site Project, Bellingham, Whatcom County, Washington. This project entails remedial in-water and upland soil borings which may be advanced to 60 feet below surface and dredging of 18,000 cubic yards of contaminated sediment at the I & J Waterway Cleanup Site. Cursory background research conducted by Cultural Resource Consultants, LLC (CRC) did not result in the identification of previously recorded archaeological sites within the project location. However, a dock (Property ID: 717568) has been recorded in the project location but was determined not eligible for listing on historic registers and requires no further work. Based on review of available project information, the proposed project actions have a low probability to encounter precontact deposits and a low probability to encounter significant (i.e. intact) historic era deposits. In addition, a majority of ground disturbing activities will be within fill material and marine sediments submerged in Bellingham Bay. An archaeological monitoring plan is outlined, and an WA Department of Ecology compliant inadvertent discovery protocol is provided.

1.0 Administrative Data

1.1 Overview

Report Title: Archaeological Monitoring and Inadvertent Discovery Plan for the I & J Waterway Cleanup Site Project, Bellingham, Whatcom County, Washington

<u>Author (s):</u> Sonja Kleinschmidt

Report Date: April 6, 2020

<u>Location:</u> This project is located in the I & J Waterway in Bellingham Bay, between Hilton Avenue and Bellwether Way, Whatcom County, Washington.

<u>Legal Description</u>: The legal description for the project is Section 25, Township 38 North, Range 02 East, W.M.

<u>USGS 7.5' Topographic Map(s):</u> Bellingham North, WA (Figure 1).

Total Area Involved: 3.1 acres.

1.2 Research Design

CRC's work was intended, in part, to assist in addressing state regulations pertaining to the identification and protection of cultural resources (e.g., RCW 27.44, RCW 27.53). The Archaeological Sites and Resources Act (RCW 27.53) prohibits knowingly disturbing archaeological sites without a permit from the Department of Archaeology and Historic Preservation (DAHP), the Indian Graves and Records Act (RCW 27.44) prohibits knowingly disturbing Native American or historic graves. This project is subject to permitting under the State Environmental Policy Act (SEPA), which requires that impacts to cultural resources be considered during the public environmental review process. Under SEPA, the DAHP is the sole agency with technical expertise in regard to cultural resources and provides formal opinions to

local governments and other state agencies on a site's significance and the impact of proposed projects upon such sites.

CRC's review consisted of available project information and correspondence provided by the project proponent, local environmental and cultural information, and historical maps. This assessment utilized a research design that considered previous studies, the magnitude and nature of the undertaking, the nature and extent of potential effects on historic properties, and the likely nature and location of historic properties within the project, as well as other applicable laws, standards, and guidelines (per 36CFR800.4 (b)(1)) (DAHP 2019a).

1.3 Project Description

The WA Department of Ecology has prepared a cleanup action plan to address contamination at the I & J Waterway. Pre-remedial work includes the advancement of soils borings to a depth of 60 feet below surface. The remediation plan includes:

- Dredging about 18,000 cubic yards of contaminated sediment with disposal at a permitted landfill. The sediment removal requires replacement of the existing dock and bulkhead.
- Capping a 0.7-acre area of contaminated sediment with clean material to isolate the sediment.
- Monitoring a 1.1-acre area where clean material from the Nooksack River is naturally capping contaminated sediment. This will verify that contaminant levels continue to decrease.
- Monitoring following construction to ensure that cleanup activities addressed the contamination.
- Restricting activities on about 2 acres to prevent disturbance of the capped areas.

For purposes of this assessment, the project location for cultural resources is considered to contain the locations of all project elements as described above and as shown in Figures 1-4.

1.4 Anticipated Project Impacts

As part of pre-remediation efforts, soil borings are anticipated to be advanced to a maximum depth of 60 feet below surface within the project location. Remediation ground disturbance is expected to include dredging 18,000 cubic yards of contaminated sediment in the waterway/berthing area. Expected depths of dredging have yet to be determined.

1.5 Project Context

The project is located along the shoreline of Bellingham Bay northwest of the downtown of the City of Bellingham. The project can be described as a developed industrial shoreline that has been historically modified. Much of the project is located at or below sea level while the surrounding upland is 4 to 5 meters above sea level. The project is owned by the Port of Bellingham and the State of Washington.

As summarized by the WA Department of Ecology (2019), the project contains contaminated marine sediments in the waterway as well as the nearby ship-berthing areas. The contamination in the project location has resulted from industrial shoreline activities. Historically, the project and vicinity had been used for lumber mill operations from the early 1900s through 1972, as a rock-crushing plant from 1963 to 1992, a frozen food processing plant from 1946 to 1959, and a seafood processing plant since 1959.

Mapped surface geology along the shoreline portions of the project consists of Pleistocene continental glacial drift (Qgd) (WA DNR 2019). This unit is described as Pleistocene till and outwash clay, silt, sand, gravel, cobbles, and boulders deposited by or originating from continental glaciers. Variations are present within this unit and could consist of modified land or artificial fills. Sediments mapped landward of the shoreline are composed of Urban Land (USA NRCS 2019) indicating that filling has occurred.

The cadastral survey from 1860 and the coast survey from 1887 depict the project as waterward of the historic shoreline (USCG 1887; USSG 1860; Figure 5). A cursory review of historic imagery available from 1972 shows that in this year the southeastern shoreline of the project was similar to present day with two docks present (NETR 2019). The northwestern shoreline was nonexistent at this time and was characterized by water and tideflats. By 1981, the northwestern shoreline had been constructed with fill material and had the same footprint as present day though no infrastructure was visible until the 1998 imagery. The southeast shoreline remained similar to 1972 and 1981 conditions in 1998. In the 2006 imagery, the dock on the northwest shoreline is visible. Imagery from 2006 to present shows the project in the same general condition with some changes in development to the surrounding upland.

A review of the DAHP WISAARD provided information regarding the presence and nature of cultural resources recorded within one mile of the project (DAHP 2019b). No cultural resources assessments have been conducted within the project location and archaeological sites have not been recorded within the project. The Bornstein Dock (Property ID: 717568) has been recorded in the project location but was determined not eligible for listing on historic registers and requires no further work. Numerous historic register listed properties and districts have been recorded within one mile of the project and dozens of historic structures have been inventoried in one mile of the project with many determined eligible, determined not eligible, or not formally evaluated for listing on historic registers. Due to the scope and nature of the proposed project, none of these resources are anticipated to be affected. Precontact and historic era archaeological sites are present along the shoreline of Bellingham Bay and are located to the southwest and northeast of the project with all at distances over 0.30 mile away. Recorded precontact sites are typically shell midden sites (e.g., 45HW740) located along the historic shoreline. Historic era archaeological sites include the remains of landfills (e.g., 45WH929), remains of maritime sites such as shipyards (e.g., 45WH757), or shoreline remains such as pilings (e.g., 45WH838).

1.6 Archaeological Expectations

1.6.1 Archaeological Predictive Model

The DAHP statewide predictive model uses environmental data about the locations of known archaeological sites to identify where previously unknown sites are more likely to be found. The model correlates locations of known archaeological data to environmental data "to determine the probability that, under a particular set of environmental conditions, another location would be expected to contain an archaeological site" (Kauhi and Markert 2009:2-3). Environmental data categories included in the model are elevation, slope, aspect, distance to water, geology, soils, and landforms. According to the model, the project location is ranked as "Survey Highly Advised: Very High Risk."

1.6.2 Archaeological Expectations

This assessment considers the implications of the predictive model coupled with an understanding of geomorphological context, local settlement patterns, and post-depositional processes to characterize the potential for archaeological deposits to be encountered. Historically, the project was located waterward of the existing shoreline. During the 1900s, successive fill episodes reclaimed the tidelands including the project location. Industrial development and later commercial development subsequently spread into the area. Historically the project was used for a variety of industrial uses from a lumber mill, a rock-crushing plant, a frozen food processing plant, and a seafood processing plant.

Recorded precontact sites in proximity to the project are located along the historic ca. 1860s shoreline, landward of the proposed project location. Archaeological deposits that may be present in the project location are anticipated to date to the historic period based on a review of locally recorded archaeological sites; however, it is not expected that significant (i.e. intact) historic deposits will be present within the project location. As discussed by previous researchers, the historic-era resources most likely to be found in the project location are types that were previously determined not to meet eligibility criteria for listing in the NRHP (Miss et al. 2010:75). These kinds of resources included:

- pilings, decking, trestle, ballast, and railroad track and ties, unless of clearly unusual construction;
- remains of infrastructure including abandoned utilities, portions of seawall, and brick or planked roadways, unless of clearly unusual construction;
- mass deposits of wood, lumber, coal, or cinders;
- loose bricks, mortar, or other architectural materials; and
- historic-period materials within unstratified dredge spoils or regraded fill that is not associated with a feature or stable surface.

Resources that could be considered to be significant would be those identified within intact strata and may consist of foundations and/or quantities of artifacts that could be linked with historic companies or individuals.

Based on review of the project location, excavation is expected to be within fill deposits of varying ages and marine sediments present below fill material. Historic materials could be identifiable within fill deposits or within the upper margins of marine sediments. Precontact materials could be present at the interface of fill and marine sediments or within the upper layers of marine sediments and would likely have been lost or discarded during resource procurement or could represent older deposits prior to the stabilization of modern sea levels. The project is anticipated to have a low potential to contain precontact deposits and a low potential to contain historic era deposits. As such, it is not anticipated that projects actions will have an impact on potentially significant (i.e. intact) archaeological deposits.

2.0 Archaeological Resources Monitoring Protocols

2.1 Archaeological Team Qualifications and Structure

The Project Archaeologist will oversee the implementation of the Monitoring and Inadvertent Discovery Plan (MIDP) and day-to-day operations of archaeological monitoring. Archaeological Monitors will be overseen by the Project Archaeologist who meets the National Park Service, Department of the Interior qualifications for professional archaeologists set forth in the Federal

Register (1983, Volume 48, No. 190:44739). All Archaeological Monitors will be capable of providing cultural resource orientation to construction personnel.

2.2 Health and Safety

The Port of Bellingham and WA Department of Ecology, or designee, will furnish a copy of the site Health and Safety Plan for review by the Project Archaeologist. All archaeological monitors will be furnished a copy of the HASP for review. Port of Bellingham and WA Department of Ecology, or its designee, will provide all necessary and appropriate orientation and training regarding site-specific safety procedures and hazards. Archaeological Monitors will abide by OSHA regulations and all additional site safety requirements at all times. Only HAZWOPER-certified archaeological staff will be permitted to work in areas where there is a probability for or verified the presence of hazardous waste. If archaeological resources are found in association with hazardous waste, HAZWOPER-certified archaeological staff will make a decision regarding the extent of examination feasible and warranted for evaluation of the resource. Safety concerns will take precedence at all times during the monitoring process.

2.3 Archaeological Monitoring

Archaeological monitoring will be conducted according to one of two approaches – On-Site or On-Call. Areas to be monitored will be verified on final construction plans by the Project Archaeologist. If new work elements are added to the project, these will be assessed for their potential for encountering cultural resources prior to implementation. Archaeological monitoring approaches may be revised during the duration of the project (see Section 2.3.3).

2.3.1 Approaches

On-Site Monitoring

On-Site monitoring requires the Archaeological Monitor to be physically present during construction ground disturbance. Construction ground disturbance may not occur in areas/depths identified for On-Site monitoring without an Archaeological Monitoring being present.

On-Call Monitoring

An Archaeological Monitor will be available on an On-Call basis in the event that possible archaeological resources are discovered during ground disturbing activities when an archaeologist is not present. The Project Archaeologist will attempt to evaluate the discovery using available information, including verbal descriptions and photos, before a site visit is conducted.

2.3.2 General Archaeological Monitoring Techniques

Archaeological monitoring will entail having an archaeologist present during ground-disturbing activities with the potential to expose native soils, such as excavation. The goal of monitoring is to observe subsurface conditions and identify any buried precontact or historic-era archaeological materials or human remains that may be encountered. Monitoring will be performed by or under the supervision of a "professional archaeologist" (RCW 27.53.030 (8)).

The Archaeological Monitor will observe ground-disturbing activities. The Archaeological Monitor would stand in close proximity to construction equipment in order to view subsurface deposits as they are exposed and would be in close communication with equipment operators to ensure adequate opportunity for observation and documentation. The archaeologist will be

provided the opportunity to screen excavated sediments and matrix samples when this is judged useful to the identification process and it is safe to do so. If cultural materials are observed in spoils piles, it is expected that these would be removed for examination and that the opportunity to screen spoil sediments would be available. It is assumed an approximately 10 by 10 foot area will be provided for the archaeologist to conduct screening as warranted. Monitoring of construction will proceed until the specified ground-disturbing work requiring archaeological monitoring is complete or until it is determined by the Project Archaeologist, WA Department of Ecology, and Port of Bellingham, that project activities have a low probability to encounter significant cultural resources. It is not expected that monitoring will occur within sediments that have been previously excavated and observed by the Archaeological Monitor.

Detailed protocols for treatment of archaeological or human remains discoveries are included below.

Archaeological Monitors will keep a log of monitoring activities and observations (Attachment B) for each day on which monitoring is conducted. Archaeological Monitors will wear appropriate personal protection equipment (PPE) at all times, and have appropriate archaeological equipment, including camera and phone (or smartphone), shovel and trowel, ¼-inch screen, flagging/pin flags, tarp, bags, ruler/tape measure, and monitoring logs. Archaeological Monitors will have a copy of the MIDP and site Health and Safety Plan while on site.

2.3.3 Revision of Monitoring Level of Effort

Based on monitoring results, the Project Archaeologist will reevaluate the level of monitoring and recommend to the Designated Project Manager any changes in level of monitoring effort for specific locations/layers; decreases in monitoring effort will require consensus between Project Archaeologist, Designated Project Manager, Port of Bellingham, and WA Department of Ecology.

3.0 Inadvertent Discoveries and Treatment of Archaeological Resources

A WA Department of Ecology inadvertent discovery plan has been prepared for this project and is provided in this document as Attachment A and will be used in the unlikely event of a discovery.

4.0 Communications and Reporting

The following discussion outlines communication procedures to address cultural resource matters that arise during project ground disturbance and complete DAHP compliant reporting.

4.1 **Pre-Construction Meeting**

The Project Archaeologist or Monitoring Archaeologist will attend a pre-construction meeting with representatives of Port of Bellingham, WA Department of Ecology, contractor project managers, and construction supervisors involved in ground disturbing activities. It is anticipated that this meeting will serve to 1) review construction plans, schedules, and areas where monitoring will take place; 2) describe the role of archaeological monitoring in the construction process; and 3) identify notification procedures.

4.2 Final Construction Plan Review

Prior to construction, the Project Archaeologist will review the final construction plans to verify construction activities requiring archaeological monitoring and identify any locations of particular concern or archaeological sensitivity. If changes are required, the Project Archaeologist will consult with the Designated Project Manager, the Port of Bellingham, and WA Department of Ecology,

4.3 Pre-Construction Orientation

The Project Archaeologist or Archaeological Monitor will conduct a pre-construction cultural resources orientation for Port of Bellingham construction managers and retained subcontractor construction managers and personnel. The purpose of the orientation will be to discuss cultural resources protocols set forth in the monitoring and inadvertent discovery protocol and to establish working communications between project personnel.

4.4 On-Going Communication

The Project Archaeologist will remain in regular communication with the Designated Project Manager and construction personnel during the monitoring process in person or by email and phone. The Designated Project Manager (or designee) will provide current project schedules and plans to the Project Archaeologist as they are updated. When on-site, Archaeological Monitors will communicate with the Designated Project Manager to make general requests about equipment movement, placement of spoils for examination, access to exposures, and temporary halts in excavation to examine potential archaeological resources.

4.5 Weekly Progress Summaries

The Project Archaeologist will email a progress summary of monitoring activities to the Designated Project Manager and all consulting parties each week monitoring occurs. The summary will be based upon the daily log of activities and finds submitted by Archaeological Monitors.

4.6 Monitoring Report

Daily archaeological monitoring logs will be completed each day monitoring is provided. Logs will include the date, name of archaeological monitor, weather/visibility conditions, components of the project monitored, a survey narrative, and figures and tables describing the observed sediments and, if identified, cultural materials or deposits. Upon completion of the project, monitoring results will be summarized in a report and provided to the Project Prime. Following review, the report will be submitted to the Port of Bellingham and WA Department of Ecology, who will submit the report to DAHP. The report will provide a summary of the results of monitoring, illustrated with maps, drawings, and photographs as appropriate with the daily logs appearing as an appendix. The Designated Project Manager will provide due dates for the draft and final technical memorandums, inclusive of one round of consolidated comments.

4.7 Dissemination of Communications

The Designated Project Manager will keep all other consulting parties informed, as appropriate. Consultation among the Port of Bellingham, WA Department of Ecology, State Historic Preservation Officer (SHPO), Tribal Governments, and other entities will be initiated under the circumstances previously noted concerning the discovery of burials or sites that are potentially eligible for inclusion in the NRHP. All consultation will be accomplished in a manner consistent

with the guidance in 36 CFR Part 800. The Project Archaeologist will be informed of decisions made during the consulting process.

5.0 Archaeological Resources Collection and Curation

Archaeological resources (i.e., artifacts, features, and environmental indicators of cultural presence) encountered during monitoring will be recorded on field forms. Artifacts, feature samples, and environmental samples will be collected and retained at the construction site in a secure on-site location (e.g., locking file cabinet). At the completion of monitoring, resources considered not eligible for listing on the NRHP will be disposed on-site by the Project Archaeologist. The disposition, including curation, of resources that are eligible or potentially eligible for listing on the NRHP will be determined by WA Department of Ecology in consultation with DAHP and other consulting parties.

6.0 Limitations of this Assessment

No cultural resources study can wholly eliminate uncertainty regarding the potential for prehistoric sites, historic properties or traditional cultural properties to be associated with a project. The information presented in this report is based on professional opinions derived from our analysis and interpretation of available documents, records, literature, and information identified in this report, and on our field investigation and observations as described herein. Conclusions and recommendations presented apply to project conditions existing at the time of our study and those reasonably foreseeable. The data, conclusions, and interpretations in this report should not be construed as a warranty of subsurface conditions described in this report. They cannot necessarily apply to site changes of which CRC is not aware and has not had the opportunity to evaluate.

7.0 References

Kauhi, T. C., and J. Markert

2009 Washington Statewide Archaeology Predictive Model. GeoEngineers. Submitted to DAHP, Olympia.

Miss, C. J., L. Hudson, S. A. Boswell, and R. M. Weaver

2010 SR 99: Alaskan Way Viaduct Moving Forward Projects Archaeological Treatment Plan: South Holgate Street to South King Street. Prepared for Washington State Department of Transportation, Olympia, WA. Prepared by Northwest Archaeological Associates, Inc., and Environmental History Company, Seattle, WA

Nationwide Environmental Title Research, LLC (NETR)

2019 Historic Aerials. Electronic Resource, http://www.historicaerials.com/?javascript, accessed September 9, 2019.

United States Coast Geodetic Survey

1887 Sheet No. 9 Topography of Rosario Strait W. T. Part of Bellingham Bay. Register No. 1798.

- United States Department of Agriculture Natural Resources Conservation Service (USDA NRCS)
 - 2019 Web Soil Survey, Washington. Electronic resource, http://websoilsurvey.nrcs.usda.gov/app/WebSoilSurvey.aspx, accessed September 9, 2019.
- United States Surveyor General (USSG)
 - 1860 General Land Office Cadastral Survey Plat Map, Township 38 North, Range 02 East, Willamette Meridian.
- Washington State Department of Archaeology and Historic Preservation (DAHP)
 - 2019a Washington State Standards for Cultural Resources Reporting 2018. On file at DAHP, Olympia.
 - 2019b Washington Information System for Architectural and Archaeological Records Data (WISAARD) database. Electronic resource, https://secureaccess.wa.gov/dahp/wisaard/, accessed September 9, 2019.
- Washington State (WA) Department of Ecology
- 2019 I & J Waterway. Electronic document, https://apps.ecology.wa.gov/gsp/Sitepage.aspx?csid=2012, accessed September 9, 2019.
- Washington State Department of Natural Resources (WA DNR)
 - 2019 Washington Interactive Geologic Map. Division of Geology and Earth Resources Washington's Geological Survey. Electronic resource, https://geologyportal.dnr.wa.gov/, accessed September 9, 2019.

8.0 Figures and Tables



Figure 1. USGS Bellingham North, WA 7.5-minute quadrangle annotated with the location of the project in red.



Figure 2. Satellite imagery annotated with the project location in red.

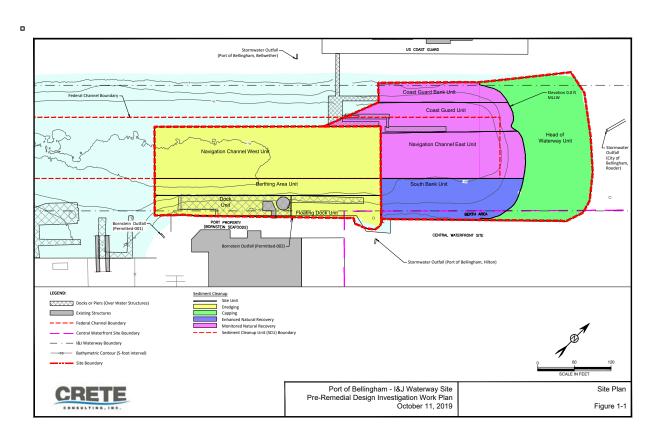


Figure 3. Project plans provided by Crete Consulting, Inc. depicting the types and extents of sediment cleanup. As shown on the plans, dredging will occur in the deepest portion of the project.

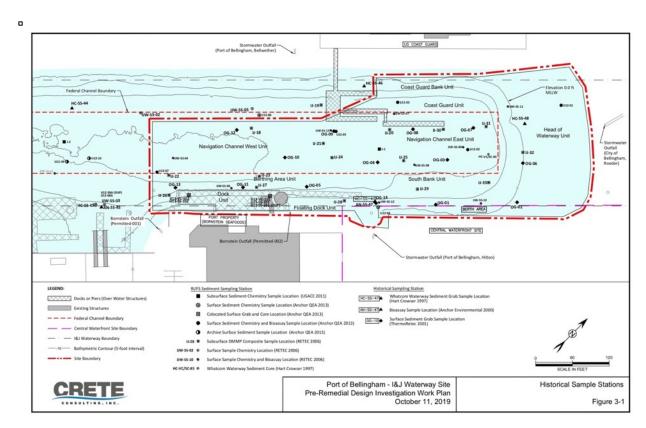


Figure 4. Project plans provided by Crete Consulting, Inc. depicting the locations of the proposed borings.

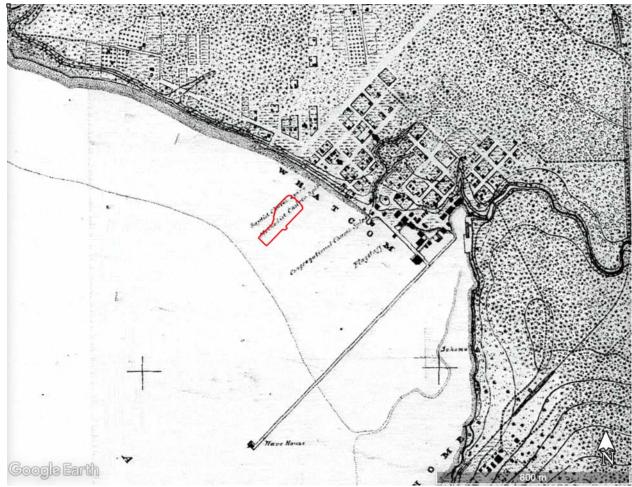


Figure 5. U.S. Coast Geodetic Survey map from 1887 depicting the project in Bellingham Bay.

PLAN AND PROCEDURES FOR THE UNANTICIPATED DISCOVERY OF CULTURAL RESOURCES AND HUMAN SKELETAL REMAINS¹

PROJECT TITLE: I & J Waterway Cleanup Site

COUNTY WASHINGTON: Bellingham, Whatcom County, WA

Section, Township, Range: S 25, T 38 N, R 02 E

1. INTRODUCTION

The following Inadvertent Discovery Plan (IDP) outlines procedures to perform in the event of discovering archaeological materials or human remains, in accordance with state and federal laws.

2. RECOGNIZING CULTURAL RESOURCES

A cultural resource discovery could be prehistoric or historic. Examples include:

- a. An accumulation of shell, burned rocks, or other food related materials.
- b. Bones or small pieces of bone.
- c. An area of charcoal or very dark stained soil with artifacts.
- d. Stone tools or waste flakes (i.e. an arrowhead. or stone chips).
- e. Clusters of tin cans or bottles, logging or agricultural equipment that appears to be older than 50 years.
- f. Buried railroad tracks, decking, or other industrial materials.

When in doubt, assume the material is a cultural resource.

3. ON-SITE RESPONSIBILITIES

STEP 1: *Stop Work*. If any employee, contractor or subcontractor believes that he or she has uncovered a cultural resource at any point in the project, all work must stop immediately. Notify the appropriate party(s). Leave the surrounding area untouched, and provide a demarcation adequate to provide the total security, protection, and integrity of the discovery. The discovery location must be secured at all times by a temporary fence or other onsite security.

STEP 2: Notify Archaeological Monitor or Licensed Archaeologist. If there is an Archaeological Monitor for the project, notify that person. If there is a monitoring plan in place, the monitor will follow the outlined procedure.

STEP 3: *Notify the Project Manager* of this project and contact the Ecology Staff Project Manager, or other applicable contacts:

0

Project Manager: Crete Consulting

Name: Ben Starr, PE Phone: 206-715-9488

Email:ben.starr@creteconsulting.com

Ecology Staff Project Manager

Name: Julia Schwarz Phone:425-6515-5992

Email:lulia.schwarz@ecy.wa.gov

Assigned Alternates:

Assigned Project Manager Alternate:	Ecology Cultural Resource
Name:	Specialist:
Phone:	Name: Jon Klem
Email:	Phone: 206-556-5584
	email: jon.klem@ecy.wa.gov

The Project Manager or applicable staff will make all calls and necessary notifications. **If human remains are encountered**, treat them with dignity and respect at all times. Cover the remains with a tarp or other materials (not soil or rocks) for temporary protection and to shield them from being photographed. **Do not call 911 or speak with the media. Do not take pictures unless directed to do so by DAHP. See Section 5.**

4. FURTHER CONTACTS AND CONSULTATION

A. Project Manager's Responsibilities:

- Protect Find: The Project Manager is responsible for taking appropriate steps to protect the discovery site. All work will stop immediately in a surrounding area adequate to provide for the complete security of location, protection, and integrity of the resource. Vehicles, equipment, and unauthorized personnel will not be permitted to traverse the discovery site. Work in the immediate area will not resume until treatment of the discovery has been completed following provisions for treating archaeological/cultural material as set forth in this document.
- Direct Construction Elsewhere on-Site: The Project Manager may direct construction away from cultural resources to work in other areas prior to contacting the concerned parties.
- Contact Senior Staff: If the Senior Staff person has not yet been contacted, the Project Manager must do so.

B. Senior Staff Responsibilities:

- Identify Find: The Senior Staff (or a delegated Cultural Resource Specialist), will
 ensure that a qualified professional archaeologist examines the area to determine if
 there is an archaeological find.
 - If it is determined not to be of archaeological, historical, or human remains, work may proceed with no further delay.
 - If it is determined to be an archaeological find, the Senior Staff or Cultural Resource Specialist will continue with all notifications.

- o If the find may be human remains or funerary objects, the Senior Staff or Cultural Resource Specialist will ensure that a qualified physical anthropologist examines the find. If it is determined to be human remains, the procedure described in Section 5 will be followed.
- Notify DAHP: The Senior Staff (or a delegated Cultural Resource Specialist) will contact the involved federal agencies (if any) and the Washington Department of Archaeology and Historic Preservation (DAHP).
- Notify Tribes: If the discovery may be of interest to Native American Tribes, the DAHP and Ecology Supervisor or Coordinator will coordinate with the interested and/or affected tribes.

General Contacts

Federal Agencies:

State Agencies:

Agency:	Agency:
Name	Name
Title	Title
Number	Number
Email	Email

Department of Archaeology and Historic Preservation:

D	r. Allyson Brooks	Rob Whitlam, Ph.D.
St	ate Historic Preservation Officer	Staff Archaeologist
36	60-586-3066	360-586-3080
A	ssigned Alternate:	Assigned Alternate:

The DAHP or appropriate Ecology Staff will contact the interested and affected Tribes for a specific project.

Tribes consulted on this project are:

Lummi Nation	Upper Skagit Tribe
Lena Tso	Scott Schuyler
ТНРО	Cultural Resources
360-312-2257	360-854-7009
lenat@lummi-nsn.gov	sschuyler@upperskagit.com
Swinomish Indian Tribal Community	Nooksack Tribe
Larry Campbell	Trevor Delgado
THPO	THPO
360-466-7314	360-592-5176 ext. 3234

lcampbell@swinomish.nsn.us	tdelgado@nooksack-nsn.gov

Further Activities

- Archaeological discoveries will be documented as described in Section 6.
- Construction in the discovery area may resume as described in Section 7.

5. SPECIAL PROCEDURES FOR THE DISCOVERY OF HUMAN SKELETAL MATERIAL

Any human skeletal remains, regardless of antiquity or ethnic origin, will at all times be treated with dignity and respect. Do not take photographs by any means, unless you are pre-approved to do so.

If the project occurs on federal lands or receives federal funding (e.g., national forest or park, military reservation) the provisions of the Native American Graves Protection and Repatriation Act of 1990 apply, and the responsible federal agency will follow its provisions. Note that state highways that cross federal lands are on an easement and are not owned by the state.

If the project occurs on non-federal lands, the Project Manager will comply with applicable state and federal laws, and the following procedure:

A. In all cases you must notify a law enforcement agency or Medical Examiner/Coroner's Office:

In addition to the actions described in Sections 3 and 4, the Project Manager will immediately notify the local law enforcement agency or medical examiner/coroner's office.

The Medical Examiner/Coroner (with assistance of law enforcement personnel) will determine if the remains are human, whether the discovery site constitutes a crime scene, and will then notify DAHP.

Enter contact information below:

Chief David Doll, Bellingham Police Department 360-778-8800

B. Participate in Consultation:

Per RCW 27.44.055, RCW 68.50, and RCW 68.60, DAHP will have jurisdiction over non-forensic human remains. Ecology staff will participate in consultation.

C. Further Activities:

- Documentation of human skeletal remains and funerary objects will be agreed upon through the consultation process described in RCW 27.44.055, RCW 68.50, and RCW 68.60.
- When consultation and documentation activities are complete, construction in the discovery area may resume as described in Section 7.

6. DOCUMENTATION OF ARCHAEOLOGICAL MATERIALS

Archaeological deposits discovered during construction will be assumed eligible for inclusion in the National Register of Historic Places under Criterion D until a formal Determination of Eligibility is made.

Project staff will ensure the proper documentation and field assessment will be made of any discovered cultural resources in cooperation with all parties: the federal agencies (if any), DAHP, Ecology, affected tribes, and a contracted consultant (if any).

All prehistoric and historic cultural material discovered during project construction will be recorded by a professional archaeologist on a cultural resource site or isolate form using standard and approved techniques. Site overviews, features, and artifacts will be photographed; stratigraphic profiles and soil/sediment descriptions will be prepared for minimal subsurface exposures. Discovery locations will be documented on scaled site plans and site location maps.

Cultural features, horizons and artifacts detected in buried sediments may require further evaluation using hand-dug test units. Units may be dug in controlled fashion to expose features, collect samples from undisturbed contexts, or to interpret complex stratigraphy. A test excavation unit or small trench might also be used to determine if an intact occupation surface is present. Test units will be used only when necessary to gather information on the nature, extent, and integrity of subsurface cultural deposits to evaluate the site's significance. Excavations will be conducted using state-of-the-art techniques for controlling provenience, and the chronology of ownership, custody and location recorded with precision.

Spatial information, depth of excavation levels, natural and cultural stratigraphy, presence or absence of cultural material, and depth to sterile soil, regolith, or bedrock will be recorded for each probe on a standard form. Test excavation units will be recorded on unit-level forms, which include plan maps for each excavated level, and material type, number, and vertical provenience (depth below surface and stratum association where applicable) for all artifacts recovered from the level. A stratigraphic profile will be drawn for at least one wall of each test excavation unit.

Sediments excavated for purposes of cultural resources investigation will be screened through 1/8-inch mesh, unless soil conditions warrant 1/4-inch mesh.

All prehistoric and historic artifacts collected from the surface and from probes and excavation units will be analyzed, catalogued, and temporarily curated. Ultimate disposition of cultural materials will be determined in consultation with the federal agencies (if any), DAHP, Ecology and the affected tribes.

Within 90 days of concluding fieldwork, a technical report describing any and all monitoring and resultant archaeological excavations will be provided to the Project Manager, who will forward the report for review and delivery to Ecology, the federal agencies (if any), DAHP, and the affected tribe(s).

If assessment activity exposes human remains (burials, isolated teeth, or bones), the process described in Section 5 will be followed.

7. PROCEEDING WITH WORK

Work outside the discovery location may continue while documentation and assessment of the cultural resources proceed. A professional archaeologist must determine the boundaries of the discovery location. In consultation with Ecology, DAHP and any affected tribes, the Project Manager will determine the appropriate level of documentation and treatment of the resource. If there is a federal nexus, Section 106 consultation and associated federal laws will make the final determinations about treatment and documentation.

Work may continue at the discovery location only after the process outlined in this plan is followed and the Project Manager, DAHP, any affected tribes, Ecology (and the federal agencies, if any) determine that compliance with state and federal law is complete.

8. RECIPIENT/PROJECT PARTNER RESPONSIBILITY

The Project Recipient/Project Partner is responsible for developing an IDP. The IDP must be immediately available onsite, be implemented to address any discovery, and be available by request by any party. The Project Manager and staff will review the IDP during a project kickoff or pre-construction meeting.

We recommend that you print images in color for accuracy.

You see chipped stone artifacts.



- Glass-like material
- Angular
- "Unusual" material for area
- "Unusual" shape
- Regularity of flaking
 - Varia



You see ground or pecked stone artifacts.









- · Striations or scratching
- Unusual or unnatural shapes
- Unusual stone
- Etching
- Perforations
- Pecking
- Regularity in modifications
- Variability of size, function, and complexity

You see bone or shell artifacts.



- Often smooth
- Unusual shape
- Carved
- · Often pointed if used as a tool
- Often wedge shaped like a "shoehorn"



You see bone or shell artifacts.



- Often smooth
- Unusual shape
- Perforated
- Variability of size



You see fiber or wood artifacts.



- Wet environments needed for preservation
- Variability of size, function, and complexity
- Rare





You see historic period artifacts.







You see strange, different or interesting looking dirt, rocks, or



- Human activities leave traces in the ground that may or may not have artifacts associated with them
- "Unusual" accumulations of rock (especially fire-cracked rock)
- "Unusual" shaped accumulations of rock (e.g., similar to a fire ring)
- Charcoal or charcoal-stained soils
- Oxidized or burnt-looking soils
- · Accumulations of shell
- Accumulations of bones or artifacts
- Look for the "unusual" or out of place (e.g., rock piles or accumulations in areas with few rock)

You see strange, different or interesting looking dirt, rocks, or



- "Unusual" accumulations of rock (especially fire-cracked rock)
- "Unusual" shaped accumulations of rock (e.g., similar to a fire ring)
- Look for the "unusual" or out of place (e.g., rock piles or accumulations in areas with few rock)

You see strange, different or interesting looking dirt, rocks, or



You see historic foundations or buried structures.



10

Attachment B. Archaeological Monitoring Form.

TIME AND DATE:

DAILY ARCHAEOLOGICAL MONITORING LOG I & J WATERWAY CLEANUP SITE PROJECT CRC PROJECT NO. 1908I

	(D DITIE)			
MONITO	OR:			
PROJEC	T COMPON	ENT MONITOR	RED:	
GENERA	AL FIELD CO	ONDITIONS:		
ARCHA	EOLOGY OB	SERVED:		
NARRA	ΓIVE:			
Figure 1. Sa	atellite imagery a	nnotated with the test	ing locations.	
Figure 2. O	verview photogra	ph.		
Figures 3-4	. Representative s	sediments observed.		
Table 1 Da	positional contex	t absorped		
	Approximate	Location (WGS84	Start and it Description (death and first	A b l l
Project Element	Area Involved	Zone 10 UTM coordinates, +/- 3 meters)	Stratigraphic Description (depths are feet below surface)	Archaeological Material Found
		,		

Appendix C Quality Assurance Project Plan

IJ SCU2 PRDIWP 08-02-2024 6-5

Pre-Remedial Design Investigation Work Plan Appendix C: Quality Assurance Project Plan

I&J Waterway Sediment Cleanup Site

Project Number: 036-003

Prepared for:

Port of Bellingham

June 24, 2024



Prepared by:

Table of Contents

1	Introd	luction	1-1	
	1.1	Project Overview	1-1	
	1.2	Document Organization	1-1	
2	Projec	t Management	2-1	
	2.1	Project Organization	2-1	
	2.2	Project Definition and Background2-1		
	2.3	Project Description and Schedule	2-1	
	2.4	Data Quality Objectives and Criteria2-2		
		2.4.1 Precision	2-2	
		2.4.2 Accuracy	2-2	
		2.4.3 Representativeness	2-3	
		2.4.4 Comparability	2-3	
		2.4.5 Completeness		
	2.5	Special Training/Certifications		
	2.6	Documentation and Records		
3	Data (Generation and Acquisition	3-1	
	3.1	Sample Process Design	3-1	
	3.2	Analytical Sampling Methods, Handling and Custody	3-1	
		3.2.1 Sediment Samples		
		3.2.2 Sampling Handling		
		3.2.3 Chain of Custody		
	3.3	Analytical Quality Control		
	3.4	Instrument/Equipment Testing, Inspection and Maintenance		
	3.5	Instrument/Equipment Calibration and Frequency		
	3.6	Inspection/Acceptance of Supplies and Consumables		
	3.7	Non-Direct Measurements		
	3.8	Data Management		
4	Assess	sment and Oversight	4-1	
	4.1	Assessment and Response Actions		
	4.2	Reports to Management	4-2	
5	Data Validation and Usability5-1		5-1	

	5-1
	5-1
6	6-1
5	•••

List of Tables

Table 1	Roles and Responsibilities
Table 2	Sediment Laboratory Testing Program
Table 3	Sample Containers, Sample Preservation, and Holding Times
Table 4	Data Quality Objectives

1 Introduction

This Pre-Remedial Design Investigation (PRDI) Quality Assurance Project Plan (QAPP) presents the project organization, objectives, activities, and quality assurance (QA) procedures to be implemented during data collection activities to support remedial design for the cleanup action proposed by the Washington State Department of Ecology (Ecology) for sediment cleanup unit 2 (SCU-2) at the I&J Waterway Site (Site) in Bellingham, Washington. The specific data collection activities are detailed in the PRDI Work Plan (Work Plan). This QAPP is consistent with the QAPP for design of the sediment cleanup unit 1 (SCU-1) cleanup action, as approved by Ecology in April 2020 (CRETE 2020).

The QAPP was prepared following Ecology Guidance for Quality Assurance Project Plans (Lombard and Kirchmer 2004) and Ecology's Sediment Sampling and Analysis Plan Appendix (SAPA) guidance document (Ecology 2008). Analytical quality assurance/quality control (QA/QC) procedures were also developed based on the analytical protocols and quality assurance guidance of the Puget Sound Estuary Program (PSEP 1986; PSEP 1997a, b, and c), U.S. Environmental Protection Agency's (EPA's) Test Methods for the Evaluation of Solid Waste: Physical/Chemical Methods, 3rd Edition (EPA 1986), and the U.S. EPA Contract Laboratory Program National Functional Guidelines for Data Review (EPA 1999; EPA 2004).

1.1 Project Overview

A detailed project overview and project figure is provided in the PRDI Work Plan (CRETE 2024).

1.2 Document Organization

The remainder of this QAPP is organized into the following sections:

- Section 2 Project Management
- Section 3 Data Generation and Acquisition
- Section 4 Assessments and Oversite
- Section 5 Data Validation and Usability
- Section 6 References

A Sampling Analysis Plan (SAP) detailing the sample collection procedures is provided in Section 4 of the PRDI Work Plan.

2 Project Management

This section identifies key project personnel, describes the rationale for conducting the monitoring studies, identifies the studies to be performed and their respective schedules, outlines project data quality objectives and criteria, lists training and certification requirements for sampling personnel, and describes documentation and record-keeping procedures.

2.1 Project Organization

This project is being led by the Port, under the oversight of Ecology. This QAPP includes activities conducted for the I&J Sediment Cleanup Project.

The Port Project Manager is Ben Howard. The primary role of the Project Manager is to ensure compliance with the Agreed Order and other Ecology requirements. The Ecology Project Manager is Lucy McInerney.

The CRETE Consulting LLC (CRETE) Project Manager is Grant Hainsworth who is the direct line of communication between CRETE and the Port, and is responsible for implementing activities described in this QAPP. Grant will also be responsible for production of work plans, producing all project deliverables, and performing the administrative tasks needed to ensure timely and successful completion of these studies.

The organizational structure for the additional data collection activities will consist of the following key members: a Project Manager, Field Manager, Site Safety Officer, Quality Assurance Officer, and Data Validator. Additional members of the project team include, but are not limited to the laboratories, design team sub-consultants, and subcontractors. The responsibilities of project personnel are described in Table 1. In some cases one person may assume more than one role.

2.2 Project Definition and Background

The PRDI Work Plan (CRETE 2024) identified several data gaps such as base map, survey data, chemistry, and geotechnical data for the I&J Sediment Cleanup project. This QAPP focuses on the chemistry and geotechnical data needs for I&J Waterway SCU-2 project. The objectives and background information to address these needs are provided in the PRDI Work Plan.

2.3 Project Description and Schedule

Sampling activities described in the SAP will be initiated following Ecology's approval of this QAPP and as outlined in the Agreed Order. This QAPP includes work associated with the following field activities:

- Collection of Sediment Chemistry Samples
- Collection of Geotechnical Samples

2.4 Data Quality Objectives and Criteria

The overall data quality objective (DQO) for this project is to develop and implement procedures that will ensure the collection of representative data of known, acceptable, and defensible quality. The DQOs identified in this QAPP are identical to the DQOs identified in QAPP for design of the SCU-1 cleanup action (CRETE 2020).

2.4.1 Precision

Field precision is estimated by collecting field duplicate samples at a frequency specified in this QAPP for each matrix collected and measured. Laboratory precision and accuracy can be measured through the analysis of matrix spike/matrix spike duplicate (MS/MSD) samples, laboratory duplicate samples and/or laboratory control samples/duplicates (LCS/ LCSD). The laboratory will perform the analysis of one set of MS/MSD, LCS/LCSD and/or duplicate field samples per matrix measured at a frequency of one sample per 20 samples. Field and analytical precision will be evaluated by the relative percent difference (RPD) between field duplicate samples, laboratory duplicate samples; laboratory accuracy and precision will be determined by the spike recoveries and the RPDs of the MS/MSD and LCS/LCSD samples, respectively.

$$RPD = ABS(R1-R2) \times 100$$

 $(R1+R2)/2$

Where:

R1 = Sample result or recovery for spiked compound

R2 = Duplicate sample result or recovery for spiked compound duplicate

Field chemistry duplicate precision will be screened against a RPD of 50 percent for sediment samples and 35 percent for water samples. However, no data will be qualified based solely on field homogenization duplicate precision.

2.4.2 Accuracy

Accuracy is an expression of the degree to which a measured or computed value represents the true value. Accuracy may be expressed as a percentage of the true or reference value for reference material, or as a percent recovery in those analyses where reference materials are not available and spiked samples are analyzed. The equations used to express accuracy are as follows.

1. For reference materials:

Percent of true value = (measured value/true value) x 100

2. For spiked samples:

Percent recovery = $(SQ - NQ)/(S) \times 100$

SQ = quantity of spike or surrogate found in sample NQ = quantity found in native (unspiked) sample S = quantity of spike or surrogate added to native sample

Laboratory method reporting limits (MRL) are listed on Table 2.

2.4.3 Representativeness

Representativeness is the degree to which data from the project accurately represent a particular characteristic of the environmental matrix which is being tested. Representativeness of samples is ensured by adherence to standard field sampling protocols and standard laboratory protocols. The design of the sampling scheme and number of samples should provide a representativeness of each matrix or product of the chemical processes being sampled.

2.4.4 Comparability

Comparability expresses the confidence with which one data set can be evaluated in relation to another data set. For this investigation, comparability of data will be established through the use of program-defined general methods and reporting formats and the use of common, traceable calibration and reference materials from the National Institute of Standards and Technology or other established sources.

2.4.5 Completeness

Completeness is a measure of the amount of data that is determined to be valid in proportion to the amount of data collected. Completeness will be calculated as follows:

Completeness = (number of valid measurements/ total number of data points planned) x 100

Completeness will be calculated per matrix. The DQO for completeness for all components of this project is 90%. Data that have been qualified as estimated because the QC criteria were not met will be considered valid for the purpose of assessing completeness. Data that have been qualified as rejected will not be considered valid for the purpose of assessing completeness. The sediment chemical and physical testing will adhere to the most recent PSEP QA/QC procedures (PSEP 1997b) and PSEP analysis protocols.

2.5 Field Quality Control

Field quality control samples are useful in identifying problems resulting from sample collection or sample processing in the field related to chemistry samples. The field QC samples to be collected include field duplicates and sampling equipment rinsate blanks.

A duplicate sample will be collected from material homogenized from a field sample and submitted for the same analyses as the field samples to evaluate heterogeneity attributable to sample handling. A minimum of one field duplicate will be submitted per 20 field samples.

The RPD for homogenate duplicate samples will be within 75% for soil/sediment and within 50% for water.

At least one equipment rinsate sample will be collected after decontamination for every 20 soil and/or sediment samples collected. Equipment rinsate blanks will be collected for each type of sampling equipment that comes into contact with sample material. Duplicate and equipment rinsate samples will be analyzed for the same constituents as the environmental samples.

2.6 Special Training/Certifications

Specific training requirements for performing fieldwork, which may bring employees in contact with hazardous materials, are as follows:

- All field personnel assigned to the site must have successfully completed 40 hours
 of training for hazardous site work in accordance with Occupational Safety and
 Health Administration (OSHA) 29 Code of Federal Regulations (CFR) 1910.120(e)(3)
 and be current with their 8-hour refresher training in accordance with OSHA 29 CFR
 1910.120(e)(8). Documentation of OSHA training is required prior to personnel
 being permitted to work on site.
- Personnel managing or supervising work on site will also have successfully completed 8-hours of manager/supervisor training meeting the requirements of OSHA 29 CFR1910.120(e)(4).
- Personnel assigned to the site must be enrolled in a medical surveillance program
 meeting the requirements of OSHA 29 CFR 1910.120(f). Personnel must have
 successfully passed an occupational physical during the past 12 months and be
 medically cleared to work on a hazardous waste site and capable of wearing
 appropriate personal protective equipment (PPE) and respiratory protection as may
 be required.
- Personnel performing the sampling work must have extensive knowledge, skill, and demonstrated experience in the execution of the sampling methods.

2.7 Documentation and Records

Field investigators (including subcontractors) will maintain field notes in a bound notebook and all documents, records, and data collected will be kept in a case file in a secure records filing area. All Laboratory deliverables (both hard copy and electronic) with verifiable supporting documentation shall be submitted by the lab to the QA Officer. The following documents will be archived at the Laboratory: 1) signed hard copies of sampling and chain-of-custody records; and 2) electronic and hard copy of analytical data including extraction and sample preparation bench sheets, raw data and reduced analytical data. The laboratory

will store all laboratory documentation for sample receipt, sample login, sample extraction, cleanup and analysis and instrument output documentation per laboratory's Standard Operating Procedure (SOP) or QA Manual.

Copies of all analytical reports will be retained in the laboratory files, and at the discretion of the QA Officer, the data will be stored on computer disks for a minimum of 1 year. After one year, or whenever the data become inactive, the files will be transferred to archives in accordance with standard laboratory procedure. Data may be retrieved from archives upon request.

Copies of all sub-consultant field notes, field logs, sample collection logs, and field photographs will be sent to the Field Manager within 2 weeks of completion of the field task.

3 Data Generation and Acquisition

3.1 Sample Process Design

The rationale for the sampling design and assumptions for locating and selecting environmental samples is detailed in the SAP. The methods and procedures for collection of field samples are also provided in the SAP. All sampling will be conducted following standard procedures documented in the SAP.

3.2 Analytical Sampling Methods, Handling and Custody

3.2.1 Sediment Samples

Sediment samples will be submitted for analyses shown in Table 2. Select samples will also be submitted for physical testing, based on visual classification. Minimum sample sizes, containers, and preservation requirements are shown in Table 3. Cores will be removed from the boat and placed in an on-site trailer for detailed core logging, which includes bulk density, moisture content, pocket penetrometer and Torvane readings, and digital photographs. All samples from these cores will be archived.

Collected samples for chemistry will be thoroughly homogenized and distributed to sample containers. Organisms and debris will be removed prior to distribution to sample containers; removed materials will be noted in the field logbooks.

All sample containers will be labeled on the outside in indelible ink with the sample identification number, date and time collected, and analysis to be performed. Data quality indicators for sediment analysis are shown on Table 4.

3.2.2 Sampling Handling

Soil (from upland borings) and sediment sampling containers will be filled to minimize head space, and will be appropriately labeled and stored prior to shipment or delivery to the laboratory. Reusable sampling equipment such as stainless steel spoons and bowls shall be decontaminated between sample locations.

Samples must be packed to prevent damage to the sample container and labeled to allow sample identification. All samples must be packaged so that they do not leak, break, vaporize or cause cross-contamination of other samples. Each individual sample must be properly labeled and identified. A chain-of-custody record must accompany each shipping container (see Section 3.2.3). When refrigeration is required for sample preservation, samples must be kept cool during the time between collection and final packaging.

All samples must be clearly identified immediately upon collection. Each sample bottle will be labelled and will include the following information:

- Client and project name
- A unique sample description
- Sample collection date and time.

Additionally, the sample bottle label may include:

- Sampler's name or initials
- Indication of addition of preservative, if applicable
- Analyses to be performed.

After collection, the samples will be maintained under chain-of-custody procedures as described below.

3.2.3 Chain of Custody

Chain-of-custody procedures are intended to document sample possession from the time of collection to disposal. Chain-of-custody forms must document transfers of sample custody. A sample is considered to be under custody if it is in one's possession, view, or in a designated secure area. The chain-of-custody record will include, at a minimum, the following information:

- Client and project name
- Sample collector's name
- Company's mailing address and telephone number
- Designated recipient of data (name and telephone number)
- Analytical laboratory's name and city
- Description of each sample (i.e., unique identifier and matrix)
- Date and time of collection
- Quantity of each sample or number of containers
- Type of analysis required
- Addition of preservative, if applicable
- Requested turn-around times
- Date and method of shipment.

When transferring custody, both the individual(s) relinquishing custody of samples and the individual(s) receiving custody of samples will sign, date, and note the time on the form. If samples are to leave the collector's possession for shipment to the laboratory, the subsequent packaging procedures will be followed. If an on-site lab is being used, a chain-of-custody must be completed but the following packing procedures do not apply. All samples will be stored appropriately by the laboratory.

3.3 Analytical Quality Control

Laboratory Quality Control Requirements

Internal quality control procedures are designed to ensure the consistency and continuity of data. A routine QC protocol is an essential part of the analytical process. The minimum requirements for each analytical run follow. Additional description of laboratory QA/QC procedures can be found in the laboratory's QA Manual. A project narrative detailing analytical results must accompany all data packages submitted by the laboratory.

- Initial and continuing calibration: A calibration standard will be analyzed each time an instrument is calibrated. The instruments used to perform the various analyses will be calibrated and the calibrations verified as required by the respective EPA methodologies. For example, a standard five-point initial calibration will be utilized to determine the linearity of response with the gas chromatograph/electron capture detection. Once calibrated, the system must be verified every 12 hours. All relative response factors, as specified by the analytical method, must be greater than or equal to 0.05. All relative standard deviations, as specified by the analytical method, must be less than or equal to 30 percent for the initial calibration and less than or equal to 25 percent for the continuing calibration.
- Laboratory control sample: The laboratory control sample (LCS) will consist of a portion of analyte-free water or solid phase sample that is spiked with target analytes of known concentration. The LCS will be processed through the entire method procedure and the results examined for target analyte recovery (accuracy). Precision evaluations will be generated using a laboratory control sample duplicate (LCSD). The LCS and LCSD results will be used as a fall-back position by the laboratory in cases where the matrix spike has failed to achieve acceptable recovery and/or precision. Inability to obtain acceptable LCS results will be directly related to an inability to generate acceptable results for any sample. One LCS/LCSD pair will be analyzed for each extraction batch.
- Method blank analysis: The method blank is utilized to rule out laboratory-introduced contamination by reagents or method preparation. Compounds detected in the blank will be compared in concentration to those found in the samples. Any concentration of common laboratory contaminants (i.e., phthalates, acetone, methylene chloride, or 2-butanone) in a sample at less than 10 times that found in the blank will be considered a laboratory contaminant. For other contaminants, any compounds detected at less than five times that found in the blank will be considered laboratory contamination (EPA, 1994). Values reported for the method blanks are expected to be below the detection limits for all compounds, except the common laboratory contaminants. Deviations from this must be

- explained in the laboratory project narrative(s). One method blank will be analyzed for each extraction/digestion batch
- Matrix spike analysis: A matrix spike (MS) is the addition of a known amount of target analyte to a sample. Analysis of the sample that has been spiked and comparison with the results from unspiked sample (background) will give information about the ability of the test procedure to generate a correct result from the sample (accuracy). Precision evaluations will be generated using a matrix spike duplicate (MSD). One matrix spike and matrix duplicate will be analyzed per sample delivery group (SDG) or per 20 samples. A SDG is defined as no more than 20 samples or a group of samples received at the laboratory within a two-week period
- Surrogate evaluations (organic analyses): Surrogate recovery is a quality control
 measure limited to use in organics analysis. Surrogates are compounds added to
 every sample at the beginning of the sample preparation to monitor the success of
 the sample preparation on an individual sample basis (accuracy). Although some
 methods have established surrogate recovery acceptance criteria that are part of
 the method or contract compliance, for the most part, acceptable surrogate
 recoveries need to be determined by the laboratory. Recoveries of surrogates will
 be calculated for all samples, blanks and quality control samples. Acceptance limits
 will be listed for each surrogate and sample type and will be compared against the
 actual result
- Laboratory management review: The QA Officer(s) will review all analytical results prior to final external distribution (preliminary results will be reported before this review). If the QA Officer(s) finds the data meet project quality requirements, the data will be released as "final" information. Data which are not acceptable will be held until the problems are resolved, or the data will be flagged appropriately.

3.4 Instrument/Equipment Testing, Inspection and Maintenance

The primary objective of an instrument/equipment testing, inspection, and maintenance program is to help ensure the timely and effective completion of a measurement effort by minimizing the downtime of crucial sampling and/or analytical equipment due to expected or unexpected component failure.

Testing, inspection, and maintenance will be carried out on all field and laboratory equipment in accordance with manufacturer's recommendations and professional judgment. Analytical laboratory equipment preventative testing, inspection, and maintenance will be addressed in the laboratories' QA manual, which will be kept on file at the contracted laboratory.

As appropriate, schedules and records of calibration and maintenance of field equipment will be maintained in the field notebook. Equipment that is out of calibration or is malfunctioning will be removed from operation until it is recalibrated or repaired.

3.5 Instrument/Equipment Calibration and Frequency

Measuring and test equipment used during environmental data collection activities will be subject to calibration requirements. These requirements are summarized below:

- Identification. Either the manufacturer's serial number or the calibration system
 identification number will be used to uniquely identify measuring and test
 equipment. This identification, along with a label indicating when the next
 calibration is due, will be attached to the equipment. If this is not possible, records
 traceable to the equipment will be readily available for reference.
- Standards. Measuring and test equipment will be calibrated, whenever possible, against reference standards having known valid relationships to nationally recognized standards (e.g., National Institute of Standards and Technology) or accepted values of natural physical constraints. If national standards do not exist, the basis for calibration will be described and documented.
- Frequency. Measuring and test equipment will be calibrated at prescribed intervals and/or prior to use. Frequency will be based on the type of equipment, inherent stability, manufacturers' recommendations, intended use, and experience. All sensitive equipment to be used at the project site or in the laboratory will be calibrated or checked prior to use.
- Records. Calibration records (certifications, logs, etc.) will be maintained for all measuring and test equipment used on the project.

If measuring and test equipment are found to be out of calibration, an evaluation will be made and documented to determine the validity of previous measurements and/or corrective action will be implemented. The QA officer will lead the evaluation process.

All laboratory calibration requirements must be met before sample analysis can begin. The laboratory will follow the calibration procedures found in the analytical methods listed in this QAPP or in the laboratory's SOPs. If calibration non-conformances are noted, samples will be reanalyzed under compliant calibration conditions within method-specified holding times.

3.6 Inspection/Acceptance of Supplies and Consumables

The Field Manager will be responsible for material procurement and control. The Field Manager will verify upon receipt that materials meet the required specifications and that, as

applicable, material or standard certification documents are provided and maintained. The Field Manager will also verify that material storage is properly maintained and contamination of materials is not allowed.

Laboratories contracted for this project must have procedures that are documented and followed that cover the following:

- Checking purity standards, reagent grade water, and other chemicals as appropriate versus intended use
- Preparation and storage of chemicals
- Requirements for disposable glassware (grade and handling).

For this project, the Field Manager or designee will be responsible for procuring and shipping the appropriate sample containers and preservatives to the sampling site. The containers will be pre-cleaned and certified by lot. Reagents provided will be of the appropriate grade for the analysis. Records of these certifications and grades of material will be maintained on file at the laboratory.

3.7 Non-Direct Measurements

Existing chemical data from previous site characterization efforts have been reviewed to assist in identifying proposed sampling locations, discussed in the Work Plan. All historical data were previously reviewed for quality assurance.

3.8 Data Management

All hard copies of project field documentation, analytical results, and reports will be filed and stored at the consultant's library.

Analytical laboratories are expected to submit data in both electronic and hard copy.

The Laboratory Project Manager should contact the Project QA/QC Coordinator prior to data delivery to discuss specific format requirements. A library of routines will be used to translate typical electronic output from laboratory analytical systems and to generate data analysis reports. The use of automated routines ensures that all data are consistently converted into the desired data structures and that operator time is kept to a minimum. In addition, routines and methods for quality checks will be used to ensure such translations are correctly applied.

Written documentation will be used to clarify how field and laboratory duplicates and QA/QC samples were recorded in the data tables and to provide explanations of other issues that may arise. The data management task will include keeping accurate records of field and laboratory QA/QC samples so that project team members who use the data will have appropriate documentation.

4 Assessment and Oversight

4.1 Assessment and Response Actions

Assessment of field sample collection methods will be evaluated using the sampling equipment rinsate blank results. If there is a detectable level of the compound of interest in the equipment rinsate blank, samples will be qualified based on possible contamination.

Assessment of the field and laboratory methods will be evaluated using the field duplicate results. A significant variation between the original sample and the field duplicate may be caused by laboratory error or due to field sampling conditions. This variation will be identified during data validation with results compared to both the laboratory reports and field notes.

Nonconforming items and activities are those which do not meet the project requirements or approved work procedures. Non-conformance may be detected and identified by any of the following groups:

- Project Staff: During the performance of field activities and testing, supervision of subcontractors, performance of audits, and verification of numerical analyses
- Laboratory Staff: During the preparation for and performance of laboratory testing, calibration of equipment, and QC activities
- QA Staff: During the performance of audits.

If possible, action will be taken in the field to correct any nonconformance observed during field activities. If necessary and appropriate, corrective action may consist of re-sampling. If implementation of corrective action in the field is not possible, the nonconformance and its potential impact on data quality will be discussed in the report.

Corrective action to be taken as a result of nonconformance during field activities will be situation-dependent. The laboratory will be contacted regarding any deviations from the QAPP, will be asked to provide written justification for such deviations, and in some instances, will be asked to reanalyze the sample(s) in question. An example of a laboratory nonconformance that would require corrective action is if holding times were exceeded prior to analysis. All corrective actions must be documented. The person identifying the nonconformance will be responsible for its documentation.

Documentation will include the following information:

- Name(s) of the individual(s) identifying or originating the nonconformance
- Description of the nonconformance
- Any required approval signatures
- Method(s) for correcting the nonconformance or description of the variance granted.

Documentation will be made available to project, laboratory, and/or QA management. Appropriate personnel will be notified by the management of any significant nonconformance detected by the project, laboratory, or QA staff. Implementation of corrective actions will be the responsibility of the PM or the QA Officer. Any significant recurring nonconformance will be evaluated by project or laboratory personnel to determine its cause. Appropriate changes will then be instituted in project requirements and procedures to prevent future recurrence. When such an evaluation is performed, the results will be documented. If there are unavoidable deviations from this QAPP, the Project Manager will document the alteration and track the change in the subsequent deliverables.

4.2 Reports to Management

Deliverables from this project include:

- Laboratory hardcopy results and EDDs
- Data validation reports
- Boring logs
- · Reports discussing the results.

5 Data Validation and Usability

5.1 Data Review, Verification, and Validation

EPA method control limits (or WA State method control limits for NWTPH methods) for surrogate and matrix spike recoveries will be used for the determination of data quality. If surrogate or matrix spike recoveries are not within their method-specific control limits, then the analysis must be repeated. If the re-analyzed values are within required limits and holding times, they will be reported as true values. If, in the repeated analysis, the values are still outside required limits, the data will be identified and the Data Validator will verify the representativeness of the data following EPA guidelines. Laboratory analysts are responsible for reviewing calibration integrity, sample holding times, method compliance, and completeness of tests, forms, and logbooks.

Analytes detected at concentrations between the MRL and the method detection limit (MDL) will be reported with a J qualifier to indicate that the value is an estimate (i.e., the analyte concentration is below the calibration range). Non-detects will be reported at the MRL. The MRL will be adjusted by the laboratory as necessary to reflect sample dilution or matrix interference.

Verification of completeness and method compliance, as well as raw data entry and calculations by analysts will be reviewed by a laboratory supervisor or the Laboratory Coordinator. The Laboratory Coordinator will be responsible for checking each group or test data package for precision, accuracy, method compliance, compliance to special client requirements, and completeness. The Laboratory Coordinator will also be responsible certifying that hardcopy and EDD data are identical prior to release from the laboratory.

Data validation will be completed by the Data Validator. Data validation will be completed within three weeks after receipt of the complete laboratory data package. A detailed report of the data validation results will be submitted to the Quality Assurance Officer and included in the final deliverable.

The analytical laboratories will generate a Level 4 CLP-like fully validatable data package (EPA, 1991).

5.2 Reconciliation with User Requirements

The QA Officer will review the field notebooks, laboratory report, and results of the data validation to determine if the data quality objectives have been met. Instances where the data quality objectives were not met will be documented. The usability of the data will depend on the magnitude of the data quality objective exceedance. Data that has been rejected will be flagged as "R" and maintained in the database but will not be used in any decision making.

6 References

- CRETE 2020. Pre-Remedial Design Investigation Work Plan, I&J Waterway Site SCU-1. Prepared for the Port of Bellingham. April 2020.
- CRETE 2024. Pre-Remedial Design Investigation Work Plan, I&J Waterway Site SCU-2. Prepared for the Port of Bellingham. In Prep.
- Lombard, S.M. and C.J. Kirchmer. 2004. Guidelines for Preparing Quality Assurance Project Plans for Environmental Studies. Washington State Department of Ecology Environmental Assessment Program. July 2004. Publication Number 04-03-030
- PSEP 1986. Recommended protocols for measuring conventional sediment variables in Puget Sound. Prepared for the U.S. Environmental Protection Agency, Region 10, Seattle, Washington.
- PSEP 1997a. Puget Sound Estuary Program: Recommended Guidelines for Sampling Marine Sediment, Water Column, and Tissue in Puget Sound. Prepared for the U.S. Environmental Protection Agency Region 10, and the Puget Sound Water Quality Authority. Puget Sound Water Quality Authority, Olympia, Washington.
- PSEP 1997b. Puget Sound Estuary Program: Recommended Guidelines for Measuring Organic Compounds in Puget Sound Sediment and Tissue Samples. Prepared for the U.S.
- Environmental Protection Agency Region 10, and the Puget Sound Water Quality Authority. Puget Sound Water Quality Authority, Olympia, Washington.
- PSEP 1997c. Puget Sound Estuary Program: Recommended Protocols for Measuring Metals in Puget Sound Sediment and Tissue Samples. Prepared for the U.S. Environmental Protection Agency Region 10, and the Puget Sound Water Quality Authority. Puget Sound Water Quality Authority, Olympia, Washington.
- U.S. Environmental Protection Agency (EPA) 1991. EPA Region V Model Quality Assurance Project Plan. U.S. Environmental Protection Agency, Region V, Office of Superfund.
- U.S. Environmental Protection Agency (EPA) 1986. Test Methods for the Evaluation of Solid Waste: Physical/Chemical Methods, 3rd Edition. EPA SW-846, 1986.
- U.S. Environmental Protection Agency (EPA) 1999. USEPA Contract Laboratory Program National Functional Guidelines for Organic Data Review. EPA540/R-99/008, October 1999.
- U.S. Environmental Protection Agency (EPA) 2004. USEPA Contract Laboratory Program National Functional Guidelines for Inorganic Data Review. EPA540-R-04-004, October 2004.
- Washington State Department of Ecology (Ecology). 2008. Sediment Sampling and Analysis Plan Appendix. Ecology Publication No. 03-09-043. Sediment Source Control Standards User Manual, Washington Department of Ecology Sediment Management Unit. Revised February 2008.

	Pre-Remed.	ial Design Investigation Quality Assurance Project Plan
Washi	hington State Department of Ecology (Ecology Ecology Publication No. 12-09-057. Guid Provisions of the Sediment Managemer Washington Department of Ecology Toxics 2021.	dance for Implementing the Cleanup nt Standards, Chapter 173-204 WAC,

Tables

Table 1 Roles and Responsibilities

Role	Contact	Roles and Responsibilities
Project Manager	Grant	Primary point of contact.
	Hainsworth	Strategy development with project team.
	(CRETE)	Establishment of a project record-keeping system.
		Monitoring all aspects of the project to verify that all work is
		being completed in accordance with this QAPP.
		Review all technical documents associated with the project
		for technical accuracy and feasibility.
		Budget and schedule control.
Field Manager	Rusty Jones	Maintaining a log for all work completed on site.
	(CRETE)	 Coordinating the sampling operations to verify that the
		sampling team members adhere to this QAPP.
		 Preparing the field investigation data and information for
		reports.
		Working with the subcontractors and analytical laboratories
		to ensure that all field activities are conducted appropriately
		and that field activities are properly documented.
		Reviewing subcontractors' work and invoices.
		Ensuring that the integrity of the samples are maintained
Cit - C-f-t- Offi	D t l	throughout sample collection and shipment to the laboratory.
Site Safety Officer	Rusty Jones	Verifying that project personnel adhere to the site safety
(SSO)	(CRETE)	requirements outlined in the pre-design health and safety plan (HASP).
		Conducting the health and safety training for project
		personnel as appropriate.
		Monitor compliance with the approved HASP.
		Ensuring that proper health and safety equipment is available
		for the project.
		Modifying health and safety equipment or procedure
		requirements and amend the approved HASP based on data
		gathered during the site work.
		 Interface with the Project Manager as required in matters of
		health and safety.
		Authority to stop any operation that threatens the health or
		safety of the work team, surrounding populace, or the
		environment.
		The daily health and safety activities may be conducted by the SSO or a designated replacement.
Quality Assurance	Jamie Stevens	 SSO or a designated replacement. Reviewing laboratory analytical data.
(QA) Officer	(CRETE)	Providing the Data Validator with the laboratory analytical
(Q) if officer	(31.2.2)	data and sampling field notes.
		Serving as liaison between the laboratory and Field Manager
		and/or subcontractors.
		Ensuring that the integrity of the samples and analyses are
		maintained at the laboratory.
		Providing necessary documentation needed to support goals
		of the project and ensure that laboratory meets project data
		quality objectives, analytical concentration goals and other
		technical specifications for chemical analysis specified in this
		QAPP.
		Notifying the laboratory of specific laboratory nonconformances and shanges.
		nonconformances and changes.
		Maintaining a complete set of laboratory data.

Role	Contact	Roles and Responsibilities
		 Verifying that data reported is correct. Releasing testing data and results to the Project Manager in a timely manner.
Data Validator	Jamie Stevens (CRETE)	 Evaluation of the conformance of the analyses with the specifications of this QAPP. Verification of the reported results with the raw data. Ensure the Electronic Data Deliverables (EDDs) of analytical data match the hard copies
Laboratory Manager	Eric Young (Friedman & Bruya)	 Oversee all laboratory operations associated with the receipt of the environmental samples, chemical/physical analyses, and laboratory report preparation for this project Prepare laboratory validation report and QAQC testing.
Sub-consultants and Subcontractors	Field Manager	The Field Manager will coordinate all field activities and oversee all sub-consultants and subcontractors at the site. Key sub-consultants are listed below: • Delve Underground – Geotechnical analysis

Table 2 Sediment Laboratory Testing Program

Parameter ¹	CAS Number	Analytical Method	CUL (dw) ^{1,2}	RL	Laboratory MDL ³	Units
		Metals				
Arsenic	7440-38-2		57	1.0	0.17	
Cadmium	7440-43-9		5.1	1.0	0.05	
Chromium	7440-47-3		260	1.0	0.52	
Copper	7440-50-8	EDA Marth - 1 CO2OD	390	5.0	0.10	
Lead	7439-92-1	EPA Method 6020B	450	1.0	0.038	mg/kg
Nickel	7440-02-0		211	1.0	0.093	
Silver	7440-22-4		6.1	0.57	0.13	
Zinc	7440-66-6		410	5.0	0.58	
Mercury	7439-97-6	EPA Method 7471B	0.59	0.66	0.03	mg/kg
	Polycyclic	: Aromatic Hydrocarbons (I	PAHs)			
2-Methylnaphthalene	91-57-6	EPA Method 8270E	670	2.0	0.32	
Acenaphthene	83-32-9		500	2.0	0.18	μg/kg
Acenaphthylene	208-96-8		130	2.0	0.13	
Anthracene	120-12-7		960	63.0	8.2	
Fluorene	86-73-7	EPA Method 8270E-SIM	540	2.0	0.14	
Naphthalene	91-20-3		1,980	2.0	0.4	
Phenanthrene	85-01-8		1,500	2.0	0.18	
Total LPAHs			5,200			
Benzo(a)anthracene	56-55-3		1,300	2.0	0.23	
Benzo(a)pyrene	50-32-8		1,980	2.0	0.25	
Benzo(b)fluoranthene	205-99-2			2.0	0.25	
Benzo(j)fluoranthene	205-82-3			5.0	0.68	
Benzo(k)fluoranthene	207-08-9			2.0	0.32	
Benzofluoranthenes, Total			4,600	10	3.01	
Benzo(g,h,i)perylene	191-24-2	EPA Method 8270E-SIM	620	10	2	μg/kg
Chrysene	218-01-9		1,400	2.0	0.18	
Dibenzo(a,h)anthracene	53-70-3		230	2.0	0.49	
Fluoranthene	206-44-0		1,700	2.0	0.16	
Indeno(1,2,3-c,d)pyrene	193-39-5		680	2.0	2.6	
Pyrene	129-00-0		2,600	2.0	0.12	
Total HPAHs			12,000			
		Chlorinated Organics				
1,2,4-Trichlorobenzene	120-82-1		16.2	10	3.9	
1,2-Dichlorobenzene	hlorobenzene 95-50-1		46	10	3.6	
1,4-Dichlorobenzene	106-46-7	EPA Method 8270E	62	10	2.6	μg/kg
Hexachlorobenzene	Hexachlorobenzene 118-74-1		7.6	10	2.0	
Hexachlorobutadiene	87-68-3		78	10	2.5	

Parameter ¹	CAS Number	Analytical Method	CUL (dw) 1,2	RL	Laboratory MDL ³	Units
		Phthalates				
Butylbenzyl phthalate	85-68-7		98	2.0	0.4	
Diethyl phthalate	84-66-2		1,220	2.0	0.2	
Dimethyl phthalate	131-11-3	EPA Method 8270E	71	10	2.0	ua/ka
bis(2-Ethylhexyl)phthalate	117-81-7	LFA MELIIOU 8270L	940	10	4.1	μg/kg
Di-n-butyl phthalate	84-74-2		4,400	10	2.0	
Di-n-octyl phthalate	117-84-0		1,160	10	3.9	
	Or	ganic Chemicals/Phenols				
2,4-Dimethylphenol	105-67-9		29	29	11	
2-Methylphenol (o-Cresol)	95-48-7		63	63	8.2	
4-Methylphenol (p-Cresol)	106-44-5		670	20	14.7	
Benzoic acid	65-85-0	EPA Method 8270E,	650	500	100	
Benzyl alcohol	100-51-6	8720F-SIM	57	57	9.7	μg/kg
Dibenzofuran	132-64-9	0720L 311VI	540	10	1.7	
n-Nitrosodiphenylamine	86-30-6		28	10	3.3	
Pentachlorophenol	87-86-5		7,200	50	8.8	
Phenol	108-95-2		8,400	100	13	
PCBs						
Total Aroclor		EPA Method 8082	240	4.0	1.4	μg/kg

Notes:

-- = not provided, or available

μg/kg = micrograms per kilogram

CAS = Chemical Abstract Service

dw = dry weight basis

EPA = United States Environmental Protection Agency

MDL = Method Detection Limit

mg/kg = milligrams per kilogram

OC = organic carbon normalized

RL = Reporting Limit

SIM = Selected Ion Monitoring

- 1. The combined list of chemical parameters and associated CULs is based on Table 3-1 Cleanup Standards from the CAP (Ecology 2023) and Washington SMS Table III (WAC 173-204-562).
- 2. Shaded values indicate OC-normalized Benthic SCOs that were converted to dry weight value for this table using 2% TOC sediment TOC. This value, which is below the dry weight AETs in Table 8-1 of SCUM (Ecology 2021), is presented as a dry weight value only for the purpose of comparison to RLs.
- 2. MDLs and RLs are presented for informational purposes only. Data review/validation will be based on the most current control limits in effect at the time of analysis.

Table 3 Sample Containers, Sample Preservation, and Holding Times

Analytical Group	Method	Minimum Sample Size	Sample Container	Preservation	Holding Time	Preservation for Extended Holding Time
Total Organic Carbon	EPA Method 9060	25 g	1x 4-ounce glass jar	Store in the dark at 4°C, in anoxic environment	14 days from collection to analysis	If frozen to -18°C, 6 months
Metals	EPA Method 6020B	50 g	1x 4-ounce glass jar	Cool to 4°C	180 days from collection to analysis	If frozen to -18°C, 2 years
Mercury	EPA Method 7471A	1 g	1x 4-ounce glass jar	Cool to 4°C	28 days from collection to analysis	
PAHs	EPA Method 8270E SIM	50-100 g	1x 4-ounce glass jar	Cool to 4°C	14 days from collection to preparation;40 days from extraction to analysis	If frozen to -18°C, 1 year
Chlorinated Hydrocarbons				Cool to 4°C	14 days from collection to preparation;	If frozen to -18°C, 1 year
Phthalates	EPA Method 8270E	50 -100 g	1x 4-ounce glass jar	Cool to 4°C		
Organic Chemicals/Phenols				Cool to 4°C	40 days from extraction to analysis	
PCBs	EPA Method 8082	50-100 g	1x 4-ounce glass jar with Teflon®- lined lid	Cool to 4°C	1 year from collection to preparation;1 year from extraction to analysis	If frozen to -18°C, 1 year
Grain Size (GS)	ASTM D-422 with hydrometer	300 g	1 x 16-ounce glass or plastic jar	Cool to 4°C	6 months	
Total Solids	SM2540B (MOD)	50 g	From GS	Cool to 4°C	6 months	
Specific Gravity	ASTM D-5057-10	100 g	From GS	Cool to 4°C	6 months	
Moisture Content	ASTM D-2216	50 g	From GS	Cool to 4°C	6 months	
Atterberg Limits	ASTM D-4318	300 g	1 x 16-ounce glass or plastic jar	Cool to 4°C	6 months	
Soil Description and Classification	ASTM D-2488/D-2487		From GS	Cool to 4°C	6 months	
Bulk Density	ASTM D-5057-10	50 g	From GS	Cool to 4°C	6 months	

Notes:

-- = not provided, or available

°C = degrees Celsius

cPAHs = carcinogenic polycyclic aromatic hydrocarbons

EPA = United States Environmental Protection Agency

PAH = polycyclic aromatic hydrocarbons SIM = Selective Ion Monitoring

Table 4 Data Quality Objectives

Parameter	Precision	Accuracy	Completeness
Grain size	+/- 20% RPD	NA	95%
Total solids/total volatile solids	+/- 20% RPD	NA	95%
Total metals	+/- 20% RPD	75-125% R	95%
Total organic carbon	+/- 20% RPD	75-125% R	95%
Semivolatile organic compounds	+/- 35% RPD	50-150% R	95%
PCBs	+/- 35% RPD	50-150% R	95%

Notes:

RPD = Relative percent difference

R = Recovery

Appendix D Health and Safety Plan

IJ SCU2 PRDIWP 08-02-2024 6-6

Pre-Remedial Design Investigation Work Plan

APPENDIX D. HEALTH AND SAFETY PLAN

I&J Waterway Sediment Cleanup SiteNearest Address: Bornstein Seafoods1001 Hilton Ave, Bellingham Washington

Project Number: 036-003

Prepared for:

Port of Bellingham

June 24, 2024

Prepared by:



Table of Contents

1	Intro	ductionduction	1-1					
	1.1	Site Safety Plan Acknowledgment and Acceptance	1-1					
	1.2	Site Health and Safety Meetings	1-1					
	1.3	Training Requirements1-2						
	1.4	Medical Monitoring Requirements1-						
	1.5	.5 Fit Testing Requirements1-						
	1.6	6 Project Staff Responsibilities1-3						
	1.7	Access to Employee Exposure and Medical Records	1-3					
	1.8	Hazard Communication	1-3					
2	Healt	h & Safety Risk Analysis	2-6					
	2.1	Hazard Analysis Requirements	2-6					
		2.1.1 Job Hazard Analysis	2-6					
	2.2	Precautions When Working Around Heavy Equipment	2-6					
	2.3	General Site Hazards	2-7					
		2.3.1 Shoreline/Waterway	2-7					
		2.3.2 Lighting	2-7					
		2.3.3 Electrical Power and Lockout/Tagout	2-7					
		2.3.4 Fall Protection	2-7					
		2.3.5 Drum Handling	2-8					
		2.3.6 Cold Stress	2-8					
		2.3.7 Eye Wash Protection	2-8					
		2.3.8 Hearing Protection	2-8					
		2.3.9 Fire Prevention	2-8					
		2.3.10 Utilities	2-8					
		2.3.11 Overhead Utilities and Power Lines	2-8					
		2.3.12 Severe Weather and Lightning	2-9					
	2.4	Chemical Hazards	2-9					
	2.5	Biological Hazards	2-11					
3	Perso	onal Protective Equipment	3-1					
	3.1	Engineering Controls3-2						
	3.2	Work Practices	3-2					
4	Air M	Air Monitoring and Action Levels						
	4.1	Real Time Air Monitoring Requirements						
	4.2	Respirator Cartridge Change Out	4-3					
5	Site C	Control						
	5.1	Work Zones	_					
	5.2	General Site Control Safety Procedures	5-2					

6	Deco	Decontamination					
	6.1	Personnel Decontamination	6-1				
	6.2	Sampling Equipment	6-1				
	6.3	Equipment Decontamination	6-1				
	6.4	Disposal of Contaminated Materials	6-1				
	6.5	Emergency Decontamination	6-1				
	6.6	Sanitizing of Personal Protective Equipment	6-2				
7	Emer	rgency Response/Contingency Plan	7-3				
	7.1	Emergency Equipment and Supplies	7-3				
	7.2	Emergency Recognition and Prevention	7-3				
	7.3	Emergency Medical Treatment and First Aid	7-3				
	7.4	Emergency Decontamination	7-4				
	7.5	Evacuation Routes and Procedures	7-4				
	7.6	Critique of Response and Follow-up	7-4				
8	Emer	rgency Contacts	8-5				
9	Drun	Drum Handling9					
10	Drilli	Drilling Safety10-2					

List of Tables

Table 1-1	General Information
Table 1-2	Site Background
Table 4-1	Chemicals Requiring Initial Determination Air Monitoring
Table 4-2	Air Monitoring/Instrumentation
Table 6-1	Decontamination Procedures

List of Figures

Figure 1 Route to Hospital

List of Appendices

Appendix A	Site Safety Plan Acknowledgment Form
Appendix B	Visitor Sign-In Log
Appendix C	Site Safety/Tailgate Meeting Form
Appendix D	Notification of Access to Employee Exposure and Medical Records
Appendix E	Material Safety Data Sheets
Appendix F	Job Hazard Analysis Forms
Appendix G	Cold Stress Indicators

Acronyms and Abbreviations

ACGIH American Conference of Governmental Industrial Hygienists

APR air purifying respirator
BEHP bis(2-ethylhexyl)phthalate
CRETE Consulting, Inc.

CRZ contaminant reduction zone

EPA United States Environmental Protection Agency

HASP Health and Safety Plan

HEPA high-efficiency particulate air

IDHL immediately dangerous to health and life

JHA job hazard analysis

kV kilovolt

MSDS material safety data sheet

NIOSH National Institute for Occupational Safety and Health OSHA Occupational Safety and Health Administration

PCB polychlorinated biphenyl

PCE perchloroethene (tetrachloroethene)

PEL permissible exposure limit
PID photoionization detector
PGG Pacific Groundwater Group
PPE personal protective equipment
REL reasonable exposure limit

PRID Pre Remedial Investigation Design

Site I&J Waterway

STEL short-term exposure limit
SVOC semivolatile organic compound

TCE trichloroethene

TPH total petroleum hydrocarbons

TLV threshold limit value
TWA time weighted average
UST underground storage tank
VOC volatile organic compound

WAC Washington Administrative Code

1 Introduction

The Pre-Remedial Design Investigation (PRDI) Work Plan describes the investigation components to perform the remedial design for the cleanup action proposed by the Washington State Department of Ecology (Ecology) for the cleanup of contamination at the I&J Waterway Site (Site) in Bellingham, Washington. This Health and Safety Plan (HASP) describes the health and safety protocols to be used during the Site Investigation.

The Contractors, such as drillers, involved in this work will follow their own HASPs. CRETE Consulting, Inc. (CRETE) and Delve Underground will oversee the soil borings, Cone Penetrometer Tests, in-water vibracores, and surveying at the Site. This plan was written by CRETE, who has subcontracted the drillers, surveyors, CPT installer, and vibracores operators to perform work on the site. However, at least one CRETE or Delve Underground staff (or both), will be onsite during all PRDI work. Any further mention of CRETE in this HASP refers to field work performed by CRETE or Delve Underground during the PRDI. This HASP is unique to activities to be performed by CRETE staff/field managers. General site information is summarized in Table 1-1. Background information pertaining to site history and general hazards is listed in Table 1-2.

In addition to the requirements set forth in this HASP, Crete personnel shall comply with the HASPs and related protocols of all onsite Contractors and any health and safety protocols required by the Port of Bellingham.

1.1 Site Safety Plan Acknowledgment and Acceptance

The Field Manager (the CRETE or Delve Underground field staff onsite leading field activities) shall be responsible for informing all individuals assigned to work on the site, or who visit the site within the exclusion or contaminant reduction zones, of the contents of this HASP and for ensuring that each person signs the Site Safety Plan Acknowledgment Form (Appendix A). By signing the Site Safety Plan Acknowledgment Form, individuals recognize the site health and safety hazards, known or suspected, and will adhere to the protocols required to minimize exposure to such hazards. Subcontractors will also adhere to their own HASPs related to the work they are performing, e.g., safe drill operation.

1.2 Site Health and Safety Meetings

A pre-work meeting addressing site-specific health and safety issues shall be held on the first day of mobilization to the site and prior to the commencement of any work activities. Mandatory attendance is required for all personnel assigned to the particular tasks for which the equipment was mobilized. For example, a work meeting with the air-knife operators will occur at a different time than the meetings with the drillers, as these activities will be performed on different days and each have their own mobilization events. The intent of these meetings is to discuss the site-specific health and safety issues (such as known or

suspected contaminants), not to discuss activity-specific (such as well installation) health and safety issues.

At the conclusion of the meeting, personnel are to sign the Site Safety Plan Acknowledgment Form in Appendix A, indicating their attendance and understanding of the health and safety protocols. As additional personnel are assigned to the site, it is the responsibility of the Field Manager to ensure that new personnel are briefed on site-specific health and safety information and that they also have signed the Site Safety Plan Acknowledgment Form (Appendix A).

Daily tailgate meetings will be held by the Field Manager or field staff in charge of the day's activities, and attendance will be documented in the tailgate meeting form (Appendix C).

1.3 Training Requirements

All personnel assigned to work on this site beyond the support zone must have successfully completed 40 hours of Training for Hazardous Waste Site Work, in accordance with Occupational Safety Health Act (OSHA) 29 CFR 1910.120(e)(3), and must be current with their 8-hour Refresher Training, in accordance with OSHA 29 CFR 1910.120(e)(8).

Personnel managing or supervising work on site must also have successfully completed 8 hours of Manager/Supervisor Training, meeting the requirements of 29 CFR 1910.120(e)(4). Documentation of CRETE staff training is maintained in each company's respective databases. Each contractor must maintain documentation of OSHA training for personnel working on site.

Any exceptions to the training requirements will be explicitly specified either in this HASP or through a HASP amendment.

1.4 Medical Monitoring Requirements

All personnel, including subcontractors, assigned to work on this site beyond the support zone must be enrolled in a medical surveillance program meeting the requirements of OSHA 29 CFR 1910.120(f). Personnel must have successfully passed an occupational physical within the past 12 months, be medically cleared to work on hazardous waste sites, and be capable of wearing appropriate personal protective equipment (PPE), including any respiratory protection.

Any exceptions to the medical monitoring requirements will be explicitly specified either in this HASP or through a HASP amendment.

1.5 Fit Testing Requirements

All CRETE personnel assigned to work on this site beyond the support zone must be familiar with the requirements in the OSHA respiratory standard (29 CFR 1910.134). All personnel who are required to wear respiratory protection must have successfully passed a respirator fit test within the past 12 months. Personnel who do not have a current fit test are prohibited from working in areas where any potential exists for exceeding OSHA Permissible Exposure Limits. Documentation of a successful respirator fit test for the appropriate type of respirator needed for this work (half-face) must be maintained by each contractor performing onsite work. The Field Manager will check that the respirator being worn by personnel is the same size, make, and model as that specified on any respirator fit test records from the past 12-month period.

1.6 Project Staff Responsibilities

The Field Manager is responsible for overall project administration and for coordinating health and safety protocols and procedures for all onsite CRETE personnel at all times. All applicable United States Environmental Protection Agency (EPA), OSHA, state, and local health and safety requirements shall be followed throughout the course of the project. This HASP covers only CRETE personnel onsite. Any person who observes health and safety problems or infractions should immediately report the problem or infraction to appropriate personnel.

1.7 Access to Employee Exposure and Medical Records

OSHA provides employees and their designated representatives a right-of-access to relevant exposure and medical records (29 CFR 1910.20). The "Notification of Access to Employee Exposure and Medical Records" (Appendix D) is to be made accessible to all employees involved with these field operations.

1.8 Hazard Communication

The Field Manager will advise all CRETE personnel assigned to this site of the hazards associated with working onsite and of the methods to mitigate those hazards and prevent exposures. This information will be presented to personnel prior to initiation of any field activities. The following information regarding site contaminants or any chemicals brought to the site to conduct the work will be presented to site personnel prior to conducting any field work:

- Material Safety Data Sheets (MSDS; Appendix E)
- Chemical/physical hazards
- Appropriate PPE for protection from exposure
- Labeling.

Table 1-1 General Information

Client: Port of Bellingham					
Site Name: I&J Waterway					
Site Location: 1001 Hilton Ave, Bellingham, WA 9822	25 (nearest address)				
Description of Field Activities:	d				
Dates of Field Activities: Q1 2020					
Project Manager: Grant Hainsworth, CRETE	Project Manager Telephone Number: 253-797-6323				
QA Officer: Ben Starr, CRETE	Office: Seattle				
Field Manager: Rusty Jones, CRETE					
The following requirements have been fulfilled for each en Completed OSHA 40-Hour HAZWOPER Training	nployee to work onsite:				
Current OSHA 8-Hour HAZWOPER Refresher (within last	: 12 months)				
Current Medical Surveillance Examination (within last 1	2 months)				
Current Respirator Fit-test (within last 12 months)					
□ Current First Aid and CPR Training (within last 2 years)					
Note: CRETE employees may not enter a site beyond the support zone unless the training/qualifications listed above are current.					

Table 1-2 Site Background

Overall Hazard Is:							
High:	Low:	Moderate: 🔀	Unknown:				
Facility Description: This project is inside the I&J Street Waterway. The Site includes areas of contaminated marine sediments in the federally authorized I&J Waterway navigation channel and adjacent berthing areas, primarily located on state-owned							
Status: The federally authorized navigation channel has a current authorized channel depth of 18 feet below mean lower low water (MLLW) and is tidally influenced. The Port of Bellingham (Port) owns the berthing areas on the south side of the Site and the surrounding uplands, including the sloped beach area at the head of the Waterway. The upland areas near the Site include the former Olivine Corporation lease area and a property to its southwest that is currently leased to Bornstein Seafoods. The U.S. Coast Guard (USCG) owns the property north of the Site and berths vessels within the Waterway and northern berth areas.							
-	tainers, dikes, buildings, debris, site actively u	= = = = = = = = = = = = = = = = = = =	tc.): Close proximity				
Site History (worker in with Department of E	njury, complaints, regul Ecology.	atory agency action): \	Jnder Agreed Order				
	sludges and liquids mal activities. Debris wil						
Liquid: 🔀	Solid:	Sludge: 🔀	Debris: 🔀				
Characteristics:							
Corrosive:	Ignitable:	Volatile: 🔀	Toxic: 🔀				
Reactive:							
Hazards posed by site activities (Job Hazard Analysis in Appendix F): Potential exposure to contaminants including metals, SVOCs, PCBs, metals, dioxin and furans, and cold stress; work in steep, potentially unstable areas, work over water (drowning)							
Unusual Hazards: Proximity to water.							

2 Health & Safety Risk Analysis

This section identifies the specific hazards associated with the remedial investigation work and presents an analysis of documented or potential chemical hazards at the site. Every effort must be made to reduce or eliminate exposure to these hazards. Hazards that cannot be eliminated must be abated by use of engineering controls and/or PPE.

2.1 Hazard Analysis Requirements

2.1.1 Job Hazard Analysis

A Job Hazard Analysis (JHA) Form (Appendix F) is a basic tool that allows personnel to think through the steps involved in each job and discuss how to complete the job safely prior to mobilizing to the field. Each JHA accomplishes the following:

- Breaks a job down into individual steps
- Lists the safety hazards in each step
- Lists appropriate precautions to be followed for each hazard and safety resources (PPE, equipment, permits, etc.) to be obtained and coordinated.

Completion of a JHA requires thoroughness and attention to detail, as well as input of all those who participate in the job. As part of this HASP and prior to commencement of work, initial JHA forms (Appendix F) for soil sample collection and well installation have been completed and reviewed by the QA Officer. Each JHA will be modified if job scope or conditions change. If additional tasks are added to the scope of work in the field, a new JHA will be completed and approved by the QA Officer prior to the commencement of those additional tasks.

2.2 Precautions When Working Around Heavy Equipment

The following precautions will be taken to minimize heavy equipment hazards:

- All equipment must have back-up alarms.
- Personnel must make eye contact with the operator before approaching the equipment and remain safely outside the swing radius of the equipment.
- Personnel must wear orange visibility vests in addition to standard Level D PPE.
- Personnel must never stand on track-hoe tracks to communicate with the operator.
- Operators must be aware of personnel in the area and use proper hand signals before maneuvering.
- Operators must wear hard hats when operating machines and when going to and from their equipment.
- Operators must use spotters and be cautious when maneuvering equipment within 15 feet of overhead power lines and utility pole guy wires, and maintain safe distances at all times (greater than 10 feet).

• Provisions will be made to prevent the unauthorized start-up of equipment when personnel leave the site at the end of the shift, such as battery ignition locks.

2.3 General Site Hazards

2.3.1 Shoreline/Waterway

Project activities including work on working on and around the shoreline of the I&J Waterway. The I&J Waterway is tidally influenced, and water levels along the shoreline can vary widely throughout the day.

Sampling and surveying from barges or other vessels present a potential drowning hazard. All personnel working on or near (within 6') the water must wear a properly fastened (e.g. zipped and clipped) U.S. Coast Guard approved personal flotation device (PFD). Ring buoys with 70 feet of attached polypropylene line shall be maintained aboard the floating equipment. Man overboard drills shall be conducted by the crews prior to commencing work and periodically thereafter. The "buddy system" shall be mandatory for all crew members working on, over, or near the water.

2.3.2 Lighting

Work areas must have adequate lighting for employees to see to work and identify hazards (5-foot candles minimum, comparable to a single 75- to 100-watt bulb). Personnel should have flashlights available in all indoor or dimly lighted areas for use in the event of a power failure, or if working outdoors after daylight hours. Applicable OSHA standards for lighting (29 CFR 1910.120(m)) shall apply. All Remedial Investigation work is expected to occur outside during daylight hours.

2.3.3 Electrical Power and Lockout/Tagout

All electrical power must have a ground fault circuit interrupter as part of the circuit, including generators. All equipment must be suitable and approved for the class of hazardous atmosphere in which it is being used. Applicable OSHA standards for electric power (29 CFR 1910 Subpart S) shall apply.

2.3.4 Fall Protection

Work site slip, trip, and fall accidents can result in serious injuries or fatalities. Procedures to help prevent these types of incidents will be implemented. Elevated work (above 4 feet) where a fall potential exists will be performed using appropriate ladders and/or fall protection (i.e., body harness, lifeline, etc.) Applicable OSHA standards for fall protection (29 CFR 1910.21 through 29 CFR 1910.32) shall apply. No work is expected to be performed on ladders. However, work activities will occur on or near steep riverbank slopes and near the top of bulkhead walls.

2.3.5 Drum Handling

The movement, opening, handling, and storage of drums will be conducted in accordance with 29 CFR 1910.120(j). See Section 9 for more details.

2.3.6 Cold Stress

When the temperature falls below 40°F, cold stress protocols shall be followed. Employees must be supplied with adequate clothing to maintain core temperature. Cold stress is discussed in detail in Appendix H.

2.3.7 Eye Wash Protection

All operations involving the potential for eye injury, splash, etc., must have approved eye wash units locally available as per 29 CFR 1910.151(c).

2.3.8 Hearing Protection

When the noise level of any operation exceeds the 8-hour Time Weighted Average (TWA) of 85 decibels (dB), a hearing protection program meeting the requirements of 29 CFR 1910.95 will be implemented.

2.3.9 Fire Prevention

Operations involving the potential for fire hazards shall be conducted in a manner that minimizes the risk. Non-sparking tools and fire extinguishers shall be used or available as required. Sources of ignition shall be removed. When necessary, explosion-proof instruments and/or bonding and grounding will be used to prevent explosion and/or fire.

2.3.10 Utilities

All underground utility hazards shall be identified and/or inspected prior to conducting operations involving potential contact. Some work will occur where numerous current and historical utilities exist, and special caution should be exercised in all ground disturbing work.

2.3.11 Overhead Utilities and Power Lines

Any time work is performed in the vicinity of overhead utilities, including power lines, a spotter will be assigned to help operators maneuver equipment in and around the wires. The following distances will always be maintained around high-tension wires:

- For lines rated 50 kilovolts (kV) or below, minimum clearance between the lines and any part of the crane or load shall be 10 feet.
- For lines rated over 50 kV, minimum clearance between the lines and any part of the crane or load shall be 10 feet plus 0.4 inch for each 1 kV over 50 kV, or twice the length of the line insulator, but never less than 10 feet.
- In transit with no load and boom lowered, the equipment clearance shall be a minimum of 4 feet for voltages less than 50 kV, 10 feet for voltages over 50 kV, up to and including 345 kV, and 16 feet for voltages up to and including 750 kV.

In addition, all utility pole "guy-wire" support cables will be identified, marked, and/or barricaded prior to work. Unintended equipment or vehicle contact with these guy wires may result in utility poles or power lines falling on personnel or equipment.

2.3.12 Severe Weather and Lightning

The Field Manager will monitor local media resources to identify possible severe weather situations at the project site. Site work may be delayed, postponed, or cancelled due to severe weather based on the Field Manager's discretion. In the event of a weather emergency, the site will be evacuated in accordance with Section 7 of this document.

Lightning can strike up to a distance of 10 miles, but thunder can only be heard at a distance of 8 miles. Therefore, if site personnel working outdoors hear thunder and/or see lightning, work will be stopped and personnel will move to an indoor location. If indoor facilities are not available, personnel will move inside of passenger vehicles such as cars and pickups. During a thunderstorm with thunder/lightning, avoid trees/poles, standing water, high areas, and metal structures (fences, scaffolding, etc.). Work will resume 30 minutes following the final observance of thunder and/or lightning.

2.4 Chemical Hazards

This section discusses the hazards associated with the contaminants remaining on site. Employees may inhale contaminated dusts or come into direct contact with contaminated media while performing excavations or otherwise handling the soil, sediment, or groundwater (stockpiling, characterizing, or transporting soils) on this project.

Polychlorinated Biphenyls

Polychlorinated biphenyls (PCBs) are mixtures of up to 209 individual chlorinated compounds (known as congeners). There are no known natural sources of PCBs. PCBs are either oily liquids or solids that are colorless to light yellow. Some PCBs can exist as a vapor in air. PCBs have no known smell or taste. Many commercial PCB mixtures are known in the U.S. by the trade name Aroclor.

PCBs have been used as coolants and lubricants in transformers, capacitors, and other electrical equipment because they don't burn easily and are good insulators. The manufacture of PCBs was stopped in the U.S. in 1977 because of evidence they build up in the environment and can cause harmful health effects. Products made before 1977 that may contain PCBs include old fluorescent lighting fixtures and electrical devices containing PCB capacitors, and old microscope and hydraulic oils.

The most commonly observed health effects in people exposed to large amounts of PCBs are skin conditions such as acne and rashes. Studies in exposed workers have shown changes in blood and urine that may indicate liver damage. PCB exposures in the general population are not likely to result in skin and liver effects. Most of the studies of health effects of PCBs in the general population examined children of mothers who were exposed to PCBs.

Animals that ate food containing large amounts of PCBs for short periods of time had mild liver damage and some died. Animals that ate smaller amounts of PCBs in food over several weeks or months developed various kinds of health effects, including anemia; acne-like skin conditions; and liver, stomach, and thyroid gland injuries. Other effects of PCBs in animals include changes in the immune system, behavioral alterations, and impaired reproduction. PCBs are not known to cause birth defects.

Polycyclic Aromatic Hydrocarbons

Polycyclic aromatic hydrocarbons are a group of chemicals that occur naturally in coal, crude oil, and gasoline. PAHs are also present in products made from fossil fuels, such as coal-tar pitch, creosote, and asphalt. When coal is converted to natural gas, PAHs can be released. Therefore, some coal-gasification sites may have elevated levels of PAHs. PAHs also can be released into the air during the burning of fossil fuels, garbage, or other organic substances. The less efficient the burning process, the more PAHs are given off. Forest fires and volcanoes produce PAHs naturally.

It is not clear that PAHs cause short-term health effects. Other compounds commonly found with PAHs may be the cause of short-term symptoms such as eye irritation, nausea, vomiting, diarrhea, and confusion.

Long-term health effects of exposure to PAHs may include cataracts, kidney and liver damage, and jaundice. Repeated skin contact to the PAH naphthalene can result in redness and inflammation of the skin. Breathing or swallowing large amounts of naphthalene can cause the breakdown of red blood cells.

Long-term exposure to low levels of some PAHs have caused cancer in laboratory animals. Benzo(a)pyrene is the most common PAH to cause cancer in animals. Studies of workers exposed to mixtures of PAHs and other compounds have noted an increased risk of skin, lung, bladder, and gastrointestinal cancers. The information provided by these studies is limited because the workers were exposed to other potential cancer-causing chemicals besides PAHs. Although animal studies have shown adverse reproductive and developmental effects from PAH exposure, these effects have generally not been seen in humans.

Semivolatile Organics Compounds and Dioxins and Furans

Semivolatile organic compounds (SVOCs) are a subgroup of VOCs that tend to have a higher molecular weight and higher boiling point temperature than other VOCs.

The health effects of a specific SVOC depend on its chemical nature and on the degree of exposure, which can occur through a combination of ingestion, respiration, and skin absorption. Individual susceptibility factors can also be important, and much attention has been focused on the developing fetus. Some SVOCs are known to be toxic, such as dioxins and pentachlorophenol; some are no longer used because of demonstrated or suspected health effects, such as polybrominated biphenyls; and concerns are emerging about potential health effects of others. Health effects now associated with specific SVOCs include

allergic symptoms, retarded reproductive development, and altered semen quality with phthalates, and lower birth weight with perfluorooctane sulfonate and perfluorooctanoate. A broad and growing concern is about SVOCs with chemical structures that may mimic human hormones and increase or decrease endocrine activity.

Metals

Site sediments main contain elevated levels of metals that include mercury and nickel. Mercury is a neurotoxin. Possible symptoms of exposure or may include: loss of peripheral vision; "pins and needles" feelings, usually in the hands, feet, and around the mouth; lack of coordination of movements; impairment of speech, hearing, walking; and muscle weakness.

Nickel is a naturally occurring metal but exposure to high concentrations can result in health problems. The most serious harmful health effects from exposure to nickel, such as chronic bronchitis, reduced lung function, and cancer of the lung and nasal sinus, have occurred in people who have breathed dust containing certain nickel compounds while working in nickel refineries or nickel-processing plants.

Other Chemical Hazards

Other hazards may be posed by chemicals brought on site by CRETE or their subcontractors. In accordance with DOSH requirements for hazard communication, Material Safety Data Sheets (MSDS) are available for all products brought on site. In order to facilitate the accessibility by site workers, all MSDS will be maintained in a separate binder and kept on site.

- CRETE employees and subcontractors will bring on site only those materials required to perform work on site. The following procedures will be followed to optimize use of the MSDSs.
- All CRETE employees will be briefed on materials safety procedures, use of MSDSs for employee health information, and use of MSDSs for mishap response during safety meetings.
- Selected MSDSs will be reviewed as a normal part of the safety briefing.

In the event of a spill or other emergency event involving a material brought on site by CRETE employees, the MSDS binder will be brought to the mishap location for use by the SSO, Project Manager, and any other response personnel.

2.5 Biological Hazards

Project personnel should be provided with the information and training necessary to avoid accidental injury or illness that can result from exposure to biological hazards. This includes ensuring that the site is carefully assessed when personnel are on site so that the hazards associated with biological entities are recognized and eliminated or controlled. Potential

biological hazards associated with the project site include animals, such as raccoons and rats; stinging insects, such as bees and yellow jackets; and plants, such as blackberries.

3 Personal Protective Equipment

The proposed work areas for this project are well characterized with regard to chemical contaminants in soil, sediment, and groundwater. In addition, based on the levels of contaminants identified in environmental media on the site and the types of activities proposed, the potential for airborne chemicals of concern above occupational exposure limits is low. If there is any indication that workers may be exposed to airborne contaminants in unacceptable concentrations, work will stop and this plan will be revised to address that hazard.

The following levels of personal protective equipment are prescribed, in compliance with WAC 296-843.

Workers conducting work in areas of identified contamination, and therefore required to enter exclusion zones, will be required to wear modified Level D personal protective equipment (PPE), which consists of the following.

- Personal Floatation Device (PFD) for work over water;
- Chemical-resistant clothing or rubber rain gear;
- Hard hat (if necessary, as determined by the SSO);
- Safety glasses with side shields;
- High visibility (Hi-vis) clothing;
- Work boots;
- Viton gloves (if necessary, as determined by the SSO);
- Hearing protection (if necessary, as determined by the SSO)

PPE required for work within the exclusion zone will be upgraded to Level C. Also, if the concentration of airborne PCBs, vapors, or metals (as determined by air monitoring) exceed specified action levels at any time, the requirements for work inside the exclusion zone may (at the discretion of the SSO), be upgraded to Level C PPE. Level C consists of all of the equipment specified for modified Level D above plus:

• Half-face air-purifying respirator with combined organic vapor/particulate cartridge.

All employees working in the contamination reduction zone, support zones, and areas of the site without documented contamination will be required to wear the following modified Level D PPE. Modified Level D consists of the following:

- Personal Floatation Device (PFD) for work over water (PFDs will be appropriately secured at all times. No personnel will be allowed over water with a PFD that is unbuckled, unzipped, etc);
- Standard construction clothing;
- Hard hat (if necessary, as determined by the SSO);

- Safety glasses with side shields;
- High visibility (Hi-vis) clothing;
- Work boots;
- Hearing protection (if necessary, as determined by the SSO) If foam earplugs
 are used, they should only be applied with clean hands (e.g. while gloves are
 removed) to avoid exposing the worker to site contaminants, or earmuffs should
 be used.

3.1 Engineering Controls

To minimize potential exposure to contaminants present in soil, sediment, and groundwater on site, every effort will be made to minimize dust levels or migration of contaminants off site. In accordance with Puget Sound Clean Air Agency (PSCAA) Regulation 1, Section 9.15, no visible dust will be permitted during site activities. The following procedures will be implemented during soil test pitting, drilling, stockpiling, and transport of contaminated soils or sediment to control fugitive dust emissions.

Dust control measures are to be used for the duration of the project.

Water or wetting agents shall be used to control dust at the excavation sites, as needed. Each stockpile shall be covered to minimize the potential for dust generation from the material placed in the piles and from water intrusion.

The following additional engineering controls will be practiced on site to minimize the migration of contaminants off site.

- Exclusion zones shall be clearly marked with cones or barrier tape to avoid accidental entry.
- Contamination reduction zones will be marked and equipped with buckets and brushes for decontamination. Disposable contaminated clothing will be disposed of as solid waste and re-usable clothing (i.e. hard hats, rubber rain gear and etc.) will be washed and reused.
- Decontamination areas (contamination reduction zones) shall be established at all entrances and exits to/from exclusion zones.
- All barricades and tapes shall be maintained daily prior to commencement of operations.

3.2 Work Practices

• Eating, drinking, smoking, chewing gum or tobacco, or applying of cosmetics is only permitted in support zones.

- No facial hair that would interfere with respirator fit will be permitted on employees who are required to wear respirators.
- Employees are to report to the SSO any symptoms of exposure they might experience and all accidents/incidents.
- Inspect all vehicles prior to leaving the site.
- Workers shall use proper decontamination procedures in the contaminant reduction zone.
- At the end of every workday on site, a heavy-duty plastic sheet shall be placed over the top of any stockpiled soils to minimize erosion and fugitive dust.
- All excavation and earthwork will take place using motorized excavation equipment such as track hoes, etc. Operators shall remain in their closed cabs with the ventilation on recirculate.

4 Air Monitoring and Action Levels

According to 29 CFR 1910.120(h) and Washington Administrative Code (WAC), air monitoring shall be used to identify and quantify airborne levels of hazardous substances and health hazards in order to determine the appropriate level of employee protection required for personnel working on site.

4.1 Real Time Air Monitoring Requirements

Real time air monitoring is required for sites where the chemical hazards listed in Table 4-1 may be present. However, drilling and sample collection is not expected to create a hazardous atmosphere. All work will be performed outside, and personnel will be in close proximity to small volumes of soil and groundwater during sample collection. Although some of the chemical listed in Table 4-1 are present at the Site, monitoring with a photoionization detector (Table 4-2) will be the only air monitoring conducted at the Site.

Table 4-1 Chemicals Requiring Initial Determination Air Monitoring

Chemical	OSHA and WA DOSH Standard for Respiratory Protection	
Acrylonitrile	1910.1045	
, , , , , , , , , , , , , , , , , , , ,	WAC 296-62-07340	
Arsenic, inorganic	1910.1018	
Asbestos	1910.1001 – General Industry	
	1926.1101 – Construction Sites	
Benzene	1910.1028	
	WAC 296-62-07523	
1,3-Butadiene	1910.1051	
	WAC 296-62-07460	
Cadmium	1910.1027	
	1926.1127	
	WAC 296-62-074	
Coal Tar Pitch Volatiles	1910.1029	
 Acenaphthene 		
 Benzo(a)pyrene 		
• Chrysene		
Phenanthrene Physical Property		
Pyrene 1,2-dibromo-3-chloropropane	1910.1044	
	WAC 296-62-07342	
Formaldohydo		
Formaldehyde	1910.1048 WAC 296-62-07540	
Lieuwalant Charmina		
Hexavalent Chromium	WAC 296-62-08003	
Lead	1910.1025 – General Industry	

	1926.62 – Construction
	WAC 296-62-07521
Methylene chloride	1910.1052
Methylenedianiline	1910.1050 – General Industry
	1926.60 – Construction
	WAC 296-62-076
Vinyl chloride	1910.1017
	WAC 296-62-07316

Air monitoring is conducted at the following times or as specified by the Field Manager:

- Upon initial entry to rule out oxygen deficient, flammable, and/or IDLH conditions. At this site there is no "entry", as no work in to be completed in excavations, trenches, or small spaces.
- When the possibility of an oxygen deficient, flammable, and/or IDLH condition or flammable atmosphere has developed
- As an on-going check of the levels of contaminants in the breathing zone
- When work is initiated on a different portion of the site
- When contaminants other than those previously identified are encountered
- When a different operation is initiated
- When work involves the handling of leaking drums, containers, or when working in areas with obvious liquid contamination
- During confined space entry
- At the perimeter of the site as required
- Outside the site perimeter as required (e.g., adjacent buildings).

If deemed necessary, per the conditions noted above, real time air monitoring with direct reading instruments will conform to, at a minimum, the criteria listed in Table 4-2. All air monitoring data will be recorded in the daily field logs. All air monitoring equipment calibration data is to be recorded in the daily field logs. Air monitoring instruments will be calibrated and maintained in accordance with the manufacturer's specifications.

Table 4-2 Air Monitoring/Instrumentation

Х	Photoionization Detec	tor		
	Please Check Bulb Size:			
	9.5eV:	10.2eV: 🔀	11.7eV:	
Use:	Detection of Organic	Gases and Vapors		
Action Level:	PID reading >15 ppm at point of operations for more than 1			
	minute → Establish 25-ft diameter exclusion zone around			
	work area, monitor v	worker's breathing zone.		
		in worker's breathing zone f		
		cuate area or upgrade to Lev		
		nic vapor/HEPA cartridge, es		
		tion zone with waste contain		
	decontamination flui	ds provided for personal dec	ontamination.	
	PID reading >75 nnm	in worker's breathing zone f	or more	
	PID reading >75 ppm in worker's breathing zone for more than 1 minute → Evacuate area and move upwind to allow			
	vapors to dissipate, may resume work after vapors dissipate.			
	rapors to dissipate, i	may resume work after vapor	s alssipate.	
	PID reading >100 ppr	m in worker's breathing zone	for more	
		300 ppm instantaneous →Ev		
		f elevated levels persist, cove		
	cuttings and notify Fi	eld Manager.		
Frequency:	Sample the breathing	g space and work area period	ically	
	throughout field acti		•	

4.2 Respirator Cartridge Change Out

In the event of the use of respiratory protection, cartridges will be replaced daily during field work. For organic cartridges, these conditions may dictate that the cartridges be replaced more frequently:

- If the organic chemical's boiling point is <70°F and the concentration is greater than 200 ppm, contact the Field Manager to discuss cartridge replacement and options for respiratory protection.
- If physical work rate exceeds a moderate level, replace cartridges every 4 hours of work.
- If relative humidity exceeds 85%, replace cartridges every 4 hours of work.

5 Site Control

5.1 Work Zones

Work zones will be delineated by CRETE personnel. The primary purpose for site controls is to establish the hazardous area perimeter, to reduce migration of contaminants into clean areas, and to prevent access or exposure to hazardous materials by personnel or visitors. At the end of each workday, the work should be completed such that there are no open boreholes or excavations remaining. A new activity will not be started toward the end of the workday, such that an unfinished condition is left overnight. All equipment will be removed from the site or locked out such that it cannot be accessed at the end of each workday. During active working conditions, site work zones will include:

• Clean Zone/Support Zone. This uncontaminated zone will be the area outside the Exclusion Zone and Contamination Reduction Zone (CRZ) and within the geographic perimeters of the Site, but not within actively used portions of the Site, such as tenant parking areas. This area is used for staging of materials, parking of investigation personnel vehicles, and receipt of deliveries. Personnel entering this zone may include delivery personnel, visitors, security guards, etc., who will not necessarily be permitted in the exclusion zone.

All personnel arriving in the support zone will report to the Field Manager and sign the Visitor Sign-In Log.

- o If investigation work is to occur in actively used portions of the site, such as if a UST investigation overlaps commonly used tenant parking areas, then prior communications/arrangements will be made between the Port and the tenants to utilize another part of the Site during that workday.
- The CRZ will provide a location for removal and final decontamination of contaminated PPE. A separate decontamination area will be established for heavy equipment. All personnel and equipment must exit the Exclusion Zone via the CRZ.
- Exclusion Zone/Hot Zone. The exclusion zone will be the "hot zone" or contaminated area inside the site perimeter. Entry to and exit from this zone will be made through a designated point within the CRZ. Appropriate warning signs to identify the exclusion zone should be posted (e.g., DANGER, AUTHORIZED PERSONNEL ONLY, PROTECTIVE EQUIPMENT BEYOND THIS POINT). Personnel and equipment decontamination must occur upon exiting from the exclusion zone.

In most cases, these work zones will not be formally demarcated. Sample collection will occur at each of the locations on Figure 5 of the RIWP, and work zones will move to accommodate these locations. The area around any heavy equipment, such as a drill rig, and the area where samples are processed/logged will become informal exclusion zones. Where investigation locations may overlap frequently used areas of

the property, arrangements between the Port and the tenants will be made beforehand to ensure the area is accessible for RI activities and that tenants do not wander into the area.

5.2 General Site Control Safety Procedures

- Whenever possible, avoid contact with contaminated (or potentially contaminated) surfaces. Walk around (not through) puddles and discolored surfaces. Do not kneel or set equipment on the ground. Stay away from waste drums unless it is necessary to sample or handle the drums. Protect equipment from contamination by bagging.
- Eating, drinking, and/or smoking are only permitted in designated areas in the support zone.
- Hands and face must be thoroughly washed upon leaving the CRZ.
- Beards and/or other facial hair that interferes with respirator fit will preclude admission to the exclusion zone.
- All equipment must be decontaminated or properly discarded upon exit from the exclusion zone as determined by the Field Manager.
- All personnel exiting the exclusion zone must go through the decontamination procedures as described in this HASP.
- PPE as described in this HASP will be required for all field personnel working on site.
- Contact lenses may be worn on the site provided safety glasses or goggles are also worn. Any exceptions to wearing of contact lenses will be specified in this HASP or through a HASP amendment.

6 Decontamination

In general, everything that enters the exclusion zone must either be decontaminated or properly discarded upon exit from the exclusion zone. All personnel, including any visitors, must enter and exit the exclusion zone through the CRZ.

Contaminated equipment will be decontaminated and inspected by the equipment operator (a subcontractor). Material that is generated by decontamination procedures will be drummed and properly disposed of.

6.1 Personnel Decontamination

Personnel may become contaminated in a number of ways including, not limited to:

- Contacting vapors, gases, mists, or particulates in the air
- Being splashed by materials during sampling
- Walking through puddles or on contaminated soil
- Using contaminated instruments or equipment.

Even with safeguards, personnel contamination may occur. Harmful materials can be transferred into the clean area, exposing unprotected personnel. In removing contaminated clothing, personnel may contact contaminants on clothing or inhale them. To prevent such occurrences, decontamination procedures must be developed and established before anyone enters the site and must continue throughout site operations.

Personnel decontamination procedures will be based on the contaminants of concern and the level of protection being worn by site personnel.

6.2 Sampling Equipment

Sampling devices, when used onsite, require special cleaning procedures (Table 6-1).

6.3 Equipment Decontamination

Heavy equipment will be decontaminated by the operator/subcontractor.

6.4 Disposal of Contaminated Materials

All materials and equipment used for decontamination must be disposed of properly (Table 6-1).

6.5 Emergency Decontamination

Personnel with medical problems or injuries may also require decontamination. There is the possibility that the decontamination may aggravate or cause more serious health effects. If prompt lifesaving, first aid, and medical treatment are required, decontamination procedures will be omitted. In either case, a member of the site

management team will accompany contaminated personnel to the medical facility to advise on matters involving decontamination.

6.6 Sanitizing of Personal Protective Equipment

Respirators, reusable protective clothing, and other personal articles not only must be decontaminated before being reused, but also sanitized. The insides of masks and clothing become soiled due to exhalation, body oils, and perspiration. Manufacturer's instructions should be used to sanitize the respirator masks. If practical, reusable protective clothing should be machine-washed after a thorough decontamination; otherwise, it must be cleaned by hand.

Table 6-1 Decontamination Procedures

Level C: Segregated equipment drop, boot cover and glove wash, boot cover and glove rinse, boot cover removal, outer glove removal, suit/safety boot wash, suit/safety boot rinse, (canister or mask change), safety boot removal, splash suit removal, inner glove wash, face piece removal, inner glove removal, inner clothing removal, field wash, re-dress. Modifications :
Level D: Segregated equipment drop, boot and glove wash, boot and glove rinse, or dispose of gloves.
Modifications: Personal Floatation Device (PFD) for work over water
Sampling Equipment:
Heavy Equipment Decontamination:
Decontamination Disposal Procedures:
Emergency Decontamination Equipment Procedures:

7 Emergency Response/Contingency Plan

The SSO is responsible for emergency contingency planning and as such, is responsible for:

Posting emergency telephone numbers and route to the hospital in the field

- Conducting a weekly inventory of site emergency equipment, spill response and supplies
- Familiarizing themselves with emergency procedures for personnel injury or suspected overexposures, fires, explosions or releases
- Identifying the names of all personnel on site who are certified in CPR and first aid
- Briefing new employees on the emergency response plan before they perform fieldwork.

7.1 Emergency Equipment and Supplies

The following emergency equipment and supplies will be available on site during days with field sampling:

- Fire extinguishers;
- Industrial first aid kit; and
- Eye wash.

7.2 Emergency Recognition and Prevention

Prevention of emergencies will be aided by the effective implementation of the health and safety procedures specified in this Site-Specific Health and Safety Plan. The following hazards which could lead to emergency situations have been identified as being potentially present during the course of field activities:

- Drowning or other water accidents when working from barges or vessels;
- Traumatic injury from heavy equipment accidents, rusty or sharp demolition debris, and/or falling into holes or trenches; and
- Exposure to harmful chemical dusts and vapors.

7.3 Emergency Medical Treatment and First Aid

Prevent further injury, perform appropriate decontamination and notify the SSO.

Depending upon the type and severity of the injury, the SSO will call 911 for an ambulance.

Notify CRETE personnel.

Prepare an incident report.

7.4 Emergency Decontamination

Personnel will be decontaminated to the extent feasible but life saving and first aid procedures take priority over decontamination efforts. Workers shall grossly decontaminate the injured person.

7.5 Evacuation Routes and Procedures

In case of emergencies, evacuation routes will be designated. Personnel will exit the site and assemble at the designated point in the support zone. The SSO will account for personnel at the on site assembly point and notify local emergency responders. The SSO will assess the need for site evacuation based on the degree of hazard posed to personnel in the support zone.

Evacuation routes will be determined on a site-by-site basis. Elements that will be considered in the selection of the route include: wind direction, obstructions, topography, and type of emergency. Assembly Points will be determined, as needed.

7.6 Critique of Response and Follow-up

The Project Manager or their designee will evaluate the effectiveness of the emergency response and recommend procedures for improving emergency response to the Project CIH. Follow-up activities include notification of the CRETE Project Manager within 24 hours of the injury, investigation of cause and implementation of measures to prevent reoccurrence.

8 Emergency Contacts

The initial contact by CRETE field personnel will be to the SSO. The Project Manager will provide subsequent notification to the parties listed below. If the SSO or Project Manager must be absent from the site, an assigned alternate will be responsible for establishing communications. CRETE will first notify the Seattle Police and Fire Departments by calling 911. In the event of a spill, notification will proceed in the following order:

Department of Ecology Spill Response 24 hr Emergency Line

(206) 649-7130

2. EPA Region X HQ (206) 553-1200


Emergency medical services are available at the following locations:

Haggen Family Emergency & Trauma Center 2901 Squalicum Pkwy Bellingham, Washington 360.734.5100 (See Figure 1)

The following records shall be kept on site during activities on site:

- This plan with a complete signature sheet as of that day
- Material Safety Data Sheets
- Medical approval to wear respirator and respirator fit tests
- Air monitoring data
- Daily sign-in and out log
- Copies of workers' 40-Hour or 8-Hour Refresher Hazardous Waste Site Training Certificates
- Attendance list for Site Safety Briefings

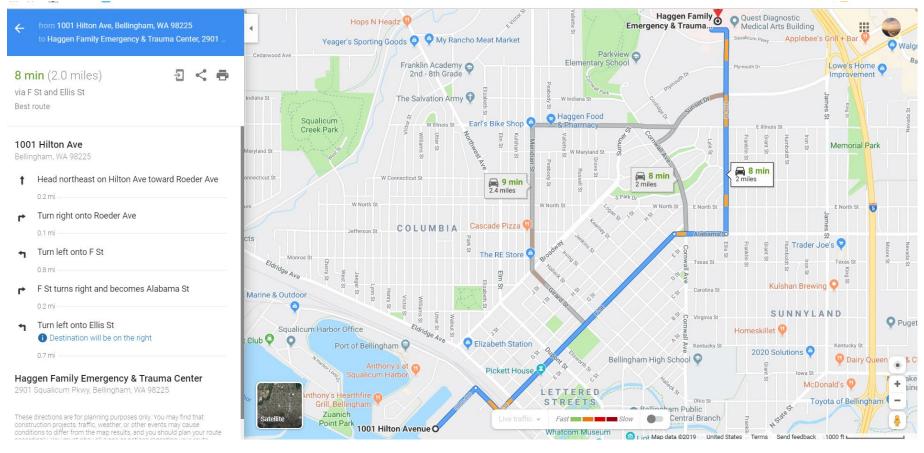Figure 1 Route to Hospital



Haggen Family Emergency & Trauma Center - 2901 Squalicum Pkwy, Bellingham, Washington 360.734.5100

9 Drum Handling

Will this	Vill this project require the handling of drummed materials?						
	No:	Yes: 🔀					

Soil cuttings, well purge/development water, and decontamination water will be drummed.

Accidents may occur during handling of drums and other investigation derived waste containers. Hazards include vapor generation and/or physical injury resulting from moving heavy containers by hand and working around drums and heavy equipment. OSHA regulations (29 CFR Parts 1910 and 1926) include general requirements and standards for storing, containing, and handling chemicals and containers, and for maintaining equipment used for handling materials. U.S. EPA regulations 40 CFR Part 265 stipulate requirements for types of containers, maintenance of containers and containment structures, and design and maintenance of storage areas. Department of Transportation (DOT) regulations (49 CFR Parts 171 through 178) also stipulate requirements for containers and procedures for shipment of hazardous waste.

- Have a dry chemical fire extinguisher on hand to control small fires.
- Check for labels, markings, etc., and note conditions of containers. Are the drums bulging, deteriorated, or leaking?
- Before moving any drum or container, determine the most appropriate sequence in which the various containers should be moved.
- Exercise extreme caution in handling drums that are not intact or tightly sealed.
- Use the following types of equipment to move drums and/or containers:
 1) drum grappler attached to a hydraulic excavator,
 2) small front-end loader with a bucket sling,
 3) rough terrain fork lift, or
 4) drum cart.
- Train personnel in proper lifting and moving techniques to prevent back injuries.
- Have over packs ready before any attempt is made to move drums.
- Pressurized drums are extremely hazardous. If possible, do not move drums that may be under internal pressure as evidenced by bulging or swelling. This is not expected because the only drums to be handled during the Remedial Investigation are those storing investigation derived waste (soil cuttings, purged groundwater, decontamination fluid).
- If a drum containing liquid cannot be moved without rupture, immediately transfer its contents to a sound drum using a pump designed for transferring the liquid.
- DO NOT use picks, chisels, or firearms to open drums.
- If pressure must be released manually, place a barrier such as explosionresistant plastic sheeting between the worker and bung to deflect any gas, liquid, or solid that may be expelled as the bung is loosened.

- Reseal open bungs and drill holes with new bungs or plugs to avoid explosions and/or vapor generation. If an open drum cannot be resealed, place the drum into an over pack. Plug any opening in pressurizing drums with pressure venting caps set for 5 psi.
- Cover drum tops with plastic sheeting or other suitable non-chlorinated material to avoid excessive contact with drum tops.
- Never stand on drum tops.

10 Drilling Safety

Will this project require the use of a drill or direct push equipment rig for well installation and/or subsurface sampling?

No:	Yes: 🔀

Accidents may occur during drilling activities. Hazards include subsurface and overhead utilities, heavy machinery, heavy falling objects, slip/trip/fall, and potential flying debris. Prior to mobilization, the Project Manager should receive confirmation from the contractors that all personnel meet the following requirements:

- Personnel are 40-Hour OSHA trained.
- Personnel are current with 8-Hour Annual Refresher Training.
- Personnel are enrolled in a medical monitoring program.
- Personnel have been successfully fit-tested within the last 12 months.
- Personnel are trained in drill rig safe operating practices.
- Personnel are trained in First Aid/CPR.

Every drill crew should have a designated safety supervisor who has authority to enforce safety on the drilling site.

The drilling operator is responsible for making sure the drilling activities are conducted in a safe manner and that the operators are wearing appropriate PPE, are familiar with the Site and with emergency procedures, and are cognizant of safe operating methods for their equipment.

Appendix A Site Safety Plan Acknowledgment Form

Site Safety Plan Acknowledgment Form

I have been informed, underst	tand, and will abide by all th	ne procedures and protocols
set forth in this Site Health and	d Safety Plan for the	site.

Name (Print)	Signature Affiliation	n	Date

Appendix B
Visitor Sign-In Log

Visitor Sign-In Log

Date Na	ame	Affiliation	Purpose of Visit	Site EHS Training		Do you have Level D PPE?		Time In	Time Out
				Yes N	lo	Yes	No		

Appendix C Site Safety/Tailgate Meeting Form

Our behavior-based safety process is the key to our success!

Site Safety/Tailgate Meeting Form

Project Name:	Time:					
Date:						
Project Number:	Instructor:					
Safety Topi	ics Presented					
JHA:						
Lessons Learned:						
General Safety Topics:						
Name Attend	ee's Signature					
Name Attend	ee's Signature					

Appendix D
Notification of Access to Employee
Exposure and Medical Records

Notice

To All Em ployees: This Notice Is to Provide Information for Compliance with 29 CFR Part 1910 Subpart C - General Safety and Health Provisions - Paragraph 1910.1020, Access to Employee Exposure and Medical Records.

(i) The existence, location, and availability of any records covered by this section is as follows:

CRETE Consulting, Inc.

16300 Christiansen Road, Suite 214 Tukwila, WA PH: (253) 797-6323

Attn: Grant Hainsworth

Grant.hainsworth@creteconsulting.com

- (ii) The person responsible for maintaining and providing access to these records is CRETE's Environmental Health and Safety Manager.
- (iii) Each employee has the right to access these records.

D-1

Appendix E Material Safety Data Sheets

Appendix F Job Hazard Analysis Forms

Appendix G Cold Stress Indicators

Cold Stress

These Threshold Limit Values (TLVs) are intended to protect workers from the severe effects of cold stress (hypothermia) and cold injury and to describe exposures to cold working conditions under which it is believed that nearly all workers can be repeatedly exposed without adverse health effects. The TLV objective is to prevent the deep body core temperature from falling below 36°C and to prevent cold injury to body extremities. Deep body temperature is the core temperature of the body as determined by rectal temperature measurements. For a single, occasional exposure to a cold environment, a drop in core temperature to no lower than 35°C should be permitted. In addition to provisions for total body protection, TLV objective is to protect all parts of the body, with emphasis on hands, feet, and head, from cold injury.

Introduction

Fatal exposures to cold among workers have almost always resulted from accidental exposures involving failure to escape from low environmental air temperatures or from immersion in low temperature water. The single most important aspect of life-threatening hypothermia is the fall in the deep core temperature of the body. The clinical presentations of victims of hypothermia are shown in Table 1 (taken from Dembert in AFP, January 1982). Workmen should be protected from exposure to cold so that the deep core temperature does not fall below 36°C (96.8°F); lower body temperatures will very likely result in reduced mental alertness, reduction in rational decision-making, or loss of consciousness with the threat of fatal consequences.

Pain in the extremities may be the first early warning of danger to cold stress. During exposure to cold, maximum severe shivering develops when the body temperature has fallen to 35°C (95°F). This must be taken as a sign of danger to the workers and exposure to cold should be immediately terminated for any workers when severe shivering becomes evident. Useful physical or mental work is limited when severe shivering occurs.

Since prolonged exposure to cold air or to immersion in cold water in temperatures well above freezing can lead to dangerous hypothermia, whole body protection must be provided.

- 1. Adequate insulating clothing to maintain core temperatures above 36°C must be provided to workers if work is performed in air temperatures below 4°C (40°F). Wind chill factor¹ or the cooling power of the air is a critical factor. An equivalent chill temperature chart relating the actual dry bulb air temperature and the wind velocity is presented in Table 2. The equivalent chill temperatures on exposed skin are determined by estimating the combined cooling effect of wind and low air temperatures.
- 2. Unless there are unusual or extenuating circumstances, cold injury to other than hands, feet, and head is not likely to occur without the development of the initial signs of hypothermia. Older workers or workers with circulatory problems require special precautionary protection against cold injury. The use of extra insulating

¹ Wind chill factor is a unit of heat loss from a body defined in watts per meter squared per hour being a function of the air temperature and wind velocity upon the exposed body.

clothing and/or a reduction in the duration of the exposure period are among the special precautions, which should be considered. The precautionary action to be taken will depend upon the physical condition of the worker and should be determined with the advice of a physician with knowledge of the cold stress factors and the medical condition of the worker.

Evaluation and Control

For exposed skin, continuous exposure should not be permitted when the air speed and temperature result in an equivalent chill temperature of -32°C (-25°F). Superficial or deep local tissue freezing will occur only at temperatures below -1°C regardless of wind speed.

At air temperatures of 2°C (35.6°F) or less, it is imperative that workers who become immersed in water or whose clothing becomes wet be immediately provided a change of clothing and be treated for hypothermia.

Table 1 Progress Clinical Presentations of Hypothermia²

Core Temperature		Clinical Signs				
°C °F						
37.6	99.6	"Normal" rectal temperature				
37.0	98.6	"Normal" oral temperature				
36.0	96.8	Metabolic rate increases in an attempt to compensate for heat loss				
35.0	95.0	Maximum shivering				
34.0	93.2	Victim conscious and responsive, with normal blood				
33.0	91.4	Severe hypothermia below this temperature				
32.0	89.6	Consciousness clouded; blood pressure becomes difficult to obtain; pupils dilated but				
31.0	87.8	react to light; shivering ceases				
30.0	86.0	Progressive loss of consciousness; muscular rigidity increases; pulse and blood				
29.0	84.2	pressure difficult to obtain; respiratory rate decreases				
28.0	82.4	Ventricular fibrillation possible with myocardial irritability				
27.0	80.6	Voluntary motion ceases; pupils non-reactive to light; deep tendon and superficial reflexes absent				
26.0	78.8	Victim seldom conscious				
25.0	77.0	Ventricular fibrillation may occur spontaneously				
24.0	75.2	Pulmonary edema				
22.0	71.6	Maximum risk of ventricular fibrillation				
21.0	69.8	IVIAXIITIUTIT TISK OT VETILITCUIAI TIDITIIAUOTI				
20.0	68.0	Cardiac standstill				
18.0	64.4	Lowest accidental hypothermia victim to recover				
17.0	62.6	Isoelectric electroencephalogram				
9.0	48.2	Lowest artificially cooled hypothermia patient to recover				

_

² Presentations approximately related to core temperature. Reprinted from the January 1982 issue of American Family Physician published by the American Academy of Fandly Physicians.

Table 2 Cooling Power of Wind on Exposed Flesh Expressed as Equivalent Temperature (under calm conditions)

	Actual Temperature Reading (°F)											
Est. Wind Speed (mph)	50	40	30	20	10	0	-10	-20	-30	-40	-50	-60
opood (iiipii)					Equiva	alent Chill	Temperat	ure (°F)	_			
Calm	50	40	30	20	10	0	-10	-20	-30	-40	-50	-60
5	48	37	27	16	6	-5	-15	-26	-36	-47	-57	-68
10	40	28	16	4	-9	-24	-33	-46	-58	-70	-83	-95
15	36	22	9	-5	-18	-32	-45	-58	-72	-85	-99	-112
20	32	18	4	-10	-25	-39	-53	-67	-82	-96	-110	-131
25	30	16	0	-15	-29	-44	-59	-74	-88	-104	-118	-133
30	28	13	-2	-18	-33	-48	-63	-79	-94	-109	-125	-140
35	27	11	-4	-20	-35	-51	-67	-82	-98	-113	-129	-145
40	26	10	-6	-21	-37	-53	-69	-85	-100	-116	-132	-148
(Wind speeds greater than 40 mph have little additional	Little Danger In < 1 hr. with dry skin. Maximum danger of false sense of security.			Dange	reasing Da er from free ed flesh wit minute.	zing of	ing of Flesh may freeze within 30				ds.	
effect).			T	rench foot a	and immer	sion foot m	ay occur a	t any point	on this cha	nrt.		

Note:

Developed by U.S. Army Research Institute of Environmental Medicine, Natick, MA.

Recommended limits for properly clothed workers for periods of work at temperatures below freezing are shown in Table 3. Special protection of the hands is required to maintain manual dexterity for the prevention of accidents:

1. If fine work is to be performed with bare hands for more than 10 to 20 minutes in an environment below 16°C (60°F), special provisions should be established for keeping the workers' hands warm. For this purpose, warm air jets, radiant heaters (fuel burner or electric radiator), or contact warm plates may be utilized. Metal handles of tools and control bars shall be covered by thermal insulating material at temperatures below -1°C (30°F).

To prevent contact frostbite, the workers should wear anti-contact gloves.

- 1. When cold surfaces below -7°C (20°F) are within reach, a warning should be given to each worker by his supervisor to prevent inadvertent contact by skin.
- 2. If the air temperature is -17.5°C (9°F) or less, the hands should be protected by mittens. Machine controls and tools for use in cold conditions should be designed so that they can be handled without removing the mittens.

Provisions for additional total body protection are required if work is performed in an environment at or below 4°C (40°F). The workers shall wear cold protective clothing appropriate for the level of cold and physical activity:

- 1. If the air velocity at the job site is increased by wind, draft, or artificial ventilating equipment, the cooling effect of the wind shall be reduced by shielding the work area, or by wearing an easily removable outer windbreak layer garment. Wind chill cooling rates are illustrated in Table 4.
- 2. If only light work is involved and if the clothing on the worker may become wet on the job site, the outer layer of the clothing used may be of a type impermeable to water. With more severe work under such conditions, the outer layer should be water repellent and the outerwear should be changed as it becomes wet. The outer garments must include provisions for easy ventilation in order to prevent wetting of inner layers by sweat. If work is done at normal temperatures or in a hot environment before entering the cold area, and the clothing is wet, the employee shall change into dry clothes before entering the cold area. The workers shall change socks and any removable felt insoles at regular daily intervals or use vapor barrier boots. The optimal frequency of change shall be determined empirically and will vary individually and according to the type shoe worn and how much the individual's feet sweat.
- 3. If extremities (ears, toes, and nose) cannot be protected sufficiently to prevent sensation of excessive cold or frostbite by handwear, footwear, and facemasks, these protective items shall be supplied in auxiliary heated versions.

- 4. If the available clothing does not give adequate protection to prevent hypothermia or frostbite, work shall be modified or suspended until adequate clothing is made available or until weather conditions improve.
- 5. Workers handling evaporative liquid (gasoline, alcohol, or cleaning fluids) at air temperature below 4°C (40°F) shall take special precautions to avoid soaking of clothing or gloves with the liquids because of the added danger of cold injury due to evaporative cooling. Special note should be taken of the particularly acute effects of splashes of "cryogenic fluids" or those liquids with a boiling point only just above ambient temperatures.

Table 3 Threshold Limit Values Work/Warm-up Schedule for Four-Hour Shift

Air Temp –	Sunny Sky		ticeable ind	5 mph	n Wind	10 mp	h Wind	15 mph Wind		20 mph Wind		
°C °F		Max. Work Period (min.)	No. of Breaks	Max. Work Period (min.)	No. of Breaks	Max. Work Period (min.)	No. of Breaks	Max. Work Period (min.)	No. of Breaks	Max. Work Period (min.)	No. of Breaks	
-26° to -28°	-15° to -1°	Normal	Breaks	Normal Breaks		75	2	55	3	40	4	
-29° to -31°	-20° to -24°	Normal	Breaks	75	2	55	3	40	4	30	5	
-32° to -34°	-25° to -29°	75	2	55	3	40	4	30	5	Non-emergency		
-35° to -37°	-30° to -34°	55	3	40	4	30	5		Non-emergency		work should cease	
-38° to -39°	-35° to -39°	40	4	30	5		ergency	rgency work should cease				
-40° to -42°	-40° to -44°	30	5		ergency	work should cease						
-43° & below	-45° & below		ergency uld cease	work sho	uld cease							

Notes:

- 1. Schedule applies to moderate-to-heavy work activity with warm-up breaks of ten (10) minutes in a warm location. For light-to-moderate work (limited physical movement): apply the schedule one step lower. For example, at 30°F with no noticeable wind (Step 4), a worker at a job with little physical movement should have a maximum work period of 40 minutes with 4 breaks in a 4-hour period (5).
- 2. The following is suggested as a guide for estimating wind velocity if accurate information is not available: 5 mph light flag moves; 10 mph light flag fully extended; 15 mph raises newspaper sheet; 20 mph blowing and drifting snow.
- 3. If only the wind chill cooling rate is available, a rough rule of thumb for applying it rather than the temperature and wind velocity factors given above would be:
 - (1) special warm-up breaks should be initiated at a wind chill of about 1720 Wm/2
 - (2) all non-emergency work should have ceased at or before a wind chill of 2250 W/m2.

In general, the warm-up schedule provided above slightly under-compensates for the wind at the warmer temperatures, assuming acclimatization and clothing appropriate for winter work. On the other hand, the chart slightly over-compensates for the actual temperatures in the colder ranges, since windy conditions rarely prevail at extremely low temperatures.

Adapted from Occupational Health & Safety Division, Saskatchewan Department of Labor.

Table 4 Wind Chill Cooling Rate Effects*

Wind Chill Rates (Watts/m³)	Comments/Effects
700	Conditions considered comfortable when dressed skiing.
1200	Conditions no longer pleasant for outdoor activities on overcast days.
1400	Conditions no longer pleasant for outdoor activities on sunny days.
1600	Freezing of exposed skin begins for most people depending on the degree of activity and the amount of sunshine.
2300	Conditions for outdoor travel such as walking become dangerous. Exposed areas of the face freeze in less than 1 minute for the average person.
2700	Exposed flesh will freeze within half a minute for the average person.

^{*}Adapted from Canadian Department of the Environment, Atmospheric Environment Service.

Work-Warming Regimen

If work is performed continuously in the cold at an equivalent chill temperature (ECT) or below -7°C (20°F), heated warming shelters (tents, cabins, rest rooms, etc.) shall be made available nearby and the workers should be encouraged to use these shelters at regular intervals, the frequency depending on the severity of the environmental exposure. The onset of heavy shivering, frostbite, the feeling of excessive fatigue, drowsiness, irritability, or euphoria are indications for the immediate return to the shelter. When entering the heated shelter, the outer layer of clothing shall be removed and the remainder of the clothing loosened to permit sweat evaporation. Also, a change of dry work clothing may be provided. A change of dry work clothing shall be provided as necessary to prevent workers from returning to their work with wet clothing. Dehydration, or the loss of body fluids, occurs insidiously in the cold environment and may increase the susceptibility of the worker to cold injury due to a significant change in blood flow to the extremities. Warm sweet drinks and soups should be provided at the work site to provide caloric intake and fluid volume. The intake of coffee should be limited because of the diuretic and circulatory effects.

For work practices at or below -12°C (10°F) ECT, the following shall apply:

- 1. The worker shall be under constant protective observation (buddy system or supervision).
- 2. The work rate should not be so high as to cause heavy sweating that will result in wet clothing; if heavy work must be done, rest periods must be taken in heated shelters and opportunity for changing into dry clothing shall be provided.
- 3. New employees shall not be required to work full time in cold in the first days until they become accustomed to the working conditions and required protective clothing.

- 4. The weight and bulkiness of clothing shall be included in estimating the required work performance and weights to be lifted by the worker.
- 5. The work shall be arranged in such a way that sitting still or standing still for long periods is minimized. Unprotected metal chair seats shall not be used. The worker should be protected from drafts to the greatest extent possible.
- 6. The workers shall be instructed in safety and health procedures. The training program shall include, at a minimum, instruction in:
 - a) Proper re-warming procedures and appropriate first aid treatment
 - b) Proper clothing practices
 - c) Proper eating and drinking habits
 - d) Recognition of impending frostbite
 - e) Recognition of signs and symptoms of impending hypothermia or excessive cooling of body even when shivering does not occur
 - f) Safe work practices

Special Workplace Recommendations

Special design requirements for refrigerator rooms include the following:

- 1. In refrigerator rooms, the air velocity should be minimized as much as possible and should not exceed 1 meter per second (200 fpm) at the job site. This can be achieved by properly designed air distribution systems.
- 2. Special wind-protective clothing shall be provided based upon existing air velocities to which workers are exposed.

Special caution shall be exercised when working with toxic substances and when workers are exposed to vibration. Cold exposure may require reduced exposure limits.

Eye protection for workers employed outdoors in a snow and/or ice-covered terrain shall be supplied. Special safety goggles to protect against ultraviolet light and glare (which can produce temporary conjunctivitis and/or temporary loss of vision) and blowing ice crystals are required when there is an expanse of snow coverage causing a potential eye exposure hazard.

Workplace Monitoring is Required as Follows:

1. Suitable thermometry should be arranged at any workplace where the environmental temperature is below 16°C (60°F) to enable overall compliance with the requirements of the TLV to be maintained.

- 2. Whenever the air temperature at a workplace falls below -1°C (30°F), the dry bulb temperature should be measured and recorded at least every 4 hours.
- 3. In an indoor workplace, the wind speed should also be recorded at least every 2 hours whenever the rate of air movement exceeds 2 meters per second (5 miles per hour).
- 4. In an outdoor work situation, the wind speed should be measured and recorded together with the air temperature whenever the air temperature is below -1°C (30°F).
- 5. The equivalent chill temperature shall be recorded with the other data whenever the equivalent chill temperature is below -7°C (20°F).

Employees shall be excluded from work in cold at -1°C (30°F) or below if they are suffering from diseases or taking medication, which interferes with normal body temperature regulation or reduces tolerance to work in cold environments. Workers who are routinely exposed to temperatures below -24°C (-10°F) with wind speeds less than 5 miles per hour should be medically certified as suitable for such exposures.

Trauma sustained in freezing or subzero conditions requires special attention because an injured worker is predisposed to secondary cold injury. Special provisions must be made to prevent hypothermia and secondary freezing of damaged tissues, in addition to providing first aid treatment.